



Warranty

THIS WARRANTY IS VALID IN AUSTRALIA AND NEW ZEALAND ONLY.

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that effects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service Team.

CUSTOMER SERVICE

1300 303 330 - Australia

0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

This warranty does not apply to a high chair used for commercial purposes.

Your new product has been manufactured to comply with the ASTM F977-09

Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

©2010 Copyright Britax Childcare Pty. Ltd. Australia

INSTRUCTION MANUAL



Zoom Baby Walker

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE



Art No.4001008_D



Series WM-2112US

WARNINGS

RETAIN FOR FUTURE REFERENCE.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS WALKER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

SAFETY WARNINGS

**STAIR HAZARD AVOID SERIOUS INJURY OR DEATH.
BLOCK STAIRS/STEPS SECURELY BEFORE USING THE WALKER.**

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT USE WALKER UNTIL BABY CAN SIT UP BY ITSELF.
- NEVER LEAVE YOUR CHILD UNATTENDED, ALWAYS KEEP YOUR CHILD IN VIEW WHILST IN THE WALKER.
- TO PREVENT INJURIES, ALWAYS ENSURE THE CHILD IS WELL CLEAR OF ANY MOVING PARTS WHEN FOLDING OR UNFOLDING THE BABY WALKER.
- NEVER ADJUST OR CARRY THE WALKER WITH THE CHILD IN IT.
- ENSURE THAT THE CHILD CAN TOUCH THE FLOOR WITH BOTH FEET, AFTER ADJUSTING THE HEIGHT OF THE WALKER.
- DOUBLE CHECK ASSEMBLY BEFORE USING THE BABY WALKER.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
- Use only on flat surfaces free of objects that could cause the walker to tip over.
- Clean grip pads regularly to maintain stopping performance.

CARE AND MAINTENANCE

- To prolong the life of your walker keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- DO NOT DRY CLEAN, OR USE BLEACH.
- Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- Remove batteries before storing for a prolonged period of time. Check the condition of batteries periodically for fluid leakage. Do not use the walker if batteries are leaking.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

 **WARNING CLEAN SAFETY GRIP PADS REGULARLY, USING WARM WATER WITH A HOUSEHOLD SOAP OR MILD DETERGENT TO MAINTAIN STOPPING PERFORMANCE.**

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

05. TO FOLD THE WALKER

- A** Support the upper tray with one hand. Locate the two safety adjusting locks underneath the tray. Push the red lever upwards and at the same time press the white lever in. Hold together and slowly lower the walker completely down to folded position.



WARNINGS CONTINUED

WARNINGS

- Do not allow children to stand on the seat.
- The baby walker should not be used by children who can walk unaided.
- Discontinue use of the walker should any part become damaged or broken.
- Do not store outdoors.
- Do not leave your child exposed to the sun.
- If used on carpets, the safety grip pads may reduce the walker speed.
- Do not use accessories other than those tested and approved by Britax.
- The weight of the child using this product should be less than 13kg and the height should be 81cm, or less.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



A 1 x Frame



B 1 x Padded Seat



C 2 x Front Swivel Wheels




D 1 x Toy Tray

! WARNING: REMOVE THE CHILD FROM THE WALKER BEFORE ADJUSTING THE HEIGHT. NEVER ADJUST THE HEIGHT WHILE THE WALKER IS OCCUPIED.

NOTE: There are three seat height positions. Follow these instructions carefully to avoid the upper plate falling down onto your hand.

To adjust the seat height from the highest position to a lower position.

- A Support the upper tray with one hand. Locate the two safety adjusting locks underneath the tray. Push the red lever upwards and at the same time press the white lever in, the tray will begin to lower. Let go of both locks and allow the tray to SLOWLY lock into a lower position. Press down LIGHTLY on the upper tray to confirm it is locked into place.

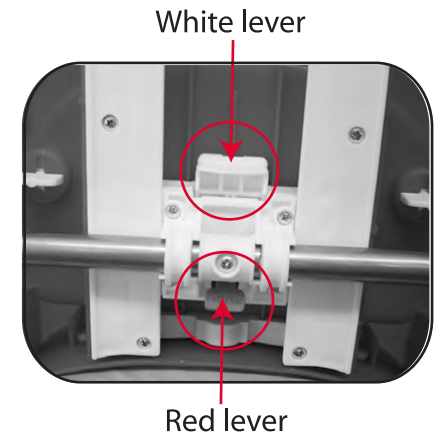

03. TO ASSEMBLE AND INSTALL THE TOY TRAY (Cont)

- C Position the toy tray on top of the upper tray as shown and lay it down flat.




- D Hold the toy tray down with one hand. Then from underneath the upper tray, push the white locking pins up into the toy tray slots and turn to the right to lock into place.




- E To remove, turn the locking pins to the left so they are in the vertical position and lift the toy tray off the upper tray.

01. TO ASSEMBLE THE WALKER

- A Turn the frame upside down and insert the end of the swivel wheel posts all the way into the holes located in each corner at the front of the walker base.

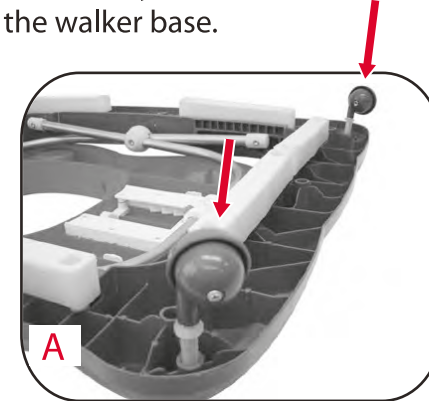

WARNING CLEAN SAFETY GRIP PADS REGULARLY, USING WARM WATER WITH A HOUSEHOLD SOAP OR MILD DETERGENT TO MAINTAIN STOPPING PERFORMANCE.

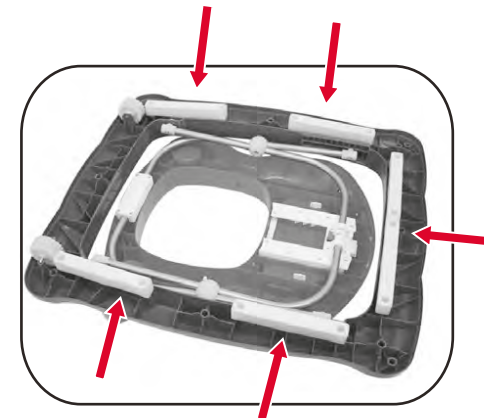

01. TO ASSEMBLE THE WALKER

- B** Turn walker right side up. Position one hand underneath the top edge of the tray, and the other hand on the top of the outer base of the frame.





- C** Raise the tray into the highest position by lifting the tray slowly while holding down the base until you hear the tray lock into position.





03. TO ASSEMBLE AND INSTALL THE TOY TRAY

- A** To assemble the toy tray, insert the rainbow toy bar into the holes on the toy tray and push down until they lock into place.

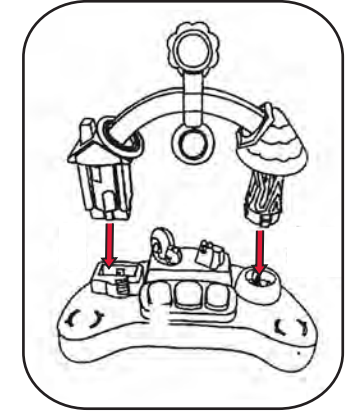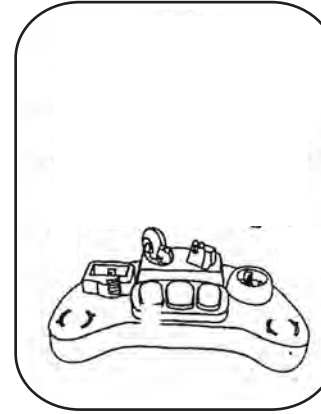

- B** Position the butterfly and octopus toys over the slots in the toy tray and insert the tabs on the toys into the slots on the tray and turn them in a clockwise direction until they lock into place.

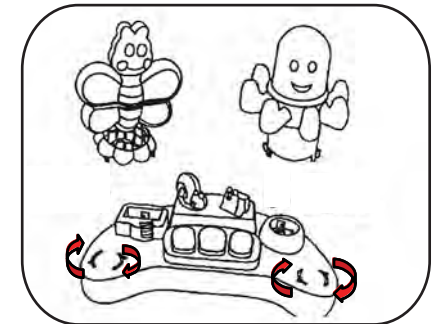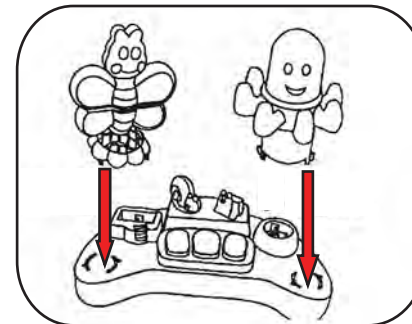

02. TO INSTALL THE BATTERIES (Cont)

- A** To insert the batteries, locate the battery housing underneath the toy tray. Unscrew the screw on battery cover and insert 2“AA” batteries observing the correct positive and negative positions. Refit the battery cover and then insert the screw to secure in place. Test correct installation by turning over and pressing the light and sound buttons.



! IMPORTANT: NEVER REPLACE BATTERIES WHILE THE WALKER IS OCCUPIED.

01. TO ASSEMBLE THE WALKER (Cont)

- D** Position the seat pad into the upper tray cavity. Attach the seat pad to the rear of the frame by locating the six plastic pins on the back of the seat pad over the holes. Slide each pin into the holes and lock into position. Make sure all six pins are locked into position by pulling up on the seat pad to confirm. Repeat steps if not locked onto the frame.



01. TO ASSEMBLE THE WALKER (Cont)

- E** Attach the seat pad to the front section of the frame by locating the four plastic pins on the front of of the seat pad over the holes at the front of the walker. One at a time, insert each plastic pin into the hole and pull down to lock into position. Make sure all four pins are locked into position by pulling up on the seat pad to confirm. Repeat steps if not locked onto the frame.



02. TO INSTALL THE BATTERIES

! **IMPORTANT:** BATTERIES ARE NOT INCLUDED. 2 "AA" (1.5V) SIZE BATTERIES ARE REQUIRED FOR THE TOY TRAY.

! **WARNING:** DO NOT MIX USED AND NEW OR DIFFERENT (ALKALINE, CARBON-ZINC OR RECHARGEABLE: NICKEL-CADMIUM) TYPES OF BATTERIES. NON- RECHARGEABLE BATTERIES (ALKALINE AND CARBON-ZINC) TYPES OF BATTERIES CANNOT BE RECHARGED. ADULT SUPERVISION IS REQUIRED WHEN CHARGING RECHARGEABLE: NICKEL-CADMIUM BATTERIES. REMOVE THE BATTERIES AS SOON AS THEY BECOME EXHAUSTED. SUPPLY TERMINALS FOR BATTERIES ARE NOT TO BE SHORT CIRCUITED. REMOVE THE BATTERIES BEFORE STORING ROCKER FOR A PROLONGED PERIOD.

! **IMPORTANT:** USE THE APPROPRIATE SIZE PHILLIPS HEAD SCREWDRIVER TO UNSCREW THE BATTERY COVER.

