



## Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

**CUSTOMER SERVICE**  
1300 303 330 - Australia  
0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088 "Prams and Strollers - Safety Requirements".

Distributed by:

### AUSTRALIA

BRITAX CHILDCARE PTY.LTD.  
A Britax International company.  
(Incorporated in Victoria)  
A.B.N. 55 006 773 600  
99 Derby Road, Sunshine,  
Victoria 3020, Australia  
Phone: (03) 9288 7288  
Fax: (03) 9311 5798

### NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.  
A Britax International company.  
101 Diana Drive, Glenfield,  
Auckland 9, New Zealand.  
Phone: (09) 443 0102  
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.  
Visit the Britax website at: <http://www.britax.com.au> or email us at [custserv@britax.com.au](mailto:custserv@britax.com.au)

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/06 ©2006 Copyright Britax Childcare Pty. Ltd. Australia.

# INSTRUCTION MANUAL



8 Wheel Reverse Handle

KEEP INSTRUCTIONS FOR FUTURE REFERENCE



#### IMPORTANT: RETAIN FOR FUTURE REFERENCE

READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

## WARNINGS

- Do not leave children unattended.
- Follow the manufacturers instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children or bags on the stroller.
- Do not allow children to stand on the seat, the stroller may tip over.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket and 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Steelcraft.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller, otherwise they may be injured.
- Always apply all of the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.
- Use the tether strap to prevent the stroller from rolling away.
- Check that all safety locks are engaged before placing a child in the stroller.
- Always raise the leg support to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Do not lift the stroller by the bumper bar. It may disengage.
- Always lock the front swivel wheels when on uneven surfaces to minimize wheel wobble.

#### RECOMMENDATION


Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

#### SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

## 15. TO FOLD THE STROLLER

- A Move the handle to the rear of the stroller (when standing behind your child). Close the canopy, remove the boot cover, storm cover, mesh cover (if fitted), lock all brakes, and swivel wheels (with brake levers facing forward). Put the backrest into the fully reclined position.
- B Release the handle folding locks by pushing button  
B1. On the top of handle and pressing lever  
B2. On the under side of the handle.
- C Depress the safety lock located on the rear leg. Close the stroller fully until frame storage lock engages.

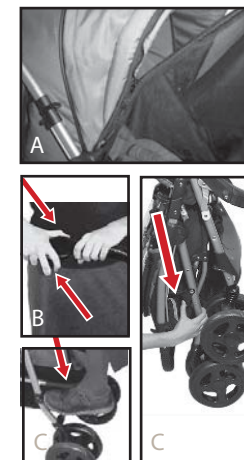

#### CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferable away from direct sunlight.

#### HELPFUL HINTS

If the wheels squeak - use a silicon based spray ensuring it penetrates the wheel axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm tyre and the compression marks should slowly disappear. (DO NOT OVERHEAT).

#### DO NOT DRY CLEAN, OR USE BLEACH

Do not machine wash, tumble or spin dry, unless the care labeling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners -tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE


 
## 12. TO FIT THE BOOT COVER

- A Raise the leg support and place the boot cover over the front of the leg support and the bumper bar.
- B Attach the upper straps to the canopy frame support tubes.



## 13. TO FIT THE STORM COVER

- A Unlock the handle position so it moves freely from either locked position on the frame.
- B Pull the storm cover over extended canopy, position large hole in storm cover over the rear handle lock. Storm cover needs to be on the inside of the handle.
- C Position the small hole in the front handle lock.
- D Attach the Velcro at underside of storm cover. The handle is now free to move and lock into either position.

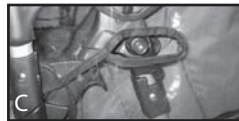


## 14. TO FIT THE MESH COVER

- A Zip the mesh cover to front of the canopy.
- B Place the elastic front over the bumper bar. Do not cover the handle lock with the mesh to prevent tearing.
- C Loop the elastic attachments over the rear handle lock.




## 1. TO OPEN THE STROLLER

- A Release the storage lock (located on the rear leg) by depressing the lock.
- B Lift the handle up until the stroller locks into the fully upright position.

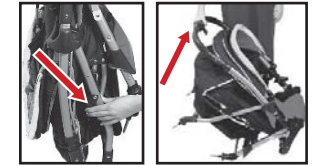

## 2. TO INSTALL THE WHEELS


- A Align a swivel wheel assembly to either the front or rear leg and push it down firmly until a click is heard.
- B Check to make sure it's securely engaged by pulling against it.
- C Repeat this process for the other swivel wheels.

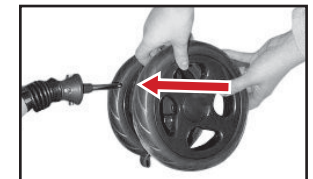

## 3. TO SECURE YOUR CHILD IN HARNESS

**WARNING: Use this harness at all times.**

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

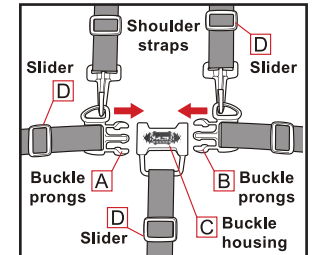

## 4. TO ADJUST THE BACKREST

- A To fully recline the backrest squeeze the adjusting bar up and lower the backrest down.
- B To raise the backrest to the fully upright position, hold the fabric on the side of the seat clear and lift the backrest up until it locks into place.



#### 5. TO ADJUST THE BUMPER BAR

- A Fully depress the side armrest buttons and slide the bumper bar out for easy access into stroller, or in to install it.




NOTE: It is recommended that the bumper bar be used at all times.

#### 6. TO USE THE SWIVEL WHEELS

- A There are four sets of swivel wheels on this product, however only use 2 sets in the unlocked swivel position. The wheels closest to your feet / handle should always be in the locked position with the brake lever facing you.



- B To lock the swivel wheels lift the locking clip up, to unlock push down.

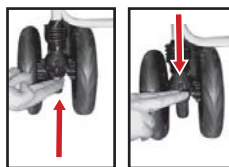

NOTE: Lock all swivel wheels whenever on uneven surfaces.

#### 7. TO USE THE BRAKE (Front and Rear)

**WARNING:** Always apply the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.

- A Push each brake lever down to lock the brakes.  
B Lift each brake lever up to release the brakes.




#### 8. TO ADJUST THE LEG SUPPORT

- A Lower the leg support by pressing the release latches located on both sides of the leg support. Then push the leg support down to the desired position.  
B Raise the leg support by lifting it up until latches lock into the desired position.




#### 9. TO REVERSE THE HANDLE

- A Lift the finger grips on each side of the handle to release it for forward or reverse positioning. Ensure that both sides are fully locked before using the stroller.

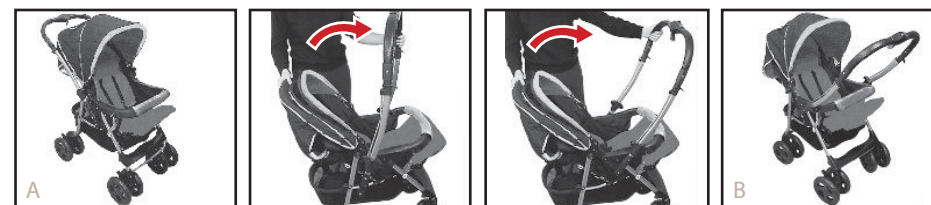

#### 10. TO ADJUST THE CANOPY

- A Adjust the canopy studs to the attachments on the seat back. Open the canopy by pulling the canopy forward or close it by pushing the canopy back.

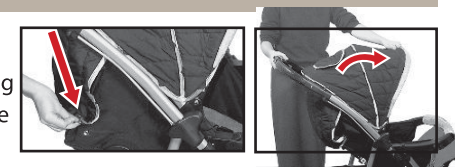

#### 11. USING THE TETHER STRAP

**WARNING:** Use the tether strap to prevent the stroller from rolling away.

NOTE: A tether strap is fitted to this stroller, place the loop over desired wrist when using the stroller.



- A Should you need to change wrist, loosen the tether strap and slide to desired side of the handle. If the tether strap is removed attach by looping over the handle. Open the end of the tether strap hanging over handle and insert the opposite end through the opening created. Pull until tether strap tightens around handle.