



IMPORTANT: RETAIN FOR FUTURE REFERENCE
READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Do not leave children unattended.
- Follow the manufacturers instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children or bags on the stroller.
- Do not allow children to stand on the seat, the stroller may tip over.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Steelcraft.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller, otherwise they may be injured.
- Always apply all of the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.
- Use the tether strap to prevent the stroller from rolling away.
- Check that all safety locks are engaged before placing a child in the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Do not lift the stroller by the bumper bar. It may disengage.
- Always lock swivel wheel when on rough surfaces this will help eliminate wheel wobble.

RECOMMENDATION

Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

CARE AND MAINTENANCE

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

HELPFUL HINTS

If the wheels squeak - use a silicon based spray or light oil ensuring it penetrates the wheel and axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. **(DO NOT OVERHEAT).**

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labeling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.


THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



4. TO USE THE BRAKES

WARNING: Always apply the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.


- A Push down on each brake lever to lock the brakes.
- B Lift each brake lever up to release the brakes.

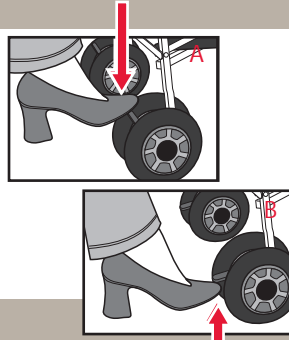

5. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

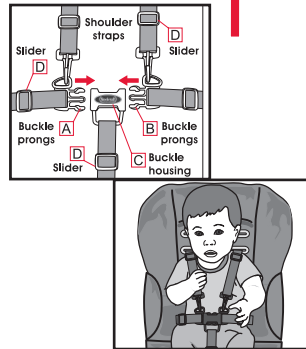

6. USING THE TETHER STRAP

WARNING: Use the tether strap to prevent the stroller from rolling away.

NOTE: A tether strap is fitted to this stroller, place the loop over desired wrist when using the stroller.


- A Should you need to change wrist, remove the tether strap and apply to the other handle. To ensure a tight fit, loop the tether strap around rather than over the handle. Open the end of the tether strap and insert the opposite end through the opening created. Pull until tether strap tightens around handle.



NOTE: Fit the strap below the frame support bar so that it does not slide off the handle.

7. TO ADJUST THE LEG SUPPORT

- A Lower the leg support by pressing up the release latches located underneath on both sides of the leg support. Then push the leg support down.
- B Raise the leg support by lifting it until the release latches lock into place.

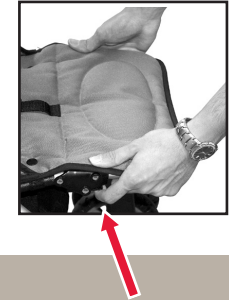

8. TO ADJUST THE BACKREST

- A Squeeze both the right hand and left hand latches fully and pull them back towards the rear of the stroller to the desired layback position.
- B Lift the backrest to select a more upright seating position.

DO NOT ADJUST THE BACKREST WHILE YOUR CHILD IS IN THE STROLLER.

