



Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE
1300 303 330 - Australia
0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/09 ©2009 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL



SERENITY Rocker with toys

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE



READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNING THE CHILD SHOULD BE SECURED IN THE ROCKER AT ALL TIMES WITH THE CROTCH STRAP. NEVER USE LAP BELT ONLY.

WARNINGS

- Follow the manufacturer's instructions.
- Never leave your child unattended, direct adult supervision is required at all times.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the harness at all times.
- The weight of the child using this product should not exceed 9kg.
- Do not use accessories other than those supplied and approved by Britax.
- Remove your child from the rocker before moving or transporting.
- When making adjustments to the rocker, always ensure that your child's body is clear of moving parts.
- To prevent the risk of the rocker catching fire, do not place it near a radiator, an open fire or a barbecue.
- Do not place it near loose cords or cables.
- Do not use this rocker if any parts are damaged or broken.
- Do not use this rocker on an elevated or inclined area.
- Do not use this rocker once your child can sit unaided.
- This rocker is not intended for prolonged periods of sleeping.
- This rocker does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- Do not allow children to use the rocker as a toy or interfere with the rocker when in use.

SAFETY WARNING

THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

CARE AND MAINTENANCE

Regularly inspect and maintain your product to ensure the freedom of movements of the locking devices and security of components.

To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from direct sunlight.

HELPFUL HINT: When using your rocker at the beach, completely clean it afterwards to remove any sand or salt from the unit.

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless care labelling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould & mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only parts and accessories approved by Britax.


Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

11. TO FOLD THE ROCKER

NOTE: REMOVE THE CHILD FROM THE ROCKER BEFORE FOLDING THE ROCKER.

- A Before folding, remove the toy bar and rotate the rear static/rocking bar inside. To fold the rocker, holding the rocker at the front with your left hand, slide the button (1) across to the right and hold, then lift lever (2) up with your fingers and push the backrest forward until fully folded.

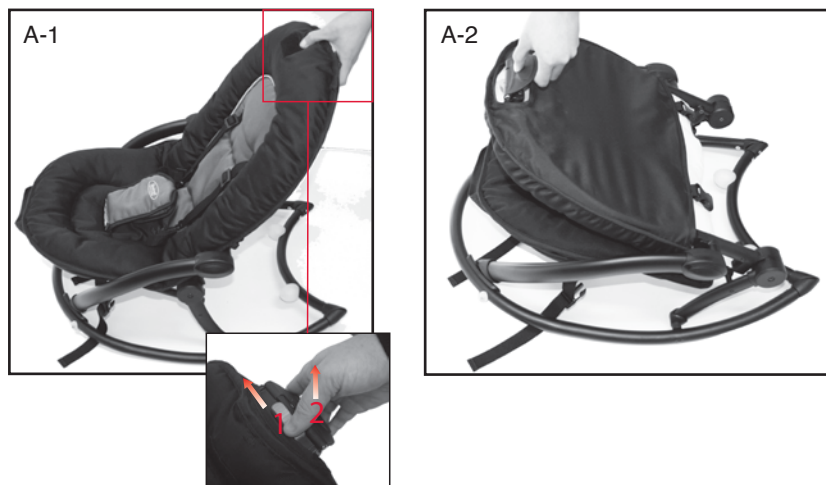

12. REMOVE THE FABRIC SEAT COVER

- A The fabric seat cover is easily removable for washing. To remove, unfasten the two safety clips from the underside of the rocker. Gently pull the seat cover from the metal frame. Remove the cover from the footrest first, then slide off the seat cover from the backrest. Place the cover back on by reversing the above process.

NOTE: THE STRAPS ON THE BACK OF THE ROCKER CAN BE ADJUSTED AS REQUIRED.

PARTS LIST

- A - Metal frame
- B - Fabric seat cover
- C - Canopy
- D - Toy bar with 3 toys
- E - Head pillow
- F - Shoulder harness pads
- G - Vibration & Sound unit




1. ATTACHING & USING THE VIBRATION & SOUND UNIT

NOTE: ATTACH THE VIBRATION & SOUND UNIT BEFORE UNFOLDING OR OPENING THE FRAME. The seat cover is not fully attached for this purpose.


Batteries are not included. You required 1 size C and 3 size AA batteries.

- A To insert the batteries, unscrew the battery lid from underside of the unit using appropriate screwdriver. Place batteries into the correct position observing the correct polarity and re-fit the battery lid.

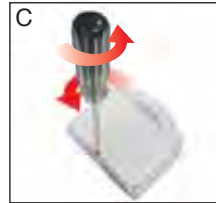


WARNING: NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. ADULT SUPERVISION IS REQUIRED WHEN CHARGING RECHARGEABLE BATTERIES. USED AND NEW OR DIFFERENT TYPES OF BATTERIES SHOULD NOT BE MIXED. REMOVE THE BATTERIES AS SOON AS THEY BECOME EXHAUSTED. SUPPLY TERMINALS FOR BATTERIES ARE NOT TO BE SHORT CIRCUITED.

- B Attach and secure the Vibration & Sound unit into the front base of the frame. Stand the frame upright and slide the Vibration and Sound unit through the runners and clicking into position as shown.

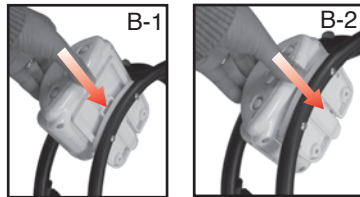


- C Now pull the front seat cover up and over the Vibration and Sound unit.

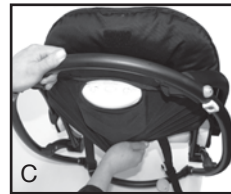


TO ADJUST THE SEAT POSITION

NOTE: GREY BUTTON ① IS A SAFETY LOCK AND LEVER ② IS THE BACKREST ADJUSTER.

- A Rotate the rear bar into the static position. To assist with backrest adjustment place one hand on the tube area.

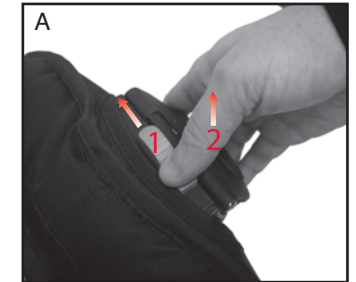


- B There are three positions for the rocker. To adjust the seat position, holding the rocker at the side with one hand, slide the button (1) across to the right and hold, then lift lever (2) and adjust the backrest up or down to the desired position. Release button and lever when in desired position.

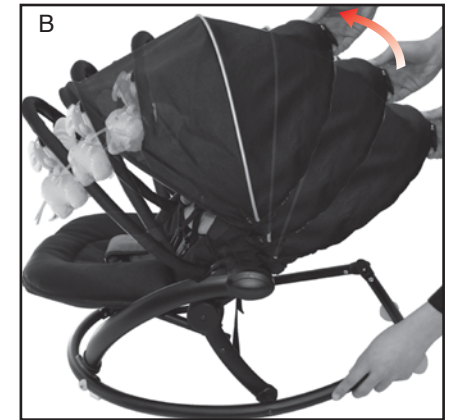

WARNING: DO NOT ADJUST THE SEAT POSITION WHEN THE CHILD IS IN THE ROCKER. ONLY PLACE THE CHILD INTO THE ROCKER ONCE THE SEAT POSITION IS SECURED.

8. TO ATTACH THE TOY BAR

- A To attach the toy bar by pushing the ends into position of both sides of the rocker as shown. To remove, simply pull it out.

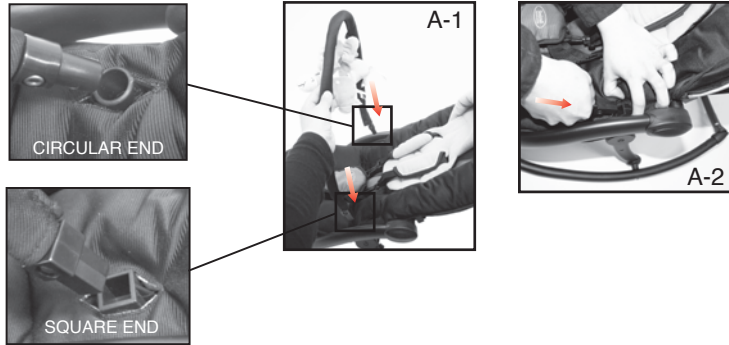

NOTE: ENSURE THAT THE CIRCULAR END IS INSERTED INTO CIRCULAR HOLE AND THE SQUARE END INTO SQUARE HOLE.

WARNING: DO NOT USE THE TOY BAR AS A HANDLE FOR LIFTING THE ROCKER.


9. TO USE THE STATIC & ROCKING MODE

- A To set the rocker into a static position, rotate the rear bar to the position as shown.
- B To set the rocker into rocking position, rotate the back bar to the position as shown.



1. ATTACHING & USING THE VIBRATION & SOUND UNIT (cont.)

- D Pull all the way down and secure the seat cover by fastening the buckles at the back of the seat

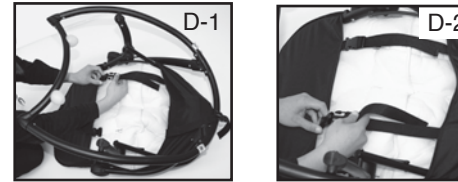


- 1: Vibration
(Left: Off, Middle: Low vibration, Right: High vibration)
- 2: Repeat
(Press to repeat sound or musical tune)
- 3: Sound
(Left: Off, Middle: Nature sound, Right: Musical tune)

The Nature sound has 4 songs and total time takes around 9 minutes.
The Music sound has 10 songs and total time takes around 12 minutes.

2. TO REMOVE THE VIBRATION AND SOUND UNIT

- A Close the rocker into the folded position. (See section 11, page 10)
- B Undo the buckles under the seat and pull the front seat cover up and over the unit.
- C Slightly lift the lever situated on the top of the unit to release the Vibration and Sound unit and slide it out of the base.

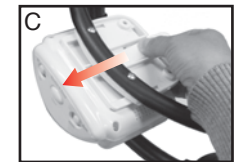

3. TO UNFOLD THE ROCKER


- A To unfold, holding the rocker at the front with one hand, simply pull the backrest backward with the other hand until fully open. You should hear a “click” sound as frame locks into position. The seat is now in the upright position.



WARNING: ENSURE THAT ALL THE LOCKING DEVICE ARE ENGAGED INTO POSITION BEFORE USE.

4. TO FIT & USE THE CANOPY

- A To fit the canopy, put the canopy over the seat, make sure that the plastic lever at the back is not covered by the canopy and then simply slide the clip into both sides as shown.
- B To remove, simply pull it out.

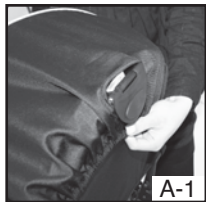

- C To use the canopy, simply push it forward or fold it back.

5. TO FIT & ADJUST HEAD PILLOW

- A Put the shoulder harness through the appropriate harness hole as shown.
- B Adjust the head pillow height by attaching the loop & hook at the back of the head pillow.



6. TO FIT THE SHOULDER HARNESS PADS


- A To fit the shoulder harness pads, push each shoulder harness through pads.



7. TO SECURE YOUR CHILD

WARNING: Use this harness at all times.

- A A five point harness is provided to restrain your child. To secure the child in the harness, push buckle prongs (A) and (B) into buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. To release the buckle, squeeze the top and bottom prongs.

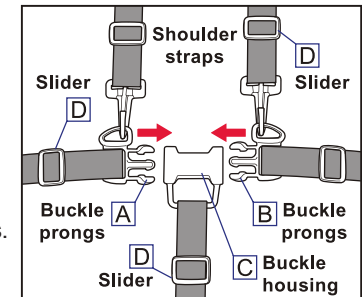

- B Put the crotch pad over the buckle housing and snap to close.

