

Steelcraft

Warranty

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any faulty material or workmanship that affects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service team.

CUSTOMER SERVICE

1300 303 330 - Australia

0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

Distributed by:

AUSTRALIA

BRITAX CHILDCARE PTY.LTD.
A Britax International company.
(Incorporated in Victoria)
A.B.N. 55 006 773 600
99 Derby Road, Sunshine,
Victoria 3020, Australia
Phone: (03) 9288 7288
Fax: (03) 9311 5798

NEW ZEALAND

BRITAX CHILDCARE NZ. Limited.
A Britax International company.
101 Diana Drive, Glenfield,
Auckland 9, New Zealand.
Phone: (09) 443 0102
Fax: (09) 443 0120

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty. Ltd-Australia.
The Britax trademark is the property of Britax Excelsior Limited - UK.
Visit the Britax website at: <http://www.britax.com.au> or email us at custserv@britax.com.au

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

12/06 © 2006 Copyright Britax Childcare Pty. Ltd. Australia.

INSTRUCTION MANUAL



THREE WHEEL Travel System

KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.



NOTES

READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Do not leave children unattended.
- Follow the manufacturer's instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children on the stroller.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Britax.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller.
- Always apply all of the brakes when parking the stroller.
- Check that all safety locks are engaged before placing a child in the stroller.
- Always raise the leg support to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near a radiator, an open fire or a barbecue.
- Always lock the front swivel wheel when on uneven surfaces to minimize wheel wobble.
- This product is not intended for jogging.



THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.





3. REMOVING THE CARRIER FROM THE STROLLER

- A Lower the stroller backrest to the full recline position.
- B Fold the carrier handle up to the carry position and grip firmly in one hand.
- C Raise the carrier release catch located on the rear of the bassinet.
- D Lift the carrier clear of the stroller.

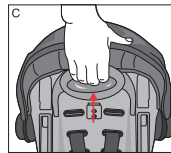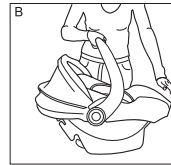

NOTE: Ensure the baby is secured in the carrier with the harness at all times. The carrier has been fitted with a hood when using with the stroller. The hood may also be used in the car.




1. TO OPEN THE STROLLER

- A Lay the chassis down flat release the frame lock catch.
- B Grasp the handle and lift upwards allowing the chassis to extend and click into position. Fold the bumper bar down to the child use position.
- C Check the Stroller is ready for use by pushing down on the handle, the Stroller should not collapse.



2. TO INSTALL REAR WHEEL ASSEMBLY

- A To attach the rear wheels pull up the wheel lock button and push the rear wheel into the axle of the assembly. Release the button and ensure the wheel is attached correctly by trying to pull it out.
- B Lower the rear wheel assembly onto the rear legs of the chassis.
- C Insert the two plastic locking clips into rear legs of the chassis and check the assembly is correctly fitted by trying to pull it out.

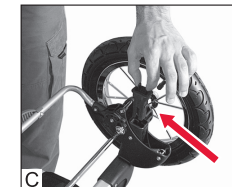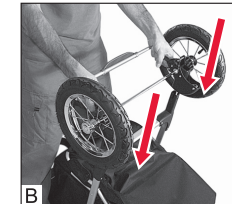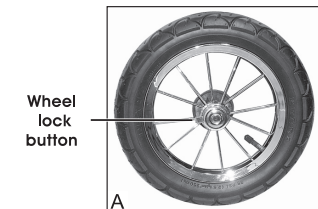


NOTE: The rear wheels and wheel assembly can be removed for more compact storage. Do this by squeezing the fingers on the plastic locking clips and removing them from the legs, allowing the assembly to be lifted off the legs. To remove the rear wheels push the wheel lock button and pull the wheel off the axle.





3. TO INSTALL THE FRONT WHEEL


- A Remove the plastic protector (where fitted) from the front forks.
- B Push the front wheel axle fully into the wheel forks.
- C Place the securing washer on both sides, ensure the tabs in the washers are located into the circular holes just above.
- D Tighten the front wheel axle by turning the quick release hub in a clockwise rotation and fold lever to lock.

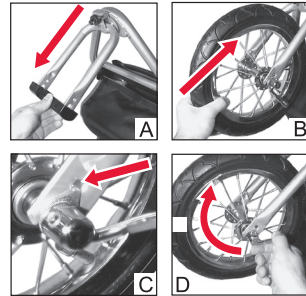

NOTE: Pneumatic Front and Rear Tyres can be inflated with pump (where supplied) or a bicycle pump or at a garage air pump and they have a maximum inflation pressure of 2.4 bar (35 p.s.i)

4. TO LOCK/UNLOCK THE FRONT SWIVEL WHEEL

- A To swivel the front wheel allowing greater mobility, rotate the knob clockwise until the rivet in the knob faces forward.
- B To lock the swivel wheel rotate the knob clockwise half a turn and move the fork until it locks into position.

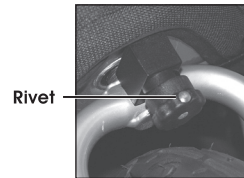

WARNING: This product is not intended for jogging.

TRAVEL SYSTEM - USE WITH UNITY CARRIER (Also referred to as bassinot)


WARNINGS

- Do not leave the child in the carrier for extended periods.
- The carrier is designed to provide mobility outside of the car but it should not be used instead of an appropriate cot.
- The carrier must be correctly fitted and locked into the stroller.
- The carrier must only be used with a Steelcraft stroller with compatible attachments.

In the event of doubt about the method of installation, contact Britax Childcare Pty Ltd customer service on 1300 303 330.

1. PREPARING THE STROLLER


- A Ensure the stroller has been assembled correctly.
- B Open the stroller, apply the brakes and lower the backrest to the fully reclined position.
- C Fold the bumper bar down to the child use position and remove the cover using the zip on the inside of the cover and store in the basket pocket .
- D Fold the canopy back to the closed position.

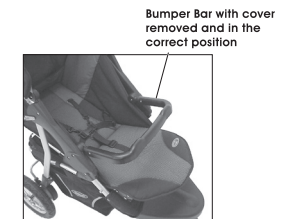

2. INSTALLING THE CARRIER INTO THE STROLLER

NOTE: Do not use with any other stroller. Only use a Steelcraft stroller with the Unity attachment bumper bar.

- A Position the carrier over the stroller with the baby's head end of the bassinot over the stroller bumper bar.
- B Lower the carrier and ensure that the latch slot locates onto the bumper bar.
- C Lower the foot end of the carrier until the latch locks onto the bumper bar and rest foot end on the seating area of the stroller.
- D Raise and lock the stroller backrest to the middle recline position. This is the recommended carrier position for the baby.
- E Fold the carrier handle down, and then check the carrier is securely attached to the stroller bumper bar by lifting the carrier before use.

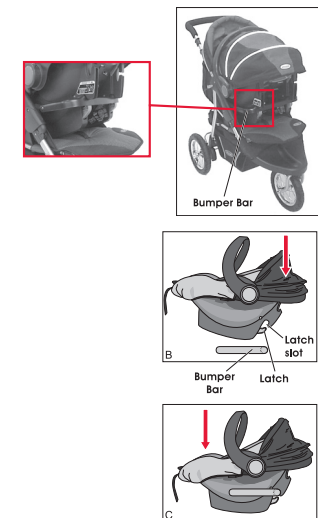

NOTE: Do not lift the stroller by the carrier. It may disengage.





RECOMMENDATION

Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport newborns, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

CARE AND MAINTENANCE

Regularly inspect and maintain your stroller to ensure the freedom of movement of the locking devices and security of components. To prolong the life of your nursery product keep it clean and do not leave it in the direct sunlight for extended periods of time.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent. Allow it to dry fully, preferably away from the direct sunlight.

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labeling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

If the wheels squeak - use a silicon based spray or light oil ensuring it penetrates the wheel and axle assembly.


When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assemblies.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. **(DO NOT OVERHEAT).**

Always check parts regularly for tightness of screws, nuts and other fasteners -tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.


5. TO USE THE CANOPY

- A Fit canopy hood bows to the brackets on each side of the stroller.
- B Pull canopy forward to the open position.
- C To open the canopy window pull the flap away from the canopy. Use the fastener (where fitted), to roll up and fix the window.

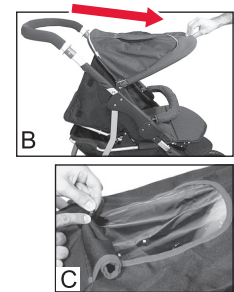

6. TO USE THE BRAKES

- A To use the foot brake, push lever down to lock the wheels.
- B Lift brake lever up to release the wheels.

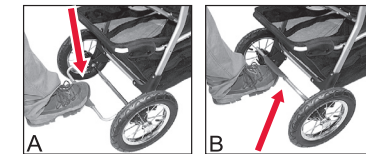


brake

NOTE: Always apply the foot brake whenever you park the stroller.

7. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.


A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

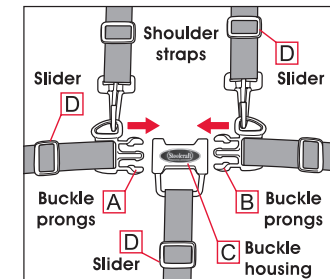



8. TO ADJUST THE BACKREST

- A To fully recline the backrest squeeze the adjusting bar up and lower the backrest down.
- B To raise the backrest to the fully upright position, hold the fabric on the side of the seat clear and lift the backrest up until it locks into place.

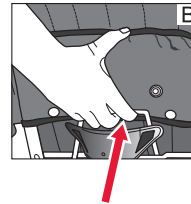

9. TO ADJUST THE LEG SUPPORT


- A Adjust the footrest by simultaneously pressing the buttons located on either sides of leg support.



NOTE: The leg support should be raised to the highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller. It will not lock in this position.


10. TO FIT THE BOOTCOVER

- A Place the bootcover over the leg support and fit the lower straps around the frame.
- B Attach both the right and left hand attachments located at the top of the bootcover to the canopy support bar.

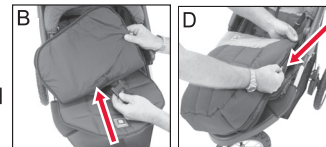

11. TO USE THE HEAD SNUGLER

- A Place head snuggler into stroller, feed the strap through the slots and adjust harness to best suit the baby's size.
- B Pull waist straps around baby and engage harness buckles.

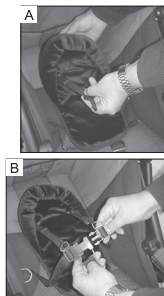


12. TO FIT THE RAIN COVER

- A Fit the rain cover over the stroller canopy and attach to press studs located on the side of the stroller frame. Attach Velcro hook and loops under the footplate.



13. TO FOLD THE STROLLER

- A Fold the canopy back and lower the backrest to the fully reclined position. Apply the brakes, and unlock the front wheel.
- B Stand behind the stroller and pull both locks. Gently press down on the handle allowing the stroller to fold until the chassis locks into a fully folded position. Apply the frame lock catch.

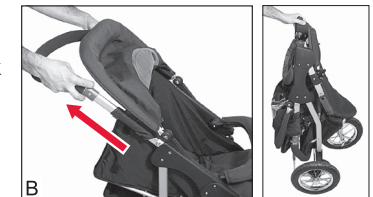

NOTE: For compact storage fold bumper bar upwards before folding the stroller.

