



e-brake **STROLLER**

INSTRUCTION MANUAL



SERIAL No. HA8345



IMPORTANT:
KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

INDEX

PAGE

| | |
|----|--|
| 6 | STROLLER FEATURES |
| 8 | QUICK REFERENCE GUIDE |
| 10 | SECTION ONE – STROLLER |
| 11 | IMPORTANT NOTES & WARNINGS |
| 13 | MANUAL HANDLING TECHNIQUES |
| 14 | PARTS LIST – STROLLER |
| 15 | STROLLER FRAME OPENING |
| 17 | TO FIT THE WHEEL GUARDS |
| 17 | REAR WHEEL FITTING & REMOVAL |
| 18 | FRONT WHEEL FITTING & REMOVAL |
| 19 | SWIVEL/FIXED FRONT WHEEL OPERATION |
| 19 | TO OPERATE THE BRAKE – IN MANUAL STROLLER MODE |
| 20 | TO ADJUST THE PIVOT HANDLE – 7 POSITIONS |
| 20 | TO FIT THE ACCESSORY BAG |
| 22 | FITTING THE STROLLER SEAT TO THE FRAME |
| 23 | TO FIT THE ARMBAR |
| 24 | ADJUSTING THE BACKREST |
| 25 | STROLLER SEAT REMOVAL |
| 26 | TO FACE THE SEAT IN THE OPPOSITE DIRECTION |
| 27 | TO FIT, USE & REMOVE THE CANOPY |
| 30 | HARNESS ADJUSTMENT |

PAGE

- 33** TETHER STRAP
- 34** TO FIT THE SHOULDER PADS
- 35** TO FIT THE REVERSIBLE SEAT PAD
- 36** ADJUSTING THE LEG SUPPORT
- 36** TO FIT THE BOOTCOVER
- 37** TO USE THE BASKET
- 37** TO FIT THE MESHCOVER
- 39** TO FIT THE RAINCOVER
- 41** TO USE THE STROLLER
- 42** TO FOLD/CLOSE THE STROLLER
- 46** STROLLER FOLDING CONFIGURATIONS
- 47** E-BRAKE FEATURES / ADVANTAGES OF E-BRAKE / MAIN FEATURES OF E-BRAKE
- 48** TO GET STARTED & BATTERY CHARGING
- 49** TO SET UP AND USE THE STROLLER IN E-BRAKE MODE
- 50** INSERTING THE BATTERY
- 52** LCD SCREEN & INFORMATION PANEL
- 53** TO SWITCH ON THE LCD SCREEN AND E-BRAKE FUNCTION
- 54** TO USE THE STROLLER IN E-BRAKE MODE
- 54** TO LOCK THE E-BRAKE AGAIN
- 55** TO UNLOCK THE E-BRAKE AGAIN
- 55** TO AVOID 3RD PARTY INTERFERENCE

INDEX

PAGE

- 56 STROLLER HANDLE LCD MODULE OPERATIONAL FEATURES
- 57 LCD SETTING – SELECT ICON – BUTTON SEQUENCE
- 58 OTHER FEATURES
- 60 BATTERY LIFE
- 60 E–BRAKE HANDLE ACTIVATIONS (FRAME OPENING/CLOSING)
- 61 BATTERY BAR SEQUENCE & USAGE
- 63 IF THE BATTERY POWER RUNS OUT WHILE WHEELING THE STROLLER
- 64 BATTERY CHARGING OPTIONS
- 65 MOBILE PHONE CHARGING
- 66 USING THE E–BRAKE STROLLER SUMMARY
- 66 USING THE E–BRAKE STROLLER IN MANUAL MODE
- 67 TO RETURN THE STROLLER BACK TO E–BRAKE MODE
- 68 OPTIONAL ACCESSORIES
- 69 WARNINGS – BASSINET & BASSINET PARTS LIST
- 72 BASSINET, ASSEMBLY, FITTING & REMOVAL
- 75 WARNINGS – STEELCRAFT & STRIDER INFANT CARRIERS
- 76 INFANT CARRIER – STEELCRAFT, FITTING & REMOVAL
- 78 WARNINGS – BRITAX CLICK & GO INFANT CARRIERS
- 79 INFANT CARRIER – BRITAX CLICK & GO, FITTING & REMOVAL
- 81 WARNINGS – SECOND SEAT
- 82 PARTS LIST – SECOND SEAT

PAGE

- 83** TO FIT THE SHOULDER PADS
- 84** TO FIT THE HEAD PILLOW
- 85** TO FIT, USE & REMOVE THE CANOPY
- 86** FITTING SECOND SEAT TO THE STROLLER
- 88** ADJUSTING THE BACKREST
- 89** HARNESS ADJUSTMENT
- 92** TO ADJUST THE HEAD PILLOW HEIGHT POSITION
- 92** TO FIT THE BOOTCOVER
- 93** FOLDING THE SECOND SEAT ON THE STROLLER FRAME
- 95** REMOVING THE SECOND SEAT FROM THE STROLLER FRAME
- 96** TO USE THE RECEIVERS SUPPLIED WITH THE SECOND SEAT
- 97** TO INSTALL THE STROLLER SEAT USING THE SECOND SEAT RECEIVERS
- 98** TO INSTALL THE STEELCRAFT INFANT CARRIER USING THE SECOND SEAT RECEIVERS
- 99** REMOVING THE SOFTGOODS FROM THE SECOND SEAT FRAME
- 101** FITTING & REMOVING THE STEELCRAFT INFANT CARRIER FROM SECOND SEAT FRAME
- 104** REFITTING THE SOFTGOODS TO SECOND SEAT FRAME
- 106** CARE & MAINTENANCE
- 107** NOTES
- 108** BACK PAGE

STROLLER FEATURES



- | | |
|--|--|
| 1. Adjustable & removable canopy | 11. Side access zip pocket (on both sides) |
| 2. Peek a boo window | 12. Removable & reversible Stroller Seat |
| 3. Pivotal handle | 13. Shoulder pads |
| 4. Tether Strap | 14. Arm bar |
| 5. Frame fold mouldings (on both sides) | 15. 5 point harness |
| 6. Canopy mesh (under zip) | 16. Quick release buckle |
| 7. Stroller seat release buttons (on both sides) | 17. Crotch pad |
| 8. Frame sockets (on both sides) accepts Stroller seat, Infant Carrier, bassinet or receivers. | 18. Reversible seat pad |
| 9. Frame lock | 19. Adjustable footrest |
| 10. Wheel guards | 20. Front access zip pocket |
| | 21. Front wheel release (on both sides) |
| | 22. Swivel wheel lock (on both sides) |

STROLLER FEATURES



- 23. LCD Screen
- 24. Backrest recline lever
- 25. Mobile phone pocket
- 26. Accessory bag
- 27. Brake pedal – Brake on/off colour indicator
- 28. Rear wheel release
- 29. Lower mouldings for attachment to second seat frame (on both sides)
- 30. Mouldings for attachment to Second seat connecting pins (on both sides)
- 31. Second lock (for Second seat)



QUICK REFERENCE GUIDE



Stroller – Forward Facing
Page: 22



Stroller – Rear Facing
Page: 26



Bassinet
Page: 72



Steelcraft Infant Carrier –
Rearward Facing
Page: 76



Steelcraft Infant Carrier x2
Pages: 76 + 101
With Receivers: 96 + 98

**Recommended to use the
Steelcraft receivers in this mode.**



Infant Carrier + Second Seat
Pages: 76 + 86
With Receivers: 96 + 98

**Recommended to use the
Steelcraft receivers in this mode.**

Shown with optional accessories (sold separately)

QUICK REFERENCE GUIDE



Britax Click & Go Infant Carrier with
Receivers
Page: 79

Britax Click & Go Receivers must be
used in this mode: Page 79.



Britax Click & Go Infant Carrier +
Second Seat
Pages: 79 + 86

Britax Click & Go Receivers must be
used in this mode: Page 79.



Stroller Forward Facing +
Steelcraft Infant Carrier
Pages: 22 + 101
With Receivers: 96

Recommended to use the
Steelcraft receivers in this mode.



Stroller Forward Facing +
Second Seat
Pages: 22 + 86
With Receivers: 96

Recommended to use the
Steelcraft receivers in this mode.

Shown with optional accessories (sold separately)

SECTION ONE: STROLLER



IMPORTANT NOTES & WARNINGS



IMPORTANT NOTES

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR OR TRAY BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 4 KG IN THE BASKET, 1KG IN THE SEAT BACK REST POCKET (IF SUPPLIED), 1KG IN THE BASSINET POCKET (IF SUPPLIED) OR 1KG IN THE ACCESSORY BAG (IF SUPPLIED).



WARNINGS

TO AVOID INJURY OR DEATH

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.

IMPORTANT NOTES & WARNINGS

WARNINGS

- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20 KG, 9KG FOR THE BASSINET, 9KG FOR THE STEELCRAFT INFANT CARRIER OR 12KG FOR THE BRITAX CLICK & GO INFANT CARRIER OR 17KG FOR THE SECOND SEAT.

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES – REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



CAUTION

This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed? Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle – use a semi squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.

PARTS LIST - STROLLER



Stroller frame



Stroller seat



Canopy



Armbar



Boot cover



Shoulder pads



Reversible Seat pad



Accessory bag



 
Britax Click & Go
Receivers



Mesh cover



Rain cover



Battery



Charger



Wheel guards



Rear wheels



Front wheels

HOW TO SETUP

STROLLER FRAME OPENING




IMPORTANT NOTES:

PLEASE REFER TO PAGE 13 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING UNFOLDING OF THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.



- A. After carefully removing the contents from the carton, Lay the frame on a flat surface and remove any excess packaging.

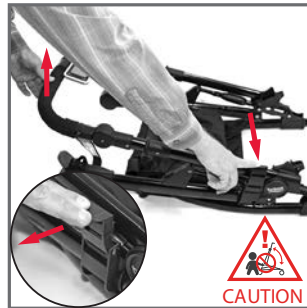

- B. With due care, hold the handle with one hand and with the other hand release the frame lock. Lift the handle up to partially open the frame.

HOW TO SETUP

STROLLER FRAME OPENING cont'd



C. Continue to lift the handle up, with both hands to open the frame until the left and right side frame mouldings engage and lock together.




D. Push down on the handle to confirm the frame is locked open.

HOW TO SETUP

TO FIT THE WHEEL GUARDS



A. Position the left and right guards beside the frame as shown.

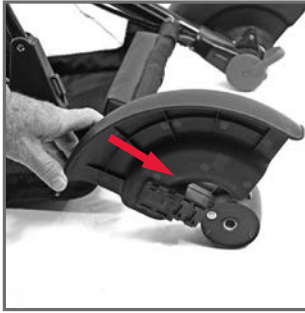

B. Fit each guard onto the moulding at the base of the leg tubes. Push down until they lock into position.



C. Pull on each guard in the direction shown, to make sure they are locked on correctly.

REAR WHEEL FITTING & REMOVAL



A. To fit the rear wheels, align the wheel axle/rod with the hole in the wheel moulding. Press in and hold the central button, then push the rear wheel fully into the wheel moulding.



B. Release the central button, then pull on the rear wheel to make sure it is locked on. Repeat steps A & B to fit the other rear wheel.



C. To release the rear wheels, press in and hold the central button. Then slide the wheel out and remove. Repeat for the other side.

HOW TO SETUP

FRONT WHEEL FITTING & REMOVAL



NOTE: Tip the frame backwards for more convenient assembly.



A. Take each front wheel assembly and push the axle into the wheel housing, until it locks in.



B. Pull on both front wheel sets to make sure they are locked on.



C. To remove the wheel assembly, turn top knob to the left to unlock and release the wheel.

HOW TO SETUP

SWIVEL/FIXED FRONT WHEEL OPERATION

NOTE: Always lock the front swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.



A. For swivel wheel mode, slide both red latches up until they lock it into position.



B. To lock the front wheels into the fixed position, slide both red latches down until they lock.



C. The front wheels will automatically lock into the fixed position when you move the stroller forward by approximately one metre.

TO OPERATE THE BRAKE - IN MANUAL STROLLER MODE



WARNINGS

ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

NOTE: It is recommended to leave the brake locked during the remainder of the stroller and accessory assembly.



Indicator

A. If the left wheel indicator is GREEN, press down on the spring loaded brake pedal. The left indicator will change to RED. Push the Stroller back and forth to confirm the wheels are locked.



B. To unlock the rear wheels, press the RED brake pedal down. The left wheel indicator will change to GREEN. The Stroller can now be pushed.

HOW TO SETUP

TO ADJUST THE PIVOT HANDLE - 7 POSITIONS



A. There is an adjusting button on the inside of each handle moulding.



B. Press both buttons in together and hold. Now rotate the handle up or down to the desired height position.



C. When the desired height position has been achieved, release both buttons.

TO FIT THE ACCESSORY BAG



IMPORTANT NOTE:

DO NOT PLACE MORE THAN 1KG IN THE ACCESSORY BAG.



A. The bag firstly needs to be attached to the hook and loop tab on the inside of the stroller basket.



B. Hold the bag up by the black back flap on the rear side of the bag.

Note: the hook and loop tab on the edge of the flap.



C. Attach the hook and loop tab to the hook and loop tab on the inside of the basket. This will help to keep it in place.

Note: this flap also contains two pockets.

HOW TO SETUP

TO FIT THE ACCESSORY BAG cont'd



D. Now thread each hook and loop tab through the frame moulding brackets as shown.



E. Attach each strap to the hook and loop tab sewn onto the bag to hold in place.




F. The accessory bag is now ready for use.

NOTE: Remove the bag when using the second seat.

HOW TO SETUP

FITTING THE STROLLER SEAT TO THE FRAME

 **IMPORTANT NOTE:** ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.

NOTE: Straighten the leg support before fitting Seat to the stroller. See page 36.



A. Hold the Stroller seat over the frame.



B. Align the Stroller seat mouldings on both sides, over the frame connection sockets located in the middle of the Stroller.



C. Push the Stroller seat down until both seat mouldings are locked into the frame sockets.



D. Pull up on both sides of the Stroller seat to make sure it is securely locked into the Stroller frame.

HOW TO SETUP

TO FIT THE ARM BAR




IMPORTANT NOTE: WHEN CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED TO THE FRAME AT ALL TIMES.



A. One side at a time, align the arm bar pin with the frame moulding as shown.



B. Press in and hold the engaging / release button, then insert the pin all the way in.

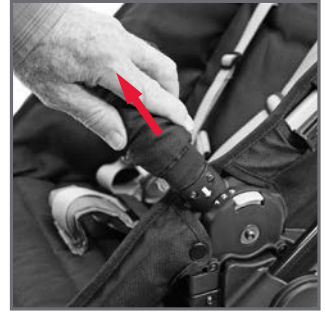

C. Release the button, then pull on the arm bar to make sure it is engaged. Repeat steps A, B & C for the other side.



D. To release the arm bar, press in and hold the release button located under the arm bar connector, then pull out the arm bar.



E. Rotate the arm bar clear of the Stroller seat to assist with putting a child in the Stroller.



F. Lock the arm bar back into position after fastening the child in the harness. Ensure the arm bar is correctly installed. The 'Caution' text must appear on the right hand side so it is possible to read (not upside down).

HOW TO SETUP

ADJUSTING THE BACKREST

WARNINGS

PLEASE REFER TO PAGE 13 FOR SMART LIFTING TECHNIQUES.

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

NOTE: If the child is sitting in the seat, support the backrest as it reclines.

If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.



A. To adjust up or down, fully lift the adjusting lever all the way up.



B. Continue to hold the lever up and adjust the seat to any one of three positions.



C. There are 4 indicated seat positions while the seat is facing forward or rearward.

1. Upright position
2. Semi recline position
3. Layback position

HOW TO SETUP

STROLLER SEAT REMOVAL



IMPORTANT NOTE: ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.




A. Hold the seat or arm bar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons.



B. While holding the grey buttons, lift the seat out of the frame.

HOW TO SETUP

TO FACE SEAT IN OPPOSITE DIRECTION

 **IMPORTANT NOTE:** ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING SEAT DIRECTION.



A. Refer to page 25 for removing the seat from the frame.



B. Turn the Stroller seat around to face handle. Refer to page 22 for fitting the seat to the frame.

WARNINGS

IT IS NOT RECOMMENDED TO USE THE TOP SEAT FACING IN THIS POSITION IF YOU ARE USING EITHER THE SECOND SEAT OR THE INFANT CARRIER IN THE LOWER FRAME POSITION.



HOW TO SETUP

TO FIT, USE AND REMOVE THE CANOPY



IMPORTANT NOTE:

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.



A. To attach the canopy, adjust the backrest to the upright position, then slide the canopy mouldings on the frame mouldings until they connect together. Pull up to confirm they are locked on.



B. Attach the canopy hook strips to the pile strips around the top and sides of the frame for a secure fit.



C. To adjust the canopy, open by pulling forward, or close by pushing it backward.

HOW TO SETUP

TO FIT, USE AND REMOVE THE CANOPY cont'd



D. To reveal the rear canopy mesh section, fold the canopy fabric over or up underneath itself.




E. To shorten the canopy length, rotate the mid section back and attach the hook and loop straps through the buckles.



F. Attach both straps to the back of the Stroller.



G. The canopy also has a mesh pocket attached for mobile phone storage. The magnet can secure the pocket to the back of the stroller seat.

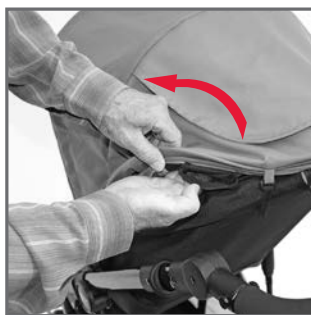

H. Fold the mesh pocket up under the canopy if pocket not required or when not in use.



I. The window cover is kept in place by a hidden magnet located at the bottom of the window cover.

HOW TO SETUP

TO FIT, USE AND REMOVE THE CANOPY cont'd



J. To open the window cover, simply lift the cover and place it on top of the canopy.



K. To remove the canopy, firstly note to release the rear canopy straps from the buckles. Also release the hook & loop from the underside of the canopy.



L. Remove the canopy by pulling up on each side canopy mouldings.

HOW TO SETUP

HARNESS ADJUSTMENT




WARNINGS


USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.

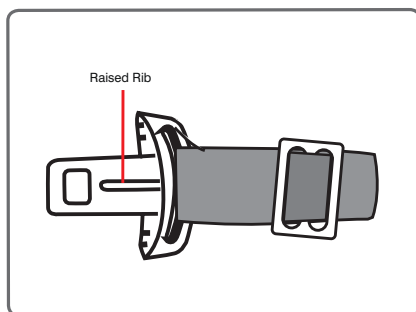

- A. Set parking brake. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

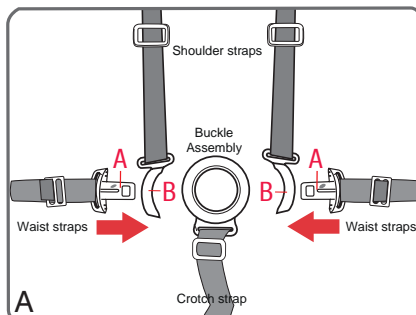


HOW TO SETUP

HARNESS ADJUSTMENT cont'd


- B. **Note:** Ensure the straps are not twisted as they may become uncomfortable for the child.

Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

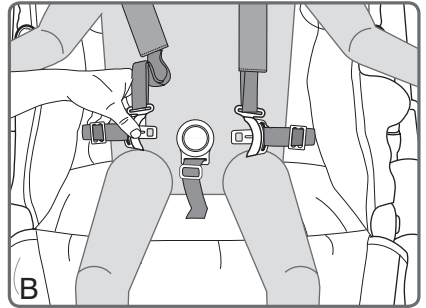


Press in & hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

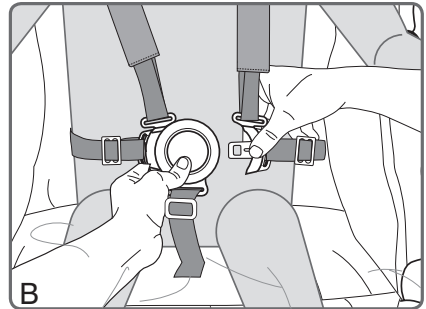

- C. Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. Crotch strap should be adjusted to a snug fit.

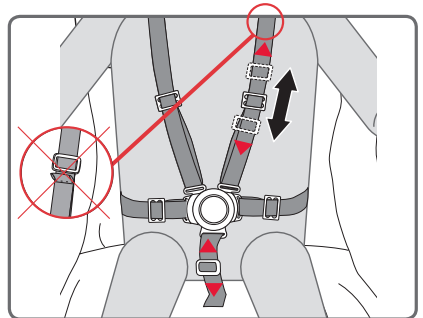


CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

HOW TO SETUP


HARNESS ADJUSTMENT cont'd

- D. Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit.

The waist strap needs to fit firmly around the child.

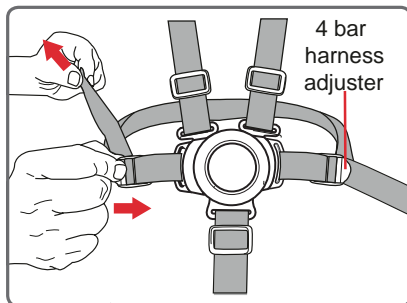


- E. Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

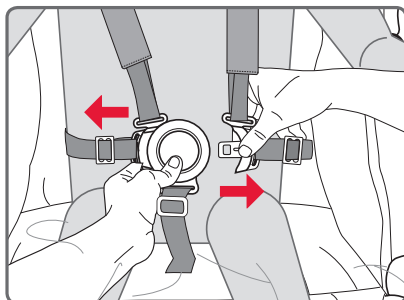

- F. The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat. Rethread the harness through the desired harness slot.

*Depending on the model

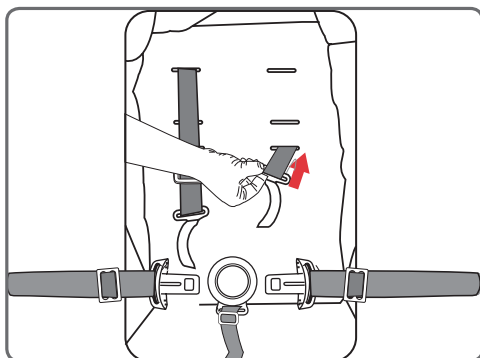

HOW TO SETUP

TETHER STRAP



WARNINGS

USE THE TETHER STRAP TO PREVENT THE STROLLER FROM ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

A. A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller.

Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.




HOW TO SETUP

TO FIT THE SHOULDER PADS


NOTE: The long shoulder pad strap needs to be threaded through the button hole and attached to the short strap on the other side. This will prevent the shoulder pads from slipping off.




A. Release the harness buckle and separate the harness. See page 32. Thread each shoulder harness down through each shoulder pad.

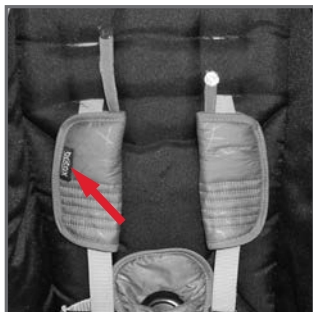

B. Note the shoulder pad orientation. Britax logo on left side with long strap. No logo on pad with short strap on right side.

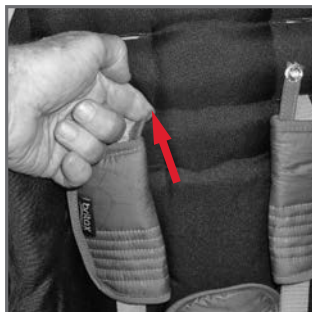

C. Thread the long strap through the left button hole and across to the right side.

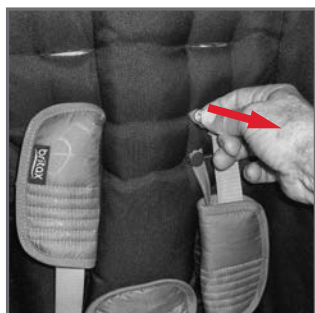

D. Pull the strap out through the button hole.



E. Connect the press studs to hold the shoulder pads together.



F. Position the shoulder pads so they fit comfortably to the child.

HOW TO SETUP

TO FIT THE REVERSIBLE SEAT PAD


NOTE: To assist with installing the seat pad, release one side of the armbar. See page 23.



A. Place the seat pad in the stroller seat and thread both waist straps through each button hole from the rear side.




B. Waist straps threaded through seat pad.

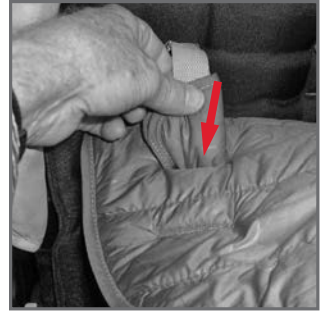

C. Squeeze and push each shoulder strap and shoulder pad through each button hole and pull through to the front side.



D. Shoulder and waist straps should now be as shown.

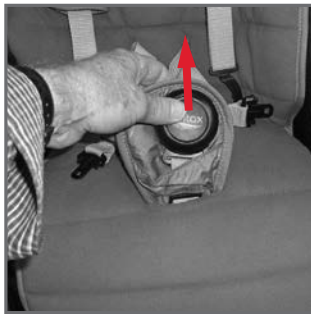

E. Now pull the crotch buckle and pad up through the button hole.



F. Completed seat pad set and harness assembly.

HOW TO SETUP

ADJUSTING THE LEG SUPPORT



IMPORTANT NOTES:

- THE LEG SUPPORT FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG SUPPORT IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG SUPPORT. IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED. IF LEG SUPPORT DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG SUPPORT MODE.



A. To lower or raise leg support press in and hold both left and right buttons.



B. While holding both left and right buttons, tilt leg support up or down to the desired position.

TO FIT THE BOOT COVER



A. Raise the leg support to the horizontal position. Hook the boot cover 'pocket' under the leg support.



B. Pull the top of boot cover under the arm bar and then back over the top.



C. Connect the press studs to keep in place. The Boot cover is now ready for use.

HOW TO SETUP

TO USE THE BASKET



IMPORTANT NOTES:

DO NOT PLACE MORE THAN 4KG IN THE BASKET.

NOTE: When a child is in the Second Seat, basket access is recommended only from the sides, or from the front.



A. Access is available from either side by undoing the zippers.



B. Access is available from the front by undoing the zipper.




C. Access is available from the rear of the Stroller.

TO FIT THE MESH COVER



A. **Stroller** – Fold the rear canopy section back. Attach the hook & loop straps through the canopy buckles.

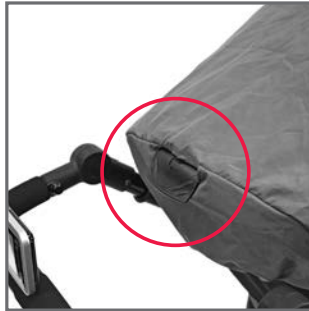

B. Place the mesh cover on top of the canopy. Hook the 'seat adjuster' hole over the stroller seat adjuster lever.



C. Hook the front elastic section of mesh cover over the seat extender. Adjust the seat extender accordingly for correct fit.

HOW TO SETUP

TO FIT THE MESH COVER cont'd



D. To reveal the mesh and zipper access, fold the fabric cover on top of the canopy.



E. **Bassinet** – Place the mesh cover on top of the canopy.



F. Hook the front elastic section of mesh cover over the front of the Bassinet. See D to access zipper.



G. Mesh cover can also be fitted over the **Infant Carrier**.



H. To reveal the mesh and zipper access, fold the fabric cover on top of the canopy.



I. **Second Seat** – Place the mesh cover on top of the canopy. Hook the 'seat adjuster' hole over the adjuster lever. Hook the front elastic section of mesh over the front of the second seat.

HOW TO SETUP

TO FIT THE RAIN COVER



- A. Stroller – Fold the rear canopy section back. Thread the hook straps through the canopy buckles. Secure the hook straps to the pile on the back of the Stroller seat.




- B. Unzip the front & rear raincover sections and hook the 'seat adjuster' hole over the Stroller seat adjusting lever.



- C. Hook the front elastic section over the seat extender. Adjust the seat extender accordingly for correct fit.



- D. Reattach the rear zippered section as required. Join the hook & loop together on the outside of the frame for neat fit.

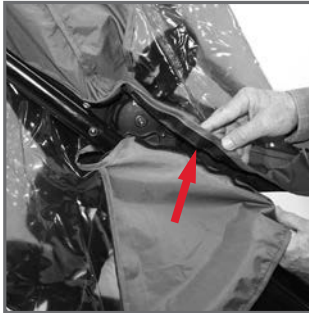

- E. Join the hook & loop together on the outside of the frame for neat fit.



- F. The raincover can be fitted to the Stroller seat when in forward or rear facing direction.

HOW TO SETUP

TO FIT THE RAIN COVER cont'd



G. The raincover can be fitted over both the Stroller Seat and Second Seat. Or Stroller seat and Infant Carrier.



H. To fit the raincover to the Infant Carrier, unzip the rear section and place the top section over the Infant Carrier canopy.



I. The raincover can also be fitted over both the Infant Carrier and Second Seat.



J. The raincover can also be fitted over the Bassinet. Attach the rear raincover section if required and join the hook & loop around the frame.

NOTE: The raincover is not designed to fit over two Infant Carriers. However can be used as some protection from the weather if necessary.

TO USE THE STROLLER

PLEASE REFER TO PAGE 13 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction – allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

HOW TO SETUP

TO FOLD/CLOSE THE STROLLER



IMPORTANT NOTE:

PLEASE REFER TO PAGE 13 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.
- Remove the bassinet or infant carrier if connected to the frame prior to folding.
- The second seat can either be removed or folded up prior to folding.
- The rain cover must also be removed if fitted.

NOTE: Stroller Seat and wheels can be removed to reduce the total folded size. See pages 17–18 & 25 for reference.

With the Stroller Seat attached, folding the leg support will also help to reduce the folded size.

FOLDING TIPS

1. It is recommended for easier handling, to take the Stroller seat off first. Then fold the frame and put both seat and frame in the car.
2. For smaller cars it may also be convenient to simply remove the rear wheels as well.

HOW TO SETUP

TO FOLD/CLOSE THE STROLLER cont'd



- A. **Engage rear brakes.**
Remove all objects from the basket and close the canopy. Raise the handle up one or two positions (as shown) to avoid contact with the wheels when folded.
- B. Remove the Stroller Seat from the frame. Hold the seat or arm bar on both sides with your hands. Then with your finger or thumbs, press down and hold the grey buttons. While holding the grey buttons, lift the seat off the frame.



IMPORTANT NOTE: INCORRECT FOLDING MAY CAUSE DAMAGE TO THE STROLLER & FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.

- Ensure the front wheels are in swivel mode, so the front wheels will automatically position under the stroller during folding.




- C. For swivel wheel mode, lift the swivel latch up on both front wheels until they lock into position.
- D. Pull release mouldings 1 & 2 all the way up and hold to release the frame locks.

HOW TO SETUP

TO FOLD/CLOSE THE STROLLER cont'd



E. Push down on the handle and the frame will begin to fold.

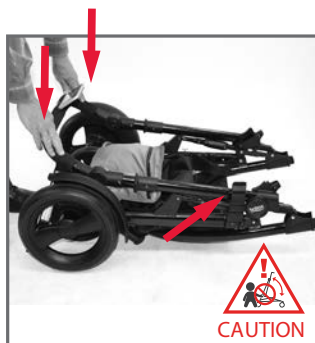

F. Fold all the way down until the frame lock engages.



G. Frame lock engaged.

NOTE: Make sure the frame lock is engaged before lifting up and always bend the knees when lifting.



H. The two separate components shown after folding.



I. Separation of the Stroller seat and frame promotes easier handling and storage.

HOW TO SETUP

TO FOLD/CLOSE THE STROLLER cont'd

If you have chosen not to remove the Stroller Seat, follow the procedure below.

PLEASE REFER TO PAGE 13 FOR LIFTING TECHNIQUES.

Note: Ensure the Stroller seat is forward facing. This will achieve a more compact fold.



J. Follow step A. If seat unit is attached and in child facing away from parent mode, then adjust the backrest to the most upright position.



K. Follow steps C, D & E. Then fold all the way down until the frame lock engages (frame lock shown in step G).

NOTE: NOT RECOMMENDED TO FOLD IN THIS MODE.



L. If seat unit is attached and in child facing parent mode, then adjust the backrest to most reclined position.



M. Follow steps C, D & E. Then fold all the way down until the frame lock engages (frame lock shown in step G).

STROLLER FOLDING CONFIGURATIONS

PLEASE REFER TO PAGE 13 FOR LIFTING TECHNIQUES.

The following are recommended configurations for storage and transportation in a vehicle.

Shown with second seat (optional accessory, sold separately).

NOTE: The easiest method is to remove the top seat and optional accessories from the stroller frame and place the accessories and stroller frame into the vehicle separately.



Stroller frame only



Stroller seat



Second seat



CAUTION: The Stroller can be folded with the top seat and second seat attached to the stroller frame. It is not recommended to try and lift the Stroller in this configuration. See pages 42–44.



Stroller frame +
Second seat



Stroller frame + Seat
+ Second seat

Note: The Stroller pivot handle is required to be placed into the regular or highest lockable position (see page 20).

This will prevent the handle from coming into contact with the second seat and causing damage to the Stroller.

If the tension is too hard DO NOT force, re-open the Stroller and ensure the Stroller pivot handle is set to the highest point.

E-BRAKE FEATURES



IMPORTANT NOTE: Follow the preceding Stroller assembly Instructions.



IMPORTANT NOTE: Refer to the following section for e-brake assembly and operation.



WARNING - Before placing a child in the Stroller, make sure the e-brake system is switched on.

ADVANTAGES OF E-BRAKE

- Ideal for peace of mind when using outdoors.
- Ideal for use on hills, slopes or uneven ground where the Stroller could otherwise roll away. For example railway platforms, riverside pathways, steep roads, sloping pathways, hilly terrain or other onerous conditions.
- Ideal for use in windy conditions to prevent the Stroller from being blown or rolling away.
- Ideal to avoid 3rd party interference (another child) to the Stroller, should you need to be away from the Stroller for a moment.

MAIN FEATURES OF E-BRAKE

RECHARGEABLE BATTERY, LCD SCREEN and ELECTRONIC HANDLE SENSORS equal E-Brake operating function. These three features go hand in hand to make the e-brake work and function.



RECHARGEABLE BATTERY
WITH CHARGER



LCD SCREEN &
INFORMATION PANEL




HANDLE WITH
INTERNAL SENSORS

E-BRAKE FEATURES

TO GET STARTED

The e-brake function is powered by rechargeable batteries.

 **IMPORTANT NOTE:** The battery is likely to be flat after shipping and storage, so will require charging for e-brake function.


Follow the Instructions to fully charge the battery before use.

BATTERY CHARGING FOR THE FIRST TIME


It takes about 6 hours to fully charge the battery. So overnight charging is ideal.



A. Remove the battery from its packaging.

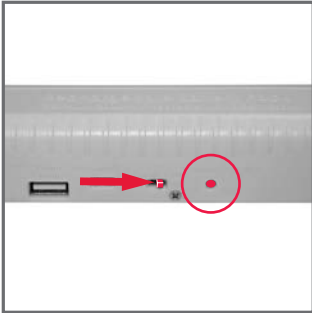

B. Slide the RED switch to the ON position. The battery will flash 'red' a few times if it still has some charge. If it's totally flat, there will be no indicator flash.

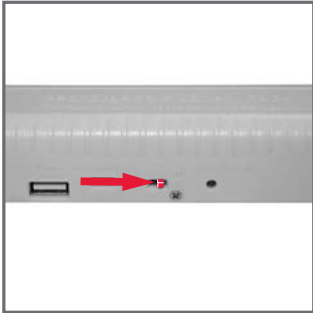

C. **THE BATTERY MUST BE SWITCHED ON FOR CHARGING.**



D. Remove the charger from its packaging.



E. Insert the large USB cable end into the Charger port.




F. Insert the small cable end into the battery port.

E-BRAKE FEATURES

BATTERY CHARGING FOR THE FIRST TIME cont'd



G. Plug the Charger into a power point and switch it on. The battery indicator will show Orange while charging.

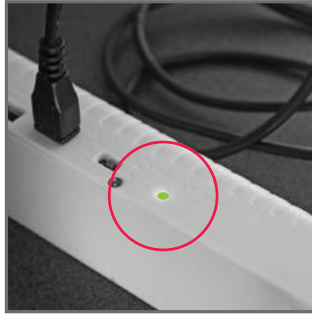

H. When the battery is fully charged, the indicator will turn GREEN.



I. After the battery light has turned Green, switch off the power and unplug the Charger. Also slide the battery switch to the OFF position.

TO SET UP AND USE THE STROLLER IN E-BRAKE MODE



A. Make sure the left wheel brake indicator is showing Green.



B. If showing RED , push the brake pedal down to release back to Green mode. See page 19 of Stroller Assembly

E-BRAKE FEATURES

INSERTING THE BATTERY



IMPORTANT NOTE:

**MAKE SURE THE BATTERY IS FULLY CHARGED BEFORE FIRST USE.
OVERNIGHT CHARGE IS RECOMMENDED.**




A. Fold back the fabric cover located just inside the basket to reveal the battery case. The cover is attached with hook and loop on the basket side, so it will need to be released.




B. Remove the protective foam insert. The fully charged battery can now be installed.



C. Insert the battery from left to right into the battery case. Ensure the battery connecting pins are to the right.

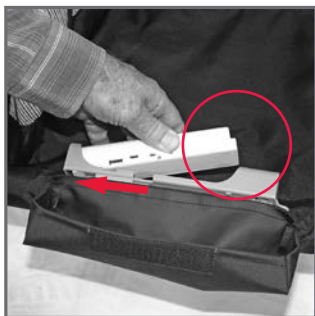

D. The Battery case has a spring loaded end section for battery security. Pull the battery back to the left so the battery case end section slides backwards.

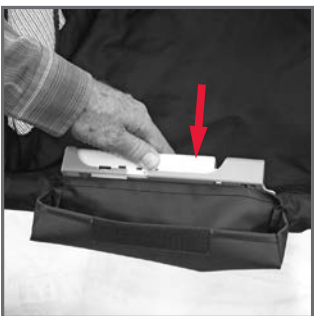

E. Push the battery down into the battery case.



F. Slide the battery all the way forward.

E-BRAKE FEATURES

INSERTING THE BATTERY




- G. Slide the RED battery switch to 'on'. The light will flash a few times to indicate the battery is on.
- H. Replace the battery cover and secure the hook & loop to protect the battery from dust, dirt, rain or other elements.

NOTE: When the battery has been switched on, you will hear an audible 'click'. This indicates the e-brake function is on and the brake has locked automatically.

The left wheel indicator will now be RED.

E-BRAKE FEATURES

LCD SCREEN AND INFORMATION PANEL

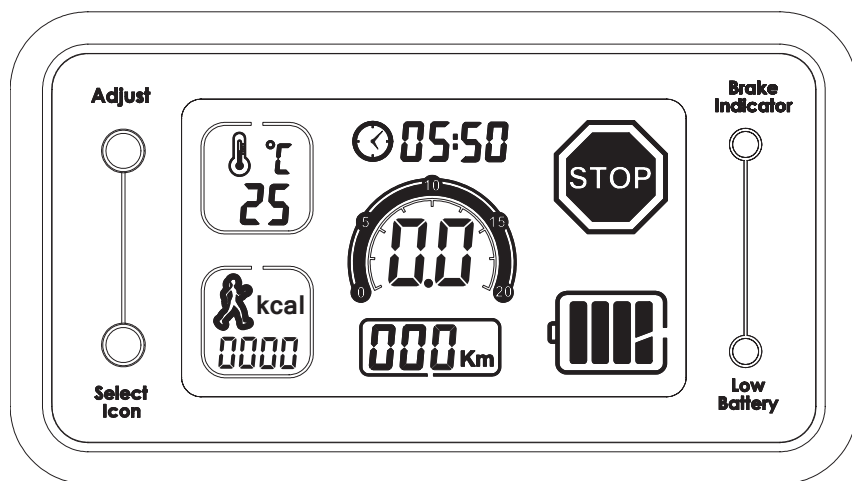


To complete the e-brake set up , the LCD Screen partners with the battery to provide e-brake function and other user friendly features.

When the battery has been fully charged and the LCD has been switched on, see page 53, the battery Icon will show 4 full bars.

NOTE: If the battery has only be given a short charge , and not a full charge , the 'battery bar icons will 'spike' up to 4 bars. However they will recalibrate shortly to reflect the actual amount of charge in the battery.

E-BRAKE FEATURES

TO SWITCH ON THE LCD SCREEN AND E-BRAKE FUNCTION

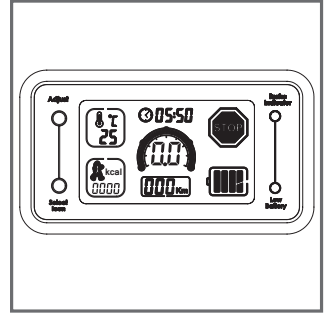


NOTE: Without holding or touching the handle.

A. Locate the RED on/off switch on the left side of the LCD screen.

B. Use your finger to slide the RED button down to switch on.

C. After switching the LCD module on, in a few seconds the LCD screen will show all its screen features.

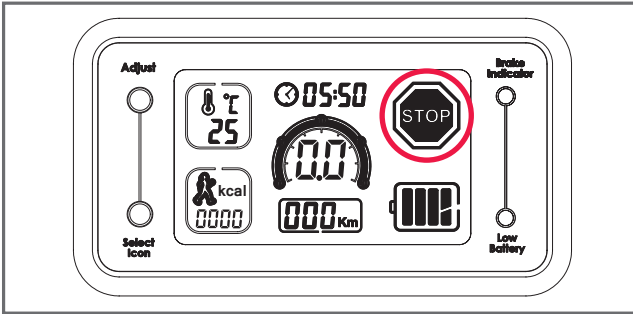

D. Take note of the STOP sign in the top right hand corner. This indicates the e-Brake is engaged and locked.

E. The fully charged battery bar icon should be showing 4 bars.

NOTE: If you were holding the handle when the LCD screen was switched on, simply release your hand/s from the handle and grasp the handle again to be in e-Brake mode.

NOTE: When the LCD Screen has been switched on, and if the handle has not been activated for 60 seconds, the screen will go blank and into power saving mode. However the e-Brake is still in operation mode. Simply touch the handle again for all LCD screen ICONS to reappear.

NOTE: A protective, removable film has been placed over the front of the screen for shipping. It can be removed if required.

E-BRAKE FEATURES

TO USE THE STROLLER IN E-BRAKE MODE NOW

NOTE: One or both hands need to be holding the handle for the e-Brake to operate and function.

WARNING: Always use the Tether Strap provided.

TO UNLOCK THE BRAKE



A. Grasp hold of the handle with one or both hands to release the e-brake. You will hear an audible 'click' to also confirm the e-brake is released.



B. Take note that the 'STOP' sign in the top right hand corner is now, not visible. As well, the Green light is on indicating the Stroller e-Brake has been released. Continue holding the handle.




C. You will notice the left wheel indicator is now Green. Continue to hold the handle with one or both hands to move the Stroller forwards or backwards.

TO LOCK THE BRAKE AGAIN



A. If you remove BOTH your hands from the handle, the e-Brake will automatically lock. You will hear an audible 'click' to also confirm the e-brake is locked.

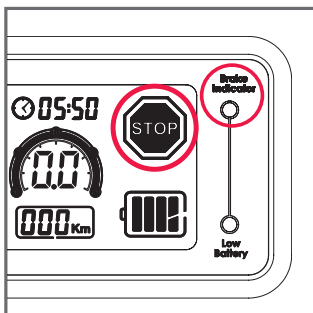

B. The STOP icon is visible and Green Brake indicator light is off.



C. The left wheel indicator should also now be RED and the Stroller brake is locked.


E-BRAKE FEATURES

TO UNLOCK THE BRAKE AGAIN

A. To release the brake again refer to page 54.

TO AVOID THIRD PARTY INTERFERENCE

- A. An added feature of this Stroller, so as to avoid any 3rd party interference with the Stroller in e-brake mode, just in case you need to move or walk away from the Stroller.
- B. With the Stroller in e-brake mode, push the brake pedal down to lock the brake. Make sure the RED brake indicator is showing. This 'freezes' the e-brake handle and prevents the Stroller moving from any interference.

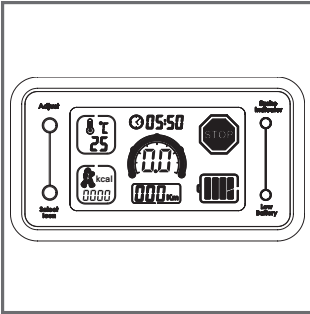


To return to e-brake mode, **grasp the handle**, push down on the spring loaded brake pedal and remove your foot. The brake pedal will return up to its highest position and the left wheel indicator will be showing Green. You are ready to go again.

NOTE: If the left wheel brake indicator is still RED, just pull back slightly on the Stroller handle , and then move forward.

Simply release the handle to allow the Stroller e-brake to lock again as required.

E-BRAKE FEATURES

STROLLER HANDLE LCD MODULE OPERATIONAL FEATURES

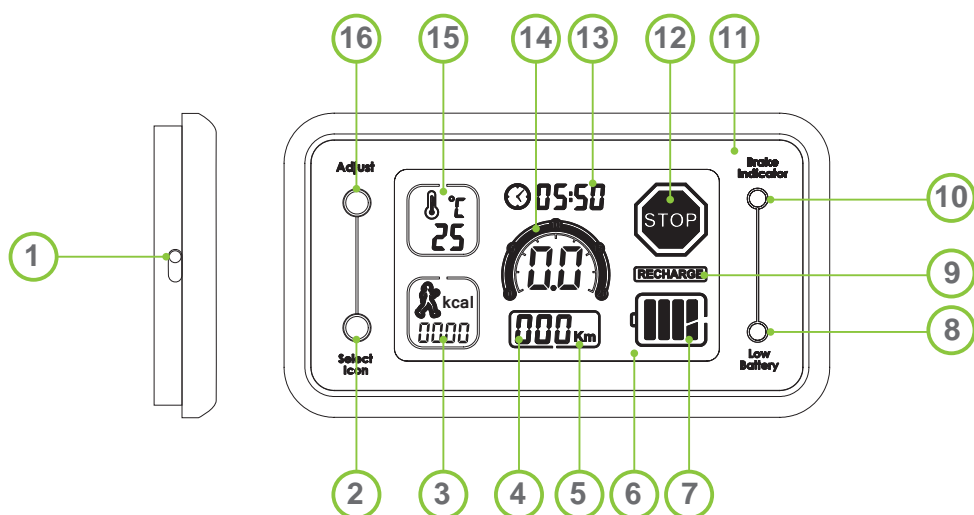

1. On / Off switch
2. Select icon button
3. Calories
4. Distance
5. Km / Mls
6. 'Backlight' feature (Press Adjust or Select icon button)
7. Battery charge bars
8. Low battery 'Red' light warning indicator
9. Low battery RECHARGE warning indicator (visible when battery charge is low)
10. Green brake light 'ON' indicator
11. Pivotal LCD Screen
12. e-Brake ON / OFF STOP symbol
13. Time – hours – minutes
14. Speed – km/mls
15. Temperature °C / °F
16. Adjust button

NOTES:

When the LCD Screen has been switched on, while you hold the handle all the ICONS will be visible.


If the handle has not been held or activated for 60 seconds, the screen will go blank and into the power saving mode. However, the e-Brake function is still active. Simply touch the handle again to display all icons again.

E-BRAKE FEATURES

LCD SETTING - SELECT ICON BUTTON SEQUENCE

Note: Use the 'Select Icon Button' to move around the screen, or to delete any recorded Calorie or Distance data.

SELECT ICON BUTTON & ADJUST BUTTON

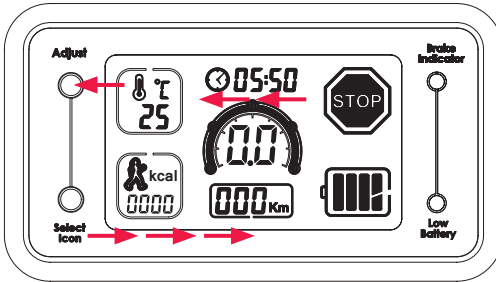

Press and release 'Select Icon' button to move across and around the screen.

- Calorie
- Distance
- Km / Mls
- Minutes
- Hours
- Exit screen

To delete any recorded data, when the ICON is selected and flashing, press **ADJUST** button. Also use Adjust button to change to or from Klms/Mls, C/F description.

When selected, *Calorie* ICON will flash, then press **Adjust Button** to cancel any calorie history if required.

When selected, *Distance* ICON will flash, then press **Adjust Button** to cancel any distance history if required.



When selected, *Klms / Mls* ICON will flash, then press **Adjust Button** to or from Klms / Mls.
Note: C/F Temperature ICON will change automatically.

When selected, *Minutes* ICON will flash, then press **Adjust Button** to change time.

After 'Hours' selected and adjusted, press *Select* ICON button to Exit the screen.

E-BRAKE FEATURES

OTHER FEATURES

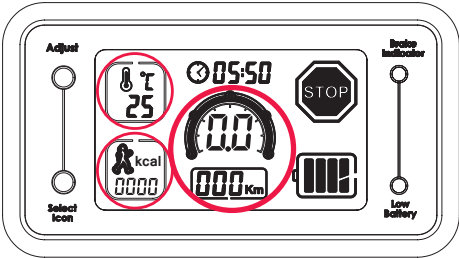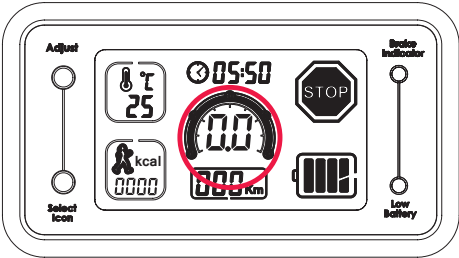

SPEED

Your walking speed will be indicated on the centre ICON.

Note: The calories, travel distance, speed and temperature are reasonably accurate and are for reference only. Some tolerance applies subject to environmental conditions.



STOP ICON VISIBLE – BRAKE LOCKED



STOP ICON NOT VISIBLE AND GREEN INDICATOR ON – BRAKE IS OFF

E-BRAKE FEATURES

OTHER FEATURES cont'd

BACKLIGHT

Press either Adjust (or Select button) to give 20 seconds of backlighting.

POWER SAVING MODE

With no Stroller handle activations, the LCD screen will turn off after 60 seconds into power saving mode. However e-Brake is still in operation mode.

Touch the handle again and all icons will return.

LCD ADJUSTING CLAMP

The LCD screen can be rotated and adjusted by around 70 degrees.

Very useful for sunny conditions to prevent glare on the screen, or when folding the Stroller to avoid any damage.




E-BRAKE FEATURES

BATTERY LIFE

A fully charged battery, should provide approximately 10 days of e-brake use, before the need to recharge.

NOTE: It is recommended to switch off the LCD Screen when the stroller is not in use, for example when left standing overnight or over the weekend, to save some battery power.

If the stroller is not used or is stored for long periods, the battery should also be switched off. However any recorded Calories or Distance may be lost. The Time will also need to be reset when the battery is switched back on.

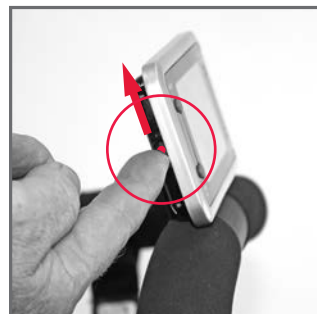


E-BRAKE HANDLE ACTIVATIONS - FRAME OPENING & CLOSING

Please refer to page 15 & 42.

It is recommended to switch off the LCD screen when Opening or Closing the stroller.

1. It will prevent multiple and unnecessary 'activations' during handling.
2. It will save battery power while the Stroller is being transported or stored.

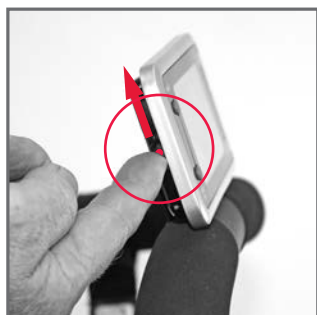

A. Switch off the LCD Screen.
See above for more information.



B. Remove Stroller top seat
and fold the frame.




C. Folded frame and top seat.

E-BRAKE FEATURES

BATTERY BAR SEQUENCE & TIME / USAGE

A fully charged battery will show all 4 full bars.





As the battery power is used, the first 3 full bars will progressively disappear indicating the battery power is getting low.

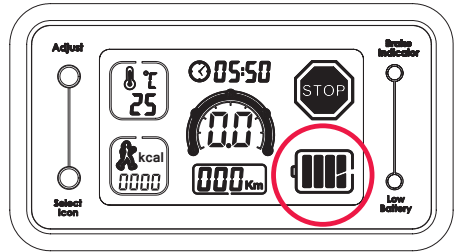

Two half bars of Battery Charge will remain and RECHARGE indicators will start to alert you for the need to soon recharge the Battery.

When the battery gets down to the two last half bars, at this point a flashing recharge signal will appear with an audible 'beep'. The RED 'low battery warning light' will also appear and flash on/off.


You can cancel the 'beep' and 'recharge' flashing signal by pushing the Adjust or Select Icon button. The RECHARGE Icon will remain visible as a reminder to recharge the battery soon.

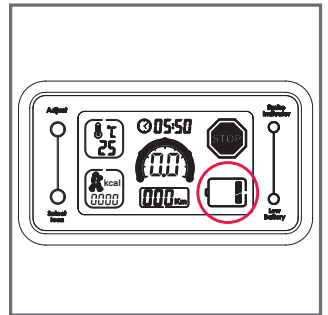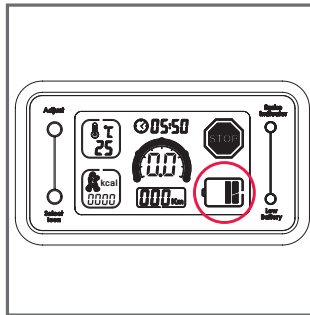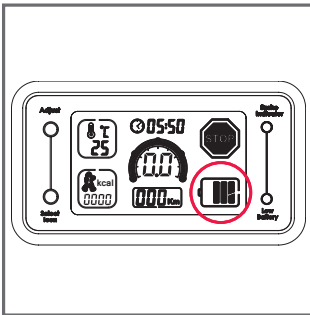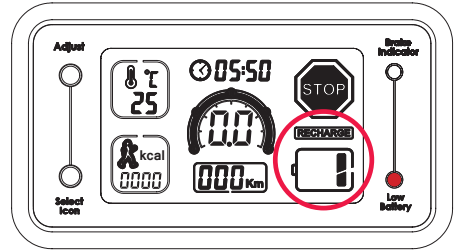

E-BRAKE FEATURES

BATTERY BAR SEQUENCE & TIME / USAGE cont'd

At this battery power level, you will still have around 2 days e-brake usage, so no need to panic. However, it is recommended to recharge the battery overnight.

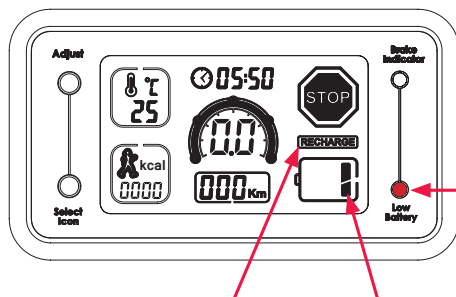

Low Battery Warning Light

When Battery power is low, the RED light will also flash on/off.

Low Battery Recharge Indicator

When Battery power is low, the RECHARGE ICON will flash.

Two 'Low Battery' Warning Bars

The battery will need to be charged again soon.

When the battery gets down to the last half bar, there will be another final RECHARGE reminder. It is time to Recharge the battery.

At this point:

The LCD Screen will flash on and off.


The RECHARGE indicator will flash.

The Red 'low battery warning light' will also appear.

You will hear an audible beep.

Note: You can cancel the flashing screen and audible beep by pressing the ADJUST or SELECT button.

The RED Warning light will stay on and the Recharge Icon will remain as a reminder to recharge the battery.

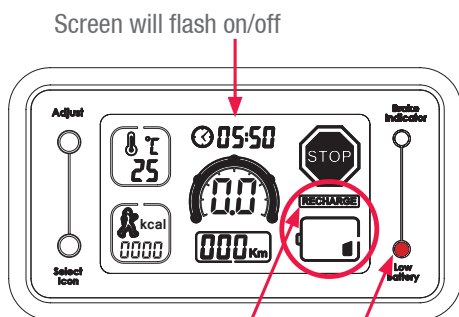

Screen will flash on/off

Recharge ICON will flash on/off

Red Warning Light will flash on/off

E-BRAKE FEATURES

BATTERY BAR SEQUENCE & TIME / USAGE cont'd

- A. If you are not in a position to recharge the battery, it is recommended to switch the LCD Screen or Battery off and revert to the manual brake mode. See page 19 for manual brake mode instructions.
- B. To go from e-Brake to manual brake mode, hold the handle, then apply the manual foot brake so the Stroller brake is locked on, and then switch off the LCD Screen. Use the Stroller in manual brake mode now.
- C. If you are not holding the handle when switching off the LCD Screen, the brake pedal will need to be pressed twice to release for manual model use.

IF THE BATTERY POWER RUNS OUT WHILE WHEELING THE STROLLER, OR YOU SWITCH OFF THE LCD SCREEN.



WARNING - ALWAYS USE THE STROLLER TETHER STRAP PROVIDED.

If you were holding the Stroller handle and the battery power runs out, the brake will stay 'open' or unlocked, and you will now be in manual mode by default. Use the Stroller in manual brake mode until the battery can be recharged.



If you were **not holding the handle** when the battery power ran out, the manual brake will have engaged and be showing Red. **You may have to press the brake pedal twice to release it for manual brake mode.**

Once to release e-Brake function, and once to release into manual brake mode.

Use the stroller in manual brake mode until the battery can be recharged.




E-BRAKE FEATURES

BATTERY CHARGING OPTIONS

IMPORTANT NOTE: The battery must be switched ON AT ALL TIMES when charging.

Note: If the battery is totally flat, or requires some charging, when placed on charge, the Battery charge light indicator will show Orange from the beginning, and change to Green when fully charged.

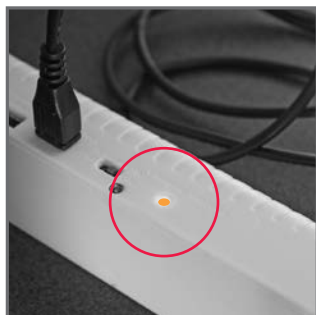

Option 1

- A. Remove the battery from its case by reversing the installation procedure. Plug the battery cable into the Micro port and Charger, then plug the charger supplied into a power point and fully charge the battery.
- B. If the battery is totally flat, full charge will take about 6 hours, so overnight charging is recommended.



Option 2

- A. With the battery still inserted into the Stroller battery case. Locate a convenient power point. Plug the battery cable into the battery Micro port and Charger. Plug the charger into the power point and charge the battery.
- B. If the battery is totally flat, full charge will take about 6 hours, so overnight charging is recommended.

E-BRAKE FEATURES


MOBILE PHONE CHARGING

For those occasions where your mobile phone might be out of charge at a bad time. The battery includes a USB port to allow for short phone charging or phone calls. The USB phone charging feature is not available if the battery power drops below 30%. This is to ensure the functionality of the Electronic Brake.


IMPORTANT NOTE: The battery charge will be reduced for e-brake Stroller usage , when using this USB phone charging feature.



Plug the phone cable into the battery USB port for short phone charging.

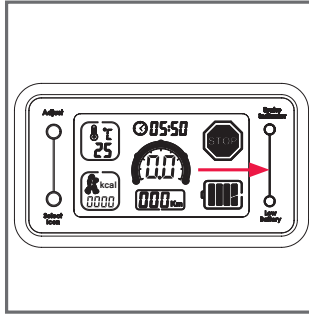

The battery bars will show power is being drained from the battery whilst the phone is charging.

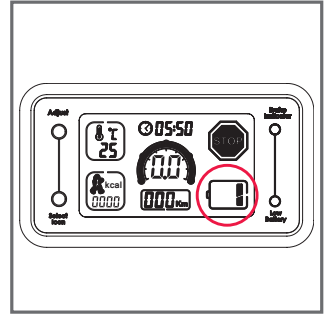

IMPORTANT NOTE: When the battery power is low, to ensure e-brake function at this level, phone charging is blocked out when the battery power drops below 30%.

E-BRAKE FEATURES

USING THE E-BRAKE STROLLER - SUMMARY

WARNING: ALWAYS USE THE TETHER STRAP WHEN USING THE STROLLER.

Before using or pushing the stroller, make sure you place your hand through the Tether Strap. The e-Brake is not a substitute for using the tether strap or applying the manual brake.

The e-Brake function relies on the battery being charged and both the battery and LCD screen switched on and you having at least one hand on the handle at all times.

- A. Follow the stroller instructions and make sure your child is correctly harnessed into the stroller.
- B. With the battery and LCD screen switched on, grasp the handle and you will hear an audible 'click'. The indicator on the left wheel moulding will now be showing green.
- C. Hold onto the handle with one or two hands and push the stroller.
- D. If you remove both hands from the stroller, the e-Brake will automatically engage and the stroller will stop. The indicator on the left wheel moulding will be showing Red.
- E. To push the Stroller again, simply hold the handle with one or two hands to release the e-brake and push to go forward or pull backwards.

THE E-BRAKE STROLLER CAN ALSO BE USED IN REGULAR MANUAL BRAKE MODE.

WARNING: USE THE TETHER STRAP AT ALL TIMES

NOTE: To go from E-Brake mode to Manual Brake mode.

- A. In e-brake mode, if you are holding the stroller handle, the e-brake will be open and the brake indicator will be Green. Continue to hold the stroller handle with one hand, and with the other hand, switch off the LCD Screen. The Stroller brake indicator will remain Green and is now in manual brake mode.
- B. In e-brake mode, **if you are NOT holding the stroller handle, and switch off the LCD Screen**, the e-brake will be locked and the brake indicator will be Red.

To place the Stroller brake into manual brake mode, the brake pedal needs to be pressed twice. Once to release the e-brake function, and once again to place into manual mode. The brake indicator should now be Green. See page 19.

E-BRAKE FEATURES

THE E-BRAKE STROLLER CAN ALSO BE USED IN REGULAR MANUAL MODE cont'd



Rear frame and brake pedal



Green indicator showing –
Brake is off and rear wheels
are unlocked.



Red indicator showing –
Brake is on and rear wheels
are locked

Push down on the spring loaded brake pedal then take your foot off pedal. The brake should return to its highest position. If the left wheel indicator is Green, the stroller is ready to push.

To lock the brake again, push the brake pedal down to lock the brake until you need to use the stroller. The left wheel indicator should be Red.

TO RETURN THE STROLLER FROM THE MANUAL MODE BACK TO E-BRAKE MODE

- A. With your foot, push the brake pedal down so the brakes lock. The left wheel indicator should also be Red.
- B. Switch the LCD screen back on. (Also switch the battery on if previously turned off).
- C. Grasp and hold onto the handle, then with your foot, push down on the spring loaded Brake pedal then take your foot off the pedal. The brake pedal should return to its highest position and the left wheel indicator should be green.
- D. Release the handle and the e–Brake system is now activated and locked again. The left wheel indicator will be Red. Grasp the handle to press the e–Brake and push the Stroller.

OPTIONAL ACCESSORIES

(SOLD SEPARATELY)



Britax Click & Go

Section Two: Bassinet



Steelcraft



Britax Unity Click & Go

Section Three: Infant Carriers



Section Four: Second Seat

WARNINGS - BASSINET



WARNINGS

BRITAX CLICK & GO BASSINET

- DO NOT USE THE BASSINET ONCE THE CHILD CAN SIT UP.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9KGS.



IMPORTANT NOTES:

- THE BRITAX CLICK & GO, STRIDER AND STRIDER PLUS BASSINETS ARE THE ONLY BASSINETS DESIGNED TO FIT THE E-BRAKE STROLLER.
- REMOVE THE STROLLER SEAT OR INFANT CARRIER FROM THE FRAME BEFORE FITTING BASSINET.
- ALWAYS REMOVE YOUR CHILD FROM THE BASSINET BEFORE FITTING OR REMOVING FROM THE STROLLER FRAME.
- THE BASSINET MUST ALWAYS FACE TOWARDS THE HANDLE.
- THE BASSINET MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- DO NOT LIFT THE STROLLER BY THE BASSINET.
- THE BRITAX CLICK & GO RECEIVERS SUPPLIED WITH STROLLER, MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALLING AND USING THE CLICK & GO BASSINET. SEE PAGES 70–74.

HOW TO SETUP



IMPORTANT NOTES:

- THE BRITAX CLICK & GO RECEIVERS SUPPLIED WITH STROLLER, MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALLING AND USING THE CLICK & GO BASSINET OR BRITAX UNITY CLICK & GO INFANT CARRIER.



PARTS LIST - BASSINET (Sold Separately)



Bassinet
Frame



Bassinet
Liner



Bassinet
Mattress



Bassinet
Boot cover

HOW TO SETUP

BRITAX CLICK & GO BASSINET ASSEMBLY, FITTING & REMOVAL

PLEASE REFER TO PAGE 13 FOR SMART LIFTING TECHNIQUES.



A. To assemble bassinet, locate straps in the centre of the frame support rods and pull straps slowly outwards until each rod slides and locks under all 4 clips.



B. Frame support rods need to be locked under all 4 clips. Press down on the top edges to confirm they are locked in place.



C. Open/Close canopy by pressing and holding each button on the outside of the canopy pivot joint, before rotating carry handle to vertical or other position.



D. Fit the liner by stretching it over both ends and corners of the Bassinet. Ensure Body Band faces upwards.




E. Fasten hook and loop tabs around the handle mouldings. Attach hook and loop tabs on the canopy to the liner.



F. Fold canopy down and insert the mattress into the Bassinet.

HOW TO SETUP


BRITAX CLICK & GO BASSINET ASSEMBLY, FITTING & REMOVAL cont'd

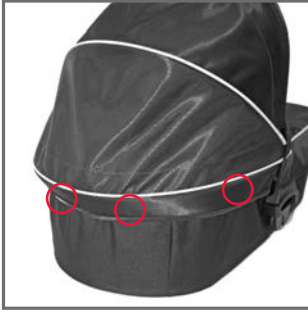

- G. Place the Bassinet bootcover on top of the Bassinet and attach the corners to the hook & loop at the bottom front edge of the canopy.



- H. NOTE: The body band feature. To use the body band, remove the mattress, open the body band, and then place the mattress back into the Bassinet. When not in use, store the body band under the mattress.

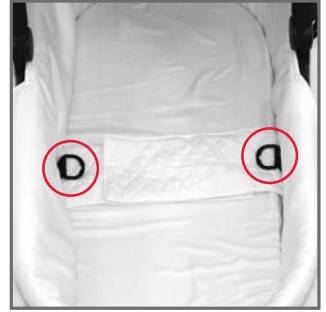

- I. NOTE: D-rings in the base of the Bassinet for optional baby harness installation. A baby harness is not supplied, but can be purchased separately at an Independent baby store.

NOTE: The bassinet should only be installed rearward (facing mother position) on the Stroller frame. The frame will not fold with bassinet installed so it must be removed before folding.



IMPORTANT NOTE:

THE BRITAX CLICK & GO RECEIVERS SUPPLIED WITH THE STROLLER, MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALLING AND USING THE CLICK & GO BASSINET. SEE PAGE 74.

HOW TO SETUP

BRITAX CLICK & GO BASSINET ASSEMBLY, FITTING & REMOVAL cont'd



J. Fit the left and right side Click & Go receivers to the Stroller frame. Pull up on each to confirm they are locked in.



K. Line up the Bassinet mouldings with the sockets in the receivers attached to the Stroller frame.



L. Lower the Bassinet into the receivers until they engage into the sockets on both sides.



M. Ensure the Bassinet is securely locked on by trying to pull it up.



N. To remove the Bassinet, place each hand on each side of the Bassinet release latches. Squeeze them up and lift the Bassinet out of the receivers.



O. To remove the Receivers, press down on each release button and remove the receivers from the stroller. Place them in a convenient location to use again. For example in the Accessory Bag pocket.

WARNINGS - INFANT CARRIER



WARNINGS

STEELCRAFT & STRIDER INFANT CARRIERS

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STEELCRAFT OR STRIDER PRODUCT IS NOT TO EXCEED 9kg.



IMPORTANT NOTES:

- THE STEELCRAFT & STRIDER INFANT CARRIERS ARE COMPATIBLE INFANT CARRIERS DESIGNED TO FIT THE E-BRAKE STROLLER AND SECOND SEAT FRAME.
- THE INFANT CARRIER OR INFANT CARRIERS MUST BE CORRECTLY FITTED AND LOCKED ONTO THE E-BRAKE STROLLER OR SECOND SEAT FRAME.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- WHEN LOCKED ONTO THE SECOND SEAT FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE FORWARD FACING POSITION, FITTED FACING TOWARDS THE FRONT OF THE STROLLER.
- SECURE EACH CHILD USING THE INFANT CARRIER OR INFANT CARRIERS HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILDREN IN THE INFANT CARRIERS FOR EXTENDED PERIODS.
- THE INFANT CARRIERS ARE DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT THEY SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER/CARRIERS MUST BE REMOVED FROM THE STROLLER FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

PLEASE NOTE: FOR PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

HOW TO SETUP

STEELCRAFT & STRIDER INFANT CARRIERS, FITTING & REMOVAL



A. Remove Stroller seat or Bassinet from frame, (see pages 25, 74). The Infant Carrier must face the Stroller handle. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings on either side, directly over the frame mouldings. Notice the indicator is GREEN.




B. Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely in frame.



C. By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN Indicator will now turn to RED.



D. Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until you hear it lock into the frame.

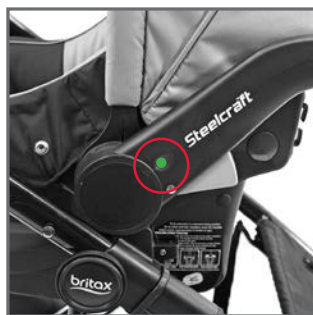

E. The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame. If indicator is RED the Infant Carrier handle is not in the locked position, repeat step D.

HOW TO SETUP

STEELCRAFT & STRIDER INFANT CARRIERS, FITTING & REMOVAL cont'd



F. Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps A to E.



G. Secure your baby into the Infant Carrier by the harness provided. (Refer to Instruction manual that comes with Infant carrier).



H. To remove the Infant Carrier, squeeze both handle latches in to release the locks. The indicator will now be RED.



I. Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.



J. Lift and remove the Infant Carrier away from the Stroller.

WARNINGS - INFANT CARRIER



WARNINGS

BRITAX UNITY CLICK & GO INFANT CARRIER

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STEELCRAFT OR STRIDER PRODUCT IS NOT TO EXCEED 12kg.



IMPORTANT NOTES:

- THE BRITAX UNITY CLICK & GO INFANT CARRIER IS A COMPATIBLE INFANT CARRIER DESIGNED TO FIT THE E-BRAKE STROLLER FRAME.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE E-BRAKE STROLLER FRAME.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER CAN BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE, OR FACING FORWARD POSITION.
- SECURE EACH CHILD USING THE INFANT CARRIER HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILDREN IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE STROLLER FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

PLEASE NOTE: FOR PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

HOW TO SETUP

BRITAX UNITY CLICK & GO INFANT CARRIER, STROLLER FRAME - FITTING & REMOVAL

WARNING: THE BRITAX UNITY CLICK & GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE ATTEMPTING TO INSTALL THE BRITAX UNITY CLICK & GO INFANT CARRIER. SEE PAGE 70.



A. Remove the Stroller Seat or Bassinet from the frame.



B. Install the left and right side Britax Unity Click & Go Receivers and lock them into the Stroller frame. The connector ribs face to the inside.



C. With the Infant Carrier handle in the upright position, locate the Infant Carrier connector adaptors on both sides, directly over the Stroller and Britax Unity Click & Go Receivers.



D. Push down on the Infant Carrier and make sure it has locked into the receivers. Pull up on the Infant Carrier to confirm it is locked into place.



E. Secure your baby into the Infant Carrier with harness provided. Refer to the Britax Unity Click & Go Instruction Manual that comes with the Infant Carrier.



F. To remove the Infant Carrier, place the handle in the upright position. If the handle has been reclined, squeeze both carry handle release latches and rotate the handle into the carry position.

HOW TO SETUP

BRITAX UNITY CLICK & GO INFANT CARRIER, STROLLER FRAME - FITTING & REMOVAL cont'd

WARNING: THE BRITAX UNITY CLICK & GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE ATTEMPTING TO INSTALL THE BRITAX UNITY CLICK & GO INFANT CARRIER.



G. Squeeze both left and right release latches simultaneously and support the weight of the Infant Carrier.



H. Lift and remove the Infant Carrier from the Stroller Frame.



I. NOTE: Remove the Infant Carrier before folding the Stroller frame.

WARNINGS - SECOND SEAT


WARNINGS

- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 17kg.**

IMPORTANT NOTES:

- DO NOT USE THIS SEAT WITH ANY OTHER MODELS OF STROLLER.
- THE SECOND SEAT MUST BE CORRECTLY FITTED AND LOCKED ONTO THE SECOND SEAT FRAME.
- THE SECOND SEAT CAN ONLY BE USED IN THE FORWARD FACING POSITION, CONNECTED TO THE REAR OF THE STROLLER.
- DO NOT OVERLOAD THE STROLLER. OVERLOADING WILL CAUSE THE STROLLER TO TIP BACKWARDS.

PARTS LIST - SECOND SEAT

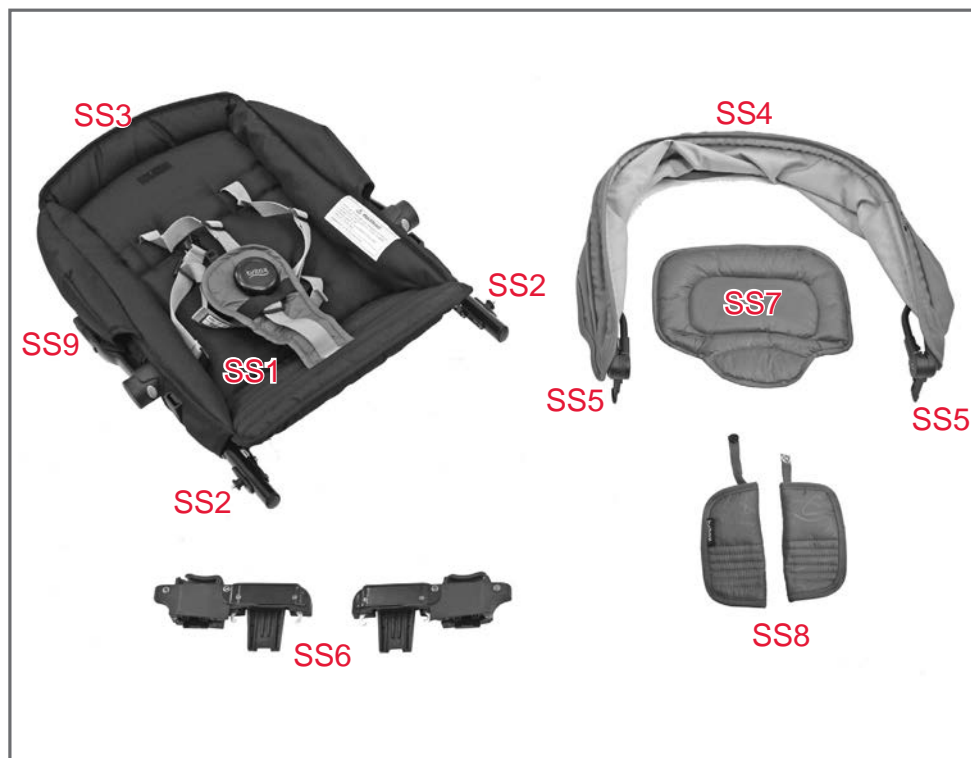

- SS1. Second Seat assembly
- SS2. Second Seat engaging pins (2)
- SS3. One hand, 3 position reclining backrest
- SS4. Adjustable/removable canopy
- SS5. Canopy Release Tabs
- SS6. Steelcraft Receivers (2)
- SS7. Head Pillow
- SS8. Shoulder pads (2)
- SS9. Second Seat leg tube


HOW TO SETUP

TO FIT THE SHOULDER PADS

NOTE: The long shoulder pad strap needs to be threaded through the button hole and attached to the short strap on the other side. This will prevent the shoulder pads from slipping off.




A. Release the harness buckle and separate the harness. See page 32 Thread each shoulder harness down through each shoulder pad.

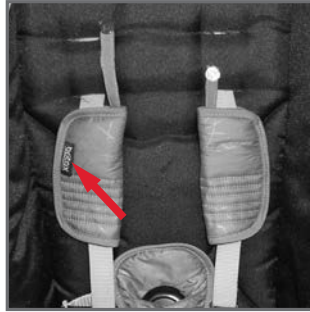

B. Note the shoulder pad orientation. Britax logo on left side with long strap. No logo on pad with short strap on right side.



C. Thread the long strap through the left button hole and across to the right side.

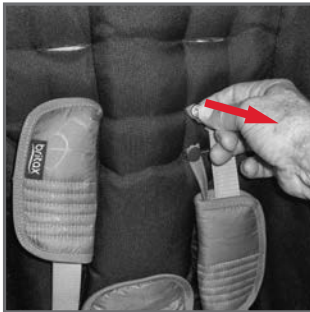

D. Pull the strap out through the button hole.




E. Connect the press studs to hold the shoulder pads together.



F. Position the shoulder pads so they fit comfortably to the child.

HOW TO SETUP

TO FIT THE HEAD PILLOW

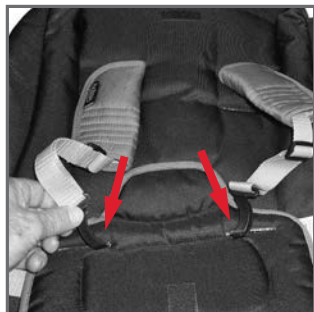

A. Thread each shoulder harness and shoulder pad through each head pillow button hole.



B. Pull each shoulder harness and pad through the front side on the head pillow.



C. Position the shoulder pads so they fit comfortably to the child.

HOW TO SETUP

TO FIT, USE & REMOVE THE CANOPY



IMPORTANT NOTE:

- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN



A. To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.



B. Attach the canopy hook strips to the pile strips around the top of the frame for a secure fit.



C. To adjust the canopy, open by pulling forward, or close by pushing it backward. To remove the canopy see page 99 (C).



D. The window cover is kept in place by a hidden magnet located at the bottom of the window cover.



E. To open the window cover, simply lift the cover and place it on top of the canopy.

HOW TO SETUP

FITTING SECOND SEAT TO THE STROLLER



IMPORTANT NOTES:

PLEASE REFER TO PAGE 13 FOR SMART LIFTING TECHNIQUES.


- WHEN FITTING, OPENING OR FOLDING THE SECOND SEAT, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED OR UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.

NOTE: For more space between top seat and second seat, attach receivers. See page 96.

NOTE: For easier installation, rotate the Pivotal Handle in the most upright position.



A. Remove the Accessory Bag if fitted. Apply the Stroller brake, rotate the pivot handle up to create more assembly space. Adjust the Stroller seat to the most upright position.

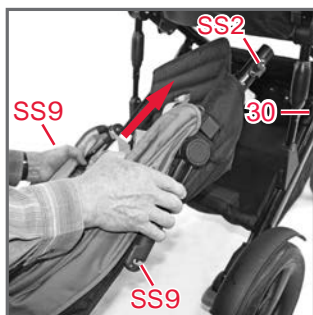


B. The Second Seat connecting pins (SS2) need to lock into the frame mouldings (30). Hold the Second Seat frame so the leg tubes (SS9) are underneath and facing the head end of the Second Seat.



C. While holding the Second Seat, hook the connecting pins (SS2) into the frame mouldings (30), then pull downwards.

HOW TO SETUP

FITTING SECOND SEAT TO THE STROLLER cont'd

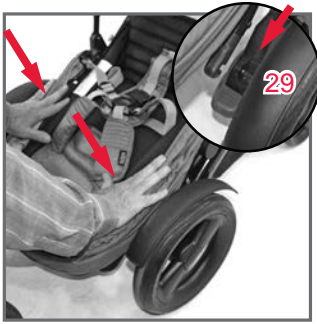

D. Lower the Second Seat frame and push down to lock the leg tubes (SS9) into the lower Stroller frame mouldings (29). Repeat step D if the frame doesn't lock into place.



E. Pull up on the Second Seat frame to make sure it is locked onto the Stroller frame. Ensure to grasp the Second Seat frame as shown above.



F. Raise the backrest adjusting lever and lift the head end of the Second Seat so that the foot end slides all the way down the Stroller frame and engages into the Stroller frame.



G. Second Seat in upright seat position.

HOW TO SETUP

ADJUSTING THE BACKREST



WARNINGS

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.



A. Adjust to desired seating position by using the one hand backrest adjusting lever. Lift the lever all the way up and at the same time, lift up on the seat.



B. The seat will slide up and down the frame. Lock into any one of 3 seating positions by releasing the backrest adjusting lever and allow the seat to engage at the desired position.

To remove the Second Seat, see Page 95.

HOW TO SETUP

HARNESS ADJUSTMENT




WARNINGS


USE THE HARNESS AT ALL TIMES

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness, please follow the steps below carefully.

NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.

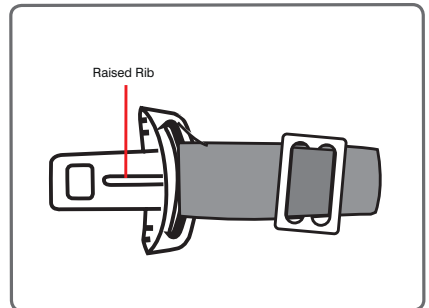

- A. Set parking brake. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

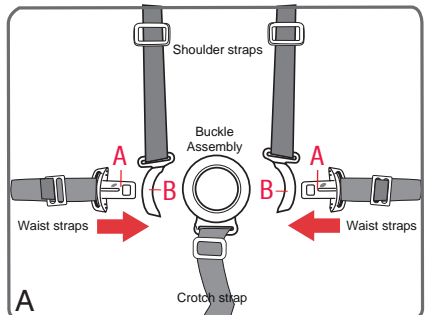


HOW TO SETUP

HARNESS ADJUSTMENT cont'd


- B. **Note:** Ensure the straps are not twisted as they may become uncomfortable for the child.

Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

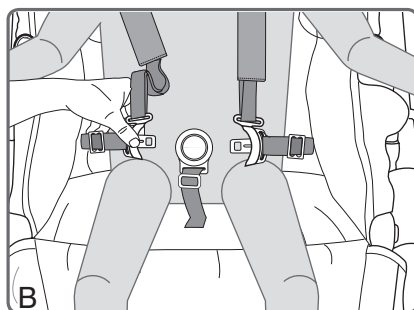


Press in & hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

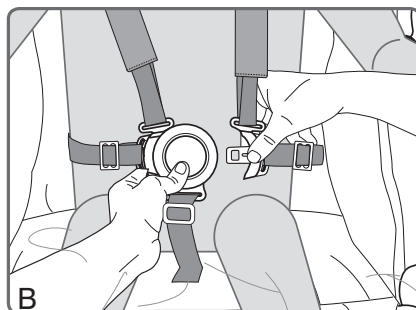

- C. Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. Crotch strap should be adjusted to a snug fit.

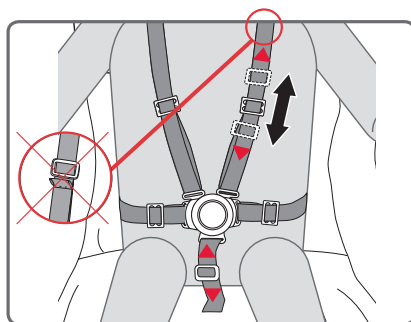


 **CAUTION:** DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.


HOW TO SETUP

HARNESS ADJUSTMENT cont'd

- D. Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

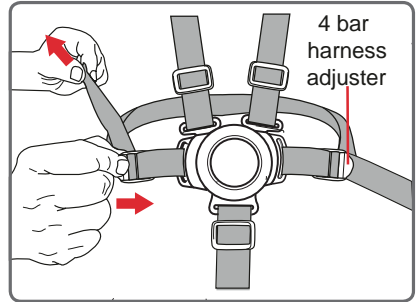


- E. Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

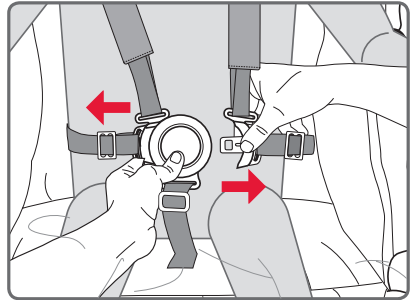

- F. The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.

Rethread the harness through desired harness slot.

*Depending on the model

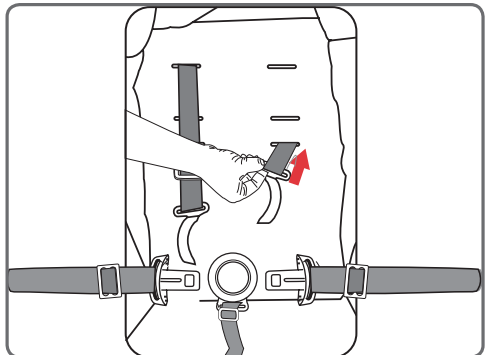

HOW TO SETUP

TO ADJUST THE HEAD PILLOW HEIGHT POSITION



A. Attach the head pillow Hook strip to the soft strip on the Second Seat.



B. Adjust the Head Pillow height as required.

TO FIT THE BOOTCOVER

A. Fit the bootcover inside the basket and over the bottom section of the Second Seat.



HOW TO SETUP

FOLDING THE SECOND SEAT WITH THE FRAME



IMPORTANT NOTES:

PLEASE REFER TO PAGE 13 FOR SMART LIFTING TECHNIQUES.

- WHEN OPENING OR FOLDING THE SECOND SEAT, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED OR UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING OF THE STROLLER.



IMPORTANT NOTE:

INCORRECT FOLDING MAY CAUSE DAMAGE THE STROLLER & FRAME. PLEASE FOLLOW THE FOLDING INSTRUCTIONS CAREFULLY.

NOTE: If folding the Stroller with the Second Seat attached, you must adjust the stroller pivot handle to the regular or highest position, to prevent the handle from coming in contact with the second seat and causing damage to the stroller. Please refer to section 4.10 for detailed folding instructions.

REGULAR POINT



HIGHEST POINT



LOWEST POINT



HOW TO SETUP

FOLDING THE SECOND SEAT WITH THE FRAME cont'd




IMPORTANT NOTES:

- ALWAYS REMOVE YOUR CHILD FROM THE SECOND SEAT BEFORE FOLDING OR REMOVING THE SECOND SEAT.
- FOLD THE SECOND SEAT BEFORE FOLDING THE STROLLER.



A Fold the canopy back, then fully lift up the backrest adjusting lever and lower the Second Seat to the lowest position.

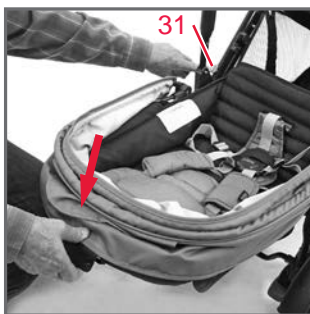

B. While still holding the backrest adjusting lever up, press the safety lock button (31) down and continue to lower the head end of the Second Seat.

C. Continue to lower the Second Seat, the foot end of the Second Seat will slide up the frame to the folded position.

D. The Second Seat is shown in the fully folded position above. To fold the Stroller frame see page 43–45.

HOW TO SETUP

REMOVING THE SECOND SEAT FROM THE STROLLER FRAME



IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE SECOND SEAT BEFORE FOLDING OR REMOVING THE SECOND SEAT.




A. First, fold the Second Seat up under the frame – see page 94.




B. With the Second Seat in the folded position, locate the release buttons (SS5) on both sides of the Second Seat frame.



C. Wrap your hands around the Second Seat Frame and fully depress the release buttons until you see the adjacent buttons pop out of the mouldings.

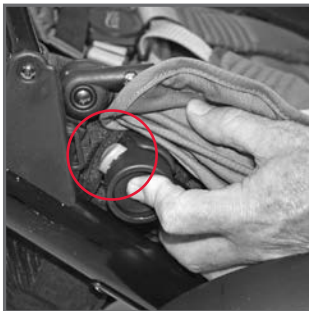

D. The adjacent buttons pop out of the mouldings when the release buttons are fully depressed.

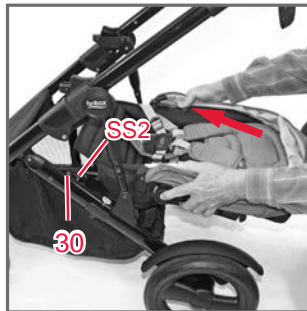

E. A gentle upward, then forward motion (as indicated by the arrow) will be required to release the Second Seat connecting pins (SS2) out of the frame mouldings (30).



F. Lift the second seat out and away from the frame.


HOW TO SETUP

TO USE THE RECEIVERS SUPPLIED WITH THE SECOND SEAT

NOTE: Steelcraft Receivers are supplied with the second seat to create more space between the top seat if required, when using the second seat or Infant Carrier.




A. Align the receivers with the Stroller frame mouldings as the receiver extends towards the front of the Stroller and the ribbed section of the mouldings face inwards.

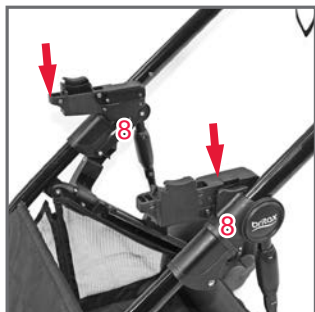

B. Press down on the receivers to lock into the Stroller frame mouldings (8).



C. Pull up on the receivers to make sure they are locked on.

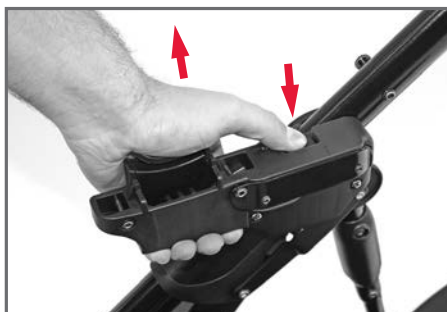

D. To remove the receivers, push down and hold the button, then pull the receivers up and out of the moulding.

HOW TO SETUP

TO INSTALL THE STROLLER SEAT USING THE RECEIVERS



- A. Lock the Stroller seat into the receivers in the forward facing position.



- B. Pull up on the Stroller Seat on both sides to make sure it has engaged and locked into both receivers.

Adjust the Stroller backrest angle as required.

HOW TO SETUP

TO INSTALL THE STEELCRAFT INFANT CARRIER USING THE RECEIVERS



IMPORTANT NOTE:

DO NOT INSTALL THE STEELCRAFT INFANT CARRIER IN A FORWARD FACING POSITION, EVEN WHEN USED IN CONJUNCTION WITH THE SECOND SEAT. THE INFANT CARRIER MUST ALWAYS FACE REARWARDS.



A. Lock the Infant Carrier into the receivers, with the Infant Carrier facing towards the Stroller handle. See page 96.




B. Pull up on the Infant Carrier to make sure it is locked in.



CAUTION: INFANT CARRIER MUST BE CORRECTLY ATTACHED (SEE FITTING AND REMOVAL PAGES 76).

HOW TO SETUP

REMOVING SOFT GOODS FROM SECOND SEAT FRAME

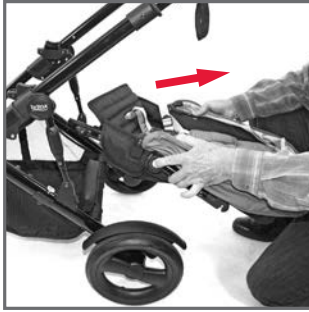


A. To fit the infant carrier to the second seat frame, you must first remove the second seat from the stroller and remove the soft goods.



B. Lay the Second Seat frame on a flat surface facing upwards. Release hook and loop tabs which attach the canopy to the top of the Second Seat.



C. To remove the canopy, press in and hold the release tabs while pulling the canopy out of the frame mouldings.

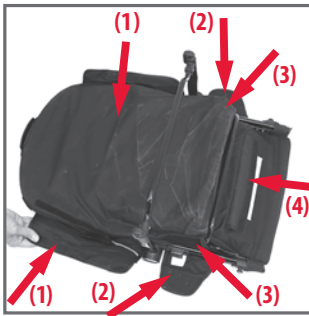

D. Turn the Second Seat over so it is facing downwards, then release all the hook and loop tabs.



E. Undo the D rings from the webbing loop on either side of the softgoods by sliding the webbing through the slot in the D ring.



F. Release hook and loop tab (1 & 2) on both sides.

HOW TO SETUP

REMOVING SOFT GOODS FROM SECOND SEAT FRAME cont'd



G. Release hook and loop tab on both sides.




H. Release hook and loop tab.



I. Pull the fabric pocket off from both bottom frame posts.



J. Pull the fabric clear of the mouldings and pull the fabric off the frame. The following steps explain how to fit the Second Seat frame to the stroller.

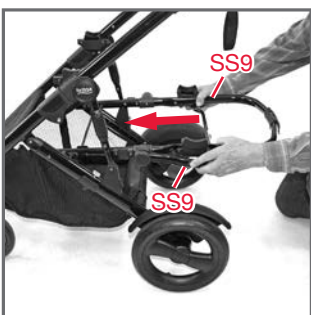

K. Reconnect the Second Seat frame to the Stroller. The Second Seat connecting pins (SS2) need to lock into the frame mouldings (30). Hold the Second Seat frame so the leg tubes (SS9) are underneath and facing the head end of the Second Seat.




L. Hold the Second Seat and hook the connecting pins (SS2) into the stroller frame mouldings (30), then pull downwards.

HOW TO SETUP

REMOVING SOFT GOODS FROM SECOND SEAT FRAME cont'd



M. Lower the Second Seat frame and push down to lock the leg tubes (SS9) into the lower Stroller frame mouldings (29). Repeat step L if the frame doesn't lock into place.

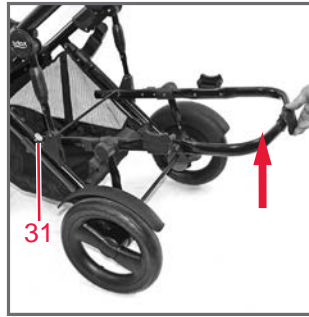

N. Raise the backrest adjusting lever and lift the head end of the Second Seat so that the foot end slides down the Stroller frame and engages into the second lock (31). When locked, frame is slightly above horizontal.

FITTING & REMOVING THE STEELCRAFT INFANT CARRIER FROM SECOND SEAT FRAME



A. For easier installation, remove Stroller seat or Infant Carrier from frame, (pages 25 & 77). The Infant Carrier must face towards the front of the stroller. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings on either side, directly over the second seat frame mouldings. Notice the indicator is GREEN.

HOW TO SETUP

FITTING & REMOVING THE STEELCRAFT INFANT CARRIER FROM SECOND SEAT FRAME cont'd



B. Push down on the Infant Carrier and make sure it is placed in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame.



C. By squeezing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN Indicator will now turn to RED.



D. Release the handle latches then push the Infant Carrier handle all the way down until you hear it lock into the frame.



E. The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame. If indicator is RED the Infant Carrier handle is not in the locked position, repeat steps E & F.



F. **IMPORTANT:** Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked in on both sides, repeat steps E to G.



G. Secure your baby into the Infant Carrier by the harness provided. (Refer to the Instruction manual which comes with the Infant carrier).

HOW TO SETUP

FITTING & REMOVING THE STEELCRAFT INFANT CARRIER FROM SECOND SEAT FRAME cont'd



- H. To remove the Infant Carrier, squeeze both handle latches in to release the locks.

The indicator will now be RED. Rotate the handle forward.



- I. Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be GREEN.



- J. Lift and remove the Infant Carrier away from the Second Seat frame.

NOTE: To create more space on the Stroller frame between the top and lower sections, fit and use the Receivers to create more space between upper and lower occupants.



HOW TO SETUP

REFITTING THE SOFTGOODS TO THE SECOND SEAT FRAME



A. Lay the Second Seat frame on a flat surface as shown above.



B. Pull the fabric over the frame.



C. Ensure the latch at the top of the frame is pulled through the cutout in the fabric cover.



D. Stretch the bottom of the cover to refit the fabric pocket on the bottom frame post. Repeat for both sides.



E. Re-attach all the hook and loop tabs and pull the mouldings through the holes in the soft goods.



F. Attach hook and loop tab (1) on both sides.

HOW TO SETUP

REFIT THE SOFT GOODS TO THE SECOND SEAT FRAME cont'd



G. Attach hook and loop tab (3) on both sides.



H. Attach hook and loop tab (2) on both sides making sure the canopy moulding on the top side of the frame is exposed.



I. Reattach the D rings to the webbing loop on either side of the softgoods by sliding the webbing through the slot in the D ring.



J. Turn the Second Seat over so it is facing upwards. To attach the canopy, insert the canopy mouldings onto the frame mouldings until they snap in.



K. Attach the canopy hook strips to the pile strips around the top and sides.

NOTE: Removal of the Second Seat soft goods is the reverse instructions of the above procedure.

CARE AND MAINTENANCE

- To prolong the life of your stroller and accessories keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach – completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If the wheels or suspension squeak, use a silicon based spray ensuring it penetrates all of the wheel and axle or suspension assembly parts.
- If there are compression marks on the tyres – Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners – tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



[youtube.com/britaxaustralia](https://www.youtube.com/britaxaustralia)



[facebook.com/britaxaustralia](https://www.facebook.com/britaxaustralia)



twitter.com/britaxaustralia



[pinterest/britaxaustralia](https://www.pinterest/britaxaustralia)



britax.com.au



1300 303 330



BRITAX CHILDCARE PTY.LTD.
A Britax International Company
ABN 55 006 773 6000
99 Derby Road Sunshine
Victoria 3020 Australia
Britax Childcare Pty Ltd
(Customer Service 1300 303 330)
Britax Childcare (NZ) Ltd
(Customer Service 0508 688 822)

Due to the variations in style and design of our products, the illustrations used in this instruction booklet are generic. We reserve the right to alter these products without notice. The Britax Trademark is the property of Britax Childcare Holdings Limited - UK.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prams and Strollers - Safety Requirements."

©2013 Copyright Britax Childcare Pty. Ltd. Australia

Art No. 4001785