AUSTRALIA

BRITAX CHILDCARE PTY. LTD A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road, Sunshine, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE

1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088 "Prams and Strollers - Safety Requirements".

©2010 Copyright Britax Childcare Pty. Ltd. Australia



Travel System Stroller



Suitable for use with Orion Infant Carrier (Sold Separately)
IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE





RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

WARNINGS CONTINUED



- Do not lift the stroller by the armrest because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- Always raise the leg support (where fitted) to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- It is unsafe to use accessories other than those tested and approved by Britax. For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket, or 1kg in the Canopy Pocket (if supplied).
- The maximum weight of the child using this product is not to exceed 17kg.

MPORTANT

 The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

WARNINGS CONTINUED

SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

PARTS LIST



A 1 x Stroller Frame



C 1 x Arm Bar



E 2 x Rear Wheels & Axle



B 1 x Basket



D 2 x Front Wheels

17. TO RELEASE THE INFANT CARRIER

A Squeeze both handle latches in to release the locks and rotate forward slightly. The indicator will now be RED.



B With one hand on handle continue to rotate the handle forward until it returns to the upright position. The indicator should now be GREEN.







C Lift and remove the Infant Carrier from the stroller frame.



16. TO INSTALL THE INFANT CARRIER (Cont)

F To lock the Infant Carrier onto the frame, squeeze in and hold the latches on either side of the handle, begin to rotate the handle backwards. The GREEN indicator will now start to turn RED. When the handle has been unlocked, release the handle latches.



 


Then with one hand holding the front of the Infant Carrier, use the other hand to push the Infant Carrier handle all the way down until it locks into the frame.





H The Infant Carrier handle indicator should now be GREEN and the Infant Carrier should be now be locked into the frame.

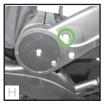


IMPORTANT: Pull up on both sides of the Infant Carrier and confirm it has locked into the frame.

Refer to the Infant Carrier instructions regarding placing and securing your baby in the Infant Carrier.

20

1. TO OPEN THE STROLLER

A Stand the frame upright and release the frame locks on either side of the frame. Open the frame slightly.

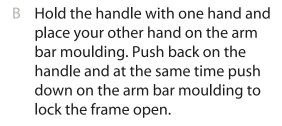

Make sure the frame has engaged and is locked into position. Push forward on the handle to confirm the frame is locked open. If not locked open, repeat step B.













 
2. TO INSTALL AND REMOVE THE FRONT SWIVEL WHEELS

A Take one front swivel wheel at a time and insert the post into the front wheel moulding. Push in until it locks into place. Pull on the wheel to make sure it is locked on.

B To remove the wheels, turn the plastic caps anti

clockwise and the wheels will release.



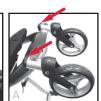



3. TO USE THE FRONT SWIVEL WHEELS LOCKS

- A To lock the front swivel wheels, press down both levers to the locked position. The swivel wheels will lock automatically when the wheels turn to straight forward position.
- A P

B To unlock the swivel wheels, raise both levers until the wheels are in swivel mode.

4. TO INSTALL THE REAR WHEELS

- A Lay the frame over onto its side.
- B Insert the axle into the rear leg moulding and push all the way down. Insert one wheel onto the axle.
- Press down and lock the plastic spring cap onto the axle.
- D Take the solid plastic cap and lock it onto the spring cap. Press down until it snaps on. Pull up on both to make sure they are locked on.





 










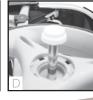

16. TO INSTALL THE INFANT CARRIER (CONT)

B The Infant Carrier can only be attached to the frame in the rearward facing position.

On each armrest, locate the Infant Carrier attachment covers. Lift up and open the covers.





Position the Infant Carrier handle mouldings directly over the frame mouldings. The Infant Carrier handle must be in the upright position.



Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame. You will notice the handle indicator is GREEN and the frame indicator is RED.





16. TO INSTALL THE INFANT CARRIER

WARNINGS

- THE SOLAR INFANT CARRIER IS THE ONLY INFANT CARRIER DESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.
- A Lock the brakes on the stroller and lock the front wheels into the fixed (non swivel) position. Fully recline the backrest and fold the canopy back.

4. TO INSTALL THE REAR WHEELS (Cont)

- E Now stand the frame upright and insert the other rear wheel onto the axle.
- F Hold the already locked on caps on opposite side with one hand to stop the axle from sliding, and then press the spring cap onto the axle to lock the wheel on. Now also fit the solid cap a in step D.
- G Fit the wheel caps by lining up the clips with the wheel holes. Press in until they are locked on.













NOTE: Regularly check that the wheel assembly parts are secure.

5. TO FIT THE BASKET

- A Loop the rear of the basket over the rear tube and engage all press studs.
- B Loop the front section of the basket to the tube under the seat. Engage the press studs.





18 www.britax.com.au www.britax.com.au www.britax.com.au

6. TO USE THE BRAKES

WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS NOT MOVING. THE STROLLER MAY ROLL AWAY EVEN IF LEFT UNATTENDED FOR A FEW MOMENTS.

A With your foot, press down the brake bar to lock the rear wheels. Gently push the stroller forwards and backwards a few times to make sure the brake is engaged. If not engaged, repeat again and ensure the brake is locked on.



 
B Lift the brake bar up to release the brake.

7. TO ADJUST THE LEG SUPPORT

- A Lower the leg support by pressing up the release latches located on both sides underneath the leg support. Then push the leg support down to the desired position.
- Raise the leg support by lifting it up until the release latches lock into the desired position.

15. TO FOLD THE STROLLER


A Fold the canopy back.

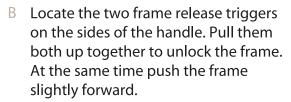






  - C Continue to hold the handle with one hand and place the other hand on the arm bar.
- Push forward on the handle and at the same time pull up on the armbar to close the frame.

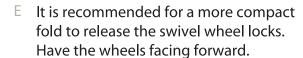

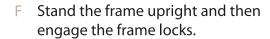











14. TO USE THE STROLLER

With your hand through the wrist tether strap loop, push the stroller holding both handles.

The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.

The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.

The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.

Caution is requires when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.

Whenever you stop, always apply the brakes before you leave the stroller.

8. TO ADJUST THE BACKREST

WARNING: ENSURE THAT YOUR CHILD'S LIMBS ARE IN THE CENTRE OF THE SEAT AND SUPPORT YOUR CHILD'S WEIGHT WHEN USING THE BACKREST.

- A Locate the adjusting bar on the back of the seat.
- To adjust the seat angle DOWN, squeeze and lift up the spring loaded lever and gently lower the seat down to the desired position.
- C To raise the backrest up, simply place your hand under the backrest and raise to the desired position.







9. TO FIT & ADJUST THE CANOPY

- A Locate the two canopy tubes over the mouldings.
- B Insert both tubes into the mouldings. Push down until both pins lock into the mouldings.





16 www.britax.com.au www.britax.com.au www.britax.com.au 09

9. TO FIT & ADJUST THE CANOPY (Cont)

- C To adjust the canopy, open the canopy by pulling the canopy forward or close it by pushing the canopy back.
- Attach the canopy backflap to the sides of the backrest with the hook and loop.



 




10. TO USE THE CANOPY WINDOW

A A viewing or ventilation window is fitted to the canopy. To open the canopy window pull the flap away from the canopy.



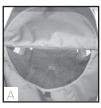

11. TO ADJUST THE PIVOTAL HANDLE


A To adjust the handle height, squeeze in and hold the buttons on the inside of the handle. Rotate the handle up or down to the desired position. When the desired height position has been achieved, release both buttons.







12. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

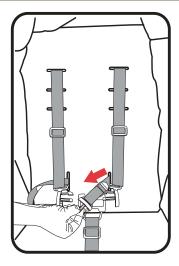

H Push the waist and crotch strap through the slot on the seat pad.


13. TO USE THE TETHER STRAP

WARNING: USE THE TETHER STRAP TO PREVENT THE STROLLER ROLLING AWAY.


A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.




12. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

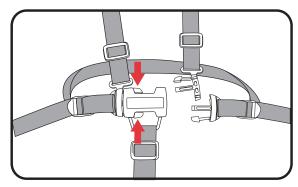

F To release the buckle. Squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

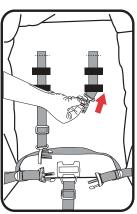

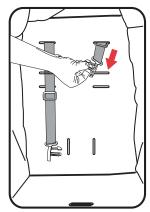

G The stroller seat has 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, either push the shoulder harness tongue in or out of the webbing tab on the seat and push through the correct harness slot on the seat pad.

12. TO SECURE YOUR CHILD IN THE HARNESS


WARNING: USE THE HARNESS AT ALL TIMES.

When not in use disconnect shoulder straps from the waist strap and buckle to prevent strangulation.

A five point harness is provided to restrain your child.

Buckle tongues separate for added safety.


To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

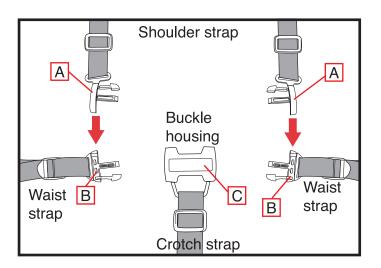


A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

www.britax.com.au www.britax.com.au www.britax.com.au 14

12. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

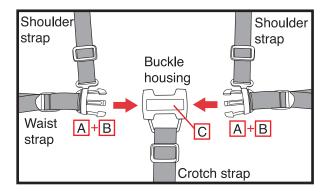


B Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.

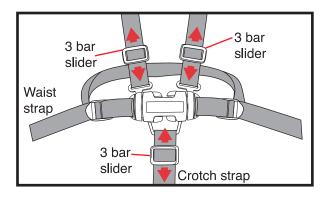


C Tighten or loosen shoulder and crotch straps by sliding up an down the 3 bar sliders.

12. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

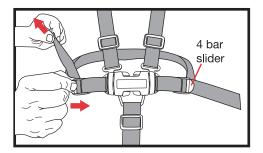

D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit. The waist strap needs to fit firmly around the child.

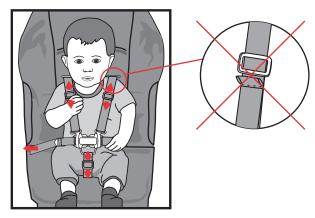

Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.