Stroller and

Travel System

INSTRUCTION MANUAL

BRITAX CHILDCARE PTY. LTD A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road, Sunshine, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088 "Prams and Strollers - Safety Requirements."

©2010 Copyright Britax Childcare Pty. Ltd. Australia



Suitable for use with Cruiser Infant Carrier (sold separately)
KEEP INSTRUCTIONS FOR FUTURE REFERENCE





WARNINGS

RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.

CARE AND MAINTENANCE

- To prolong the life of your stroller and accessories keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

WARNINGS CONTINUED



- Do not lift the stroller by the armrest because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- Always raise the leg support (where fitted) to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- It is unsafe to use accessories other than those tested and approved by Britax. For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket or 1kg in the Canopy Pocket (if supplied)
- The maximum weight of the child using this product is not to exceed 17kg for the Stroller or 9kg for the Infant Carrier.

FOR WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.

MPORTANT

The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used to transport babies, and the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

ASAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

PARTS LIST

- A 1 x Stroller Frame & Basket
- B 1 x Seat
- C 1 x Canopy
- D 1 x Arm bar
- E 2 x Front and 2 x Rear Wheels
- F 2 x Splash Guards
- G 1 x Raincover















ASSEMBLY/USE

NOTES

1. TO OPEN THE FRAME

- A Release the frame lock
- B Hold the handle and place your foot on the basket tube. Pull up on the handle and at the same time push down with some force on the basket tube with your foot to lock the frame open.
- C A colour indicator in the frame will go green when the frame lock has engaged. Pushing down on the handle will also help to confirm that the frame has been locked open. If indicator is not green repeat 1B.









2. TO FIT THE SPLASH GUARDS

A Take the left hand guard with the hole in the moulding facing to the inside and position under the rear leg.

The long section of the guard must be pointing towards the rear of the stroller.

A

B Push the Guard up onto the rear leg until it locks on.Repeat for the right hand side.




3. TO FIT AND REMOVE THE REAR WHEELS

A Take each rear wheel and insert the post into the socket as shown. Push the wheel in until it clicks into place. Pull on the wheel to make sure it is locked in.



B To remove the rear wheels, press down and hold the lever, at the same time slide the wheel out of the moulding.

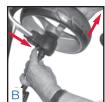

4. TO USE THE BRAKES

WARNING: ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- A With your foot, press down the RED brake lever to lock the wheels. Gently push the stroller forwards and backwards a few times to make sure the brake is engaged.
- A
- B To release the brake, lift the brake lever up.

5. TO FIT AND REMOVE THE FRONT WHEELS

- A Take one front wheel at a time and insert the post into the front wheel moulding.
 Push in until it locks into place.
 Pull on the wheel to make sure it is locked on.
- B To remove the wheels, turn the plastic cap anti clockwise.









20. TO RELEASE THE INFANT CARRIER

A Squeeze both handle latches in to release the locks.


The indicator will now be RED.

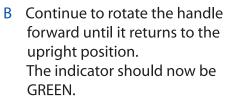



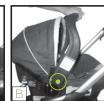


C Lift and remove the Infant carrier away from the stroller frame.

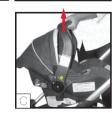

21. TO USE THE INFANT CARRIER CANOPY

 A Insert the canopy into the moulding on both sides of the carrier.

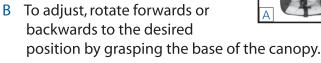

C To remove, simply pull the canopy out of the mouldings.







19. TO INSTALL THE INFANT CARRIER (CONT)

- B Push down on the Infant Carrier and make sure it is located in the frame mouldings.
 The Infant Carrier now needs to be locked securely into the frame.
- C By pushing in and holding the latches on either side of the handle, rotate the handle backwards. The GREEN indicator will now turn to RED.
- D Release the handle latches. Then with one hand holding the front of the Infant Carrier handle all the way down until you hear it lock into the frame.
- E The handle indicator should now be GREEN and the Infant Carrier should be locked into the frame.
- F IMPORTANT: Pull up on both sides of the Infant Carrier and confirm it is locked into the frame. If not locked on both sides. Repeat Steps A & E.
- G Secure your baby into the Infant Carrier by the harness provided. See Section 14.











6. FRONT SWIVEL WHEEL LOCKS

A To lock the front swivel wheels, press down both levers to the locked position.

The swivels will lock automatically when the wheels turn to a straight position.



- B To unlock, raise both levers until the wheels are in swivel mode.
- 7. TO FIT THE SEAT (FORWARD FACING) AND ADJUST THE BACKREST ANGLE

WARNING: ENSURE THAT YOUR CHILD'S LIMBS ARE IN THE CENTRE OF THE SEAT AND SUPPORT YOUR CHILD'S WEIGHT WHEN USING THE BACKREST.

- A To fit the seat, locate the seat mouldings over the frame mouldings as shown.
- B Press each of the seat mouldings into the frame mouldings until locked. Pull up on each side of the seat to confirm that the seat has been locked into the frame.





7. TO FIT THE SEAT (FORWARD FACING) AND ADJUST THE BACKREST ANGLE (CONT)

C To adjust the seat angle to one of three positions, lift up the spring loaded lever all the way until the seat can move.
Continue to hold the lever and adjust the seat up or down.





8. TO REMOVE THE SEAT

WARNING: DO NOT REMOVE THE SEAT FROM THE FRAME WHILE YOUR CHILD IS IN THE STROLLER.

A Locate the release tabs on both sides of the stroller under the round moulding.
Squeeze both tabs up and lift the seat out of the frame.





B Squeeze and hold both tabs up and lift the seat out of the frame.




19. TO INSTALL THE INFANT CARRIER (SOLD SEPARATELY)

WARNINGS

- THE CRUISER INFANT CARRIER IS THE ONLY INFANT CARRIER DESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY
 OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF
 AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.
- A Remove stroller seat from the Frame. See 3A & 3B. With the Infant Carrier handle in the upright position, locate the Infant Carrier handle mouldings on either side, directly over the frame mouldings. Notice the indicator is GREEN.



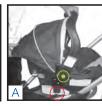

18. TO FOLD THE STROLLER (CONT)

E The stroller will fold together into its closed position and the frame lock will engaged.







Note: For a more compact fold remove the seat before folding.

9. TO REVERSE THE SEAT DIRECTION (REARWARD FACING)

WARNING: DO NOT REMOVE THE SEAT FROM THE FRAME WHILE YOUR CHILD IS IN THE STROLLER.

- A Remove the seat from the frame if already forward facing. See 8A & 8B.
- B Fit the seat to the frame. See 7A & 7B.
- C To adjust the seat angles. See 7C.







10. TO FIT THE ARMBAR

WARNING: WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED TO THE FRAME AT ALL TIMES.

A Align the arm bar pins with the frame Mouldings as shown.



10. TO FIT THE ARMBAR (CONT)

- B Press each side in to the frame moulding until locked. Pull on each side to confirm it has engaged and is secure.
- C To remove the armbar, press in and hold the buttons under each moulding and pull out the armbar pins.





11. TO FIT, ADJUST AND REMOVE THE CANOPY

- A Align the canopy mouldings to each side of the frame moulding as shown. Push in until locked into position.
- B Fit the back of the canopy over the backrest. Pull through the seat adjuster.
- C To adjust the canopy, push or pull on the canopy and adjust to the desired position.









18. TO FOLD THE STROLLER (Cont)

C Locate the two frame release triggers on the sides of the handle. Pull them both up together to unlock the frame.

The frame indicators will now be red.





D Pull up on the red circular finger pull and at the same time push handle down the frame.





17. TO FIT THE RAINCOVER

A Place the raincover over the canopy and the stroller.

Secure to the frame using the hook and loop tabs provided.



18. TO FOLD THE STROLLER

NOTE: If the seat is in the rearward facing position, it should be removed from the frame before folding.

A The seat must be in the forward facing position with the canopy folded back and the back rest in the most upright position.



B Push down on the brake lever with your foot to lock the brake.



11. TO FIT, ADJUST AND REMOVE THE CANOPY (CONT)

D Press in the tabs with your finger and pull back on the canopy to release the canopy from the frame.



12. CANOPY WINDOW

- A To open the cover release the tab.
- B Roll up the cover and secure with the elastic and toggle.





13. TO ADJUST THE FOOTREST

A To adjust the footrest, press in and hold the buttons on either side of the footrest.

At the same time adjust to the desired position.



14. TO ADJUST THE PIVOTAL HANDLE - 7 POSITIONS

A There is an adjusting button on the inside of each handle moulding.



B Press both buttons in together and hold. Now rotate the handle up or down to the desired height position.




C When the desired height position has been achieved, release both buttons.



15. TO SECURE YOUR CHILD IN THE HARNESS THE HARNESS (Cont)

H To reposition harness, pull the shoulder harness buckle tongue through the desired slot.

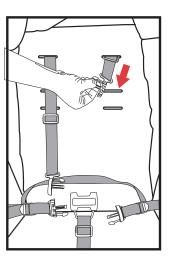

16. TO USE THE TETHER STRAP


WARNING: USE THE TETHER STRAP TO PREVENT THE STROLLER ROLLING AWAY.

A A wrist tether strap is provided near the handle.


Slide your hand through the tether strap loop whenever you use the stroller.

Only remove your hand from the tether strap loop when the brakes Have been applied to the stroller wheels.

15. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

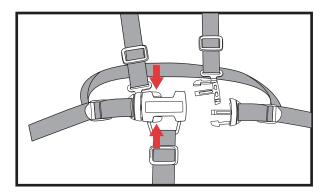

- To release the buckle. Squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.
- The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.
 - * Depending on the model

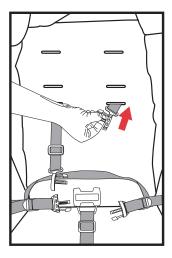


15. TO SECURE YOUR CHILD IN THE HARNESS THE HARNESS (Cont)

WARNING: USE THE HARNESS AT ALL TIMES.


When not in use disconnect shoulder straps from the waist strap and buckle to prevent strangulation.

A five point harness is provided to restrain your child. Buckle tongues separate for added safety. To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

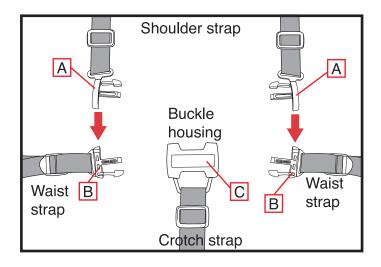


A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

15. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

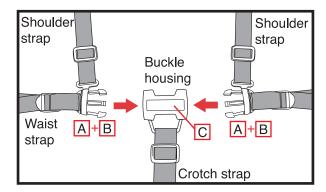


B Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.

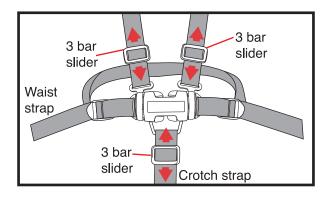


C Tighten or loosen shoulder and crotch straps by sliding up an down the 3 bar sliders.

15. TO SECURE YOUR CHILD IN THE HARNESS THE HARNESS (Cont)

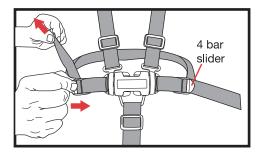

D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit. The waist strap needs to fit firmly around the child.

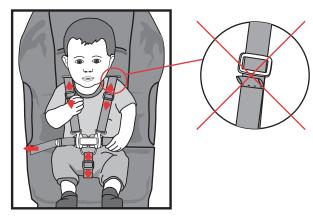

E Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.