WARRANTY

THIS WARRANTY IS VALID IN AUSTRALIA AND NEW ZEALAND ONLY.

Each Steelcraft unit is thoroughly inspected in our Quality Assurance department prior to delivery. In the unlikely case that you find any material or workmanship that effects the units normal operation, we will repair the unit free of charge within 12 months of purchase. You are required to present your receipt as proof of purchase. For all concerns with your product please contact our Customer Service Team.

CUSTOMER SERVICE

1300 303 330 - Australia 0508 688 822 - New Zealand

Please read all the information carefully before using this product. This warranty does not apply to failure due to improper care, or normal wear and tear caused by product use. We reserve the right to inspect the unit. You may be charged for repairs if the product has been damaged accidentally.

This warranty does not apply to a stroller used for commercial purposes.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088 "Prams and Strollers - Safety Requirements".

AUSTRALIA

BRITAX CHILDCARE PTY. LTD A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road, Sunshine, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.


Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

© 2010 Copyright Britax Childcare Pty. Ltd. Australia



ACCLAIM Reverse Handle Stroller

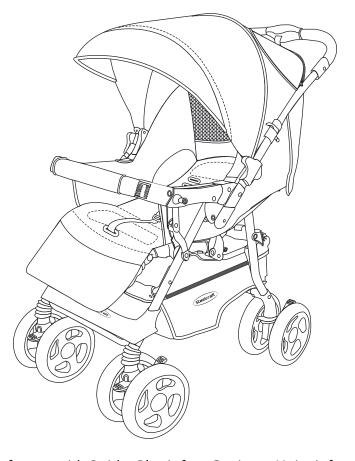

Suitable for use with Strider Plus Infant Carrier or Unity Infant Carrier

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE





RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- · USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

WARNINGS CONTINUED



- Do not lift the stroller by the armrest because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- Always raise the leg support (where fitted) to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- It is unsafe to use accessories other than those tested and approved by Britax. For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket, or 1kg in the Canopy Pocket (if supplied).
- The maximum weight of the child using this product is not to exceed 17kg.

MIMPORTANT

The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

ASAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

04

1. TO OPEN THE STROLLER

A Release the storage latch on the rear leg by deppressing the latch lock.




B Lift the handle up until the stroller locks into the fully upright position.



2. TO INSTALL THE SWIVEL WHEELS

A Take each swivel wheel assembly and push it down firmly onto each of the legs until a click is heard. Check that each wheel is fully engaged and secured by pulling against it.

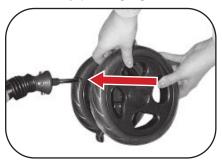

3. TO USE THE SWIVEL WHEELS

This stroller has been designed with independent suspension to give your child a more comfortable ride, this means that each corner of the product can rise and fall individually. Under some circumstances one wheel may lift from the ground when the suspension is operating, particularly when changing direction quickly, THIS IS NOT A PRODUCT FAULT, it is merely an operating characteristic of the stroller which should not cause any problems.

The handle on these strollers is reversible so that you can push the stroller either facing the child, or from behind the child. When making adjustments to the handle position, you must also adjust the position of the wheels.

19. TO INSTALL THE UNITY INFANT CARRIER (CONT)


Raise and lock the stroller backrest to the middle recline position. This is the recommended carrier position for the baby.

Fold the Infant Carrier handle down, and then check the carrier is securely attached to the stroller arm bar by lifting the carrier before use.

NOTE: Do not lift the stroller by the carrier as it may disengage.

20. TO REMOVE THE UNITY INFANT CARRIER

A Lower the stroller backrest to the full recline position. Fold the Infant Carrier handle up to the carry position and grip firmly in one hand. Raise the Infant Carrier release catch located on the rear of the carrier.

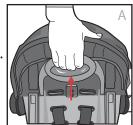

B Lift and remove the Infant Carrier from the stroller.



NOTE: Ensure the baby is secured in the carrier with the harness at all times. The Infant Carrier has been fitted with a hood when using the stroller. The hood may also be used in the car.

19. TO INSTALL THE UNITY INFANT CARRIER (Sold Separately)

B Position the Infant Carrier over the stroller with the baby's head end of the bassinet over the stroller arm bar.





Arm Bar Latch

C Lower the Infant Carrier and ensure that the latch slot locates onto the arm bar.

Lower the foot end of the Infant Carrier until the latch locks onto the arm bar and rest the foot end on the seating area of the stroller.

3. TO USE THE SWIVEL WHEELS

To ensure the wheels are correctly positioned in accordance with the handle position, please do the following:-

- 1. Adjust the handle to the desired position.
- 2. Release the swivel locks on all wheels.
- 3. Push the stroller forward approximately one metre.
- 4. Now apply the swivel lock on any wheels that are not required to swivel.

PLEASE NOTE: There are four sets of swivel wheels on this stroller, however only use 2 sets in the unlocked swivel position.

The wheels closest to your feet/handle should always be in the locked position with the brake lever facing you.

When pulling the stroller backwards all swivel wheels must be unlocked.

5. Your stroller wheels are now configured correctly for use. This procedure must be followed each time you adjust the handle until you become familiar with the correct wheel position before locking the swivel locks.

If the wheels are locked in the wrong position, you will experience handling problems and the wheels will shake and shudder.






3. TO USE THE SWIVEL WHEELS (Cont)

Lift the locking clip up to lock the swivel wheels.

NOTE: Lock all swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.



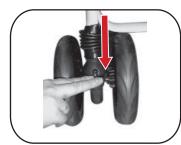

4. TO USE THE BRAKES

WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS NOT MOVING. THE STROLLER MAY ROLL AWAY EVEN IF LEFT UNATTENDED FOR A FEW MOMENTS.

- A Push down on each brake lever to lock the brakes.
- B Lift each brake lever up to release the brakes.





19. TO INSTALL THE UNITY INFANT CARRIER (Sold Separately

WARNINGS

- THE STRIDER PLUS INFANT CARRIER AND THE UNITY INFANT CARRIER ARE THE ONLY INFANT CARRIERS DESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY
 OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF
 AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.
 - A Lock the brakes on the stroller. Fully recline the backrest and fold the canopy back. Remove the arm bar cover and store in the basket or pocket.

NOTE: The arm bar cover must be removed when using the stroller as a Travel System.

18.TO RELEASE THE STRIDER PLUS INFANT CARRIER

A Squeeze both handle latches in to release the locks and rotate forward slightly. The indicator will now be RED.

A

With one hand on handle continue to rotate the handle forward until it returns to the upright position. The indicator should now be GREEN.







C Lift and remove the Infant Carrier from the stroller frame.



5. TO ADJUST THE LEG SUPPORT

A Lower the leg support by pressing up the release latches located on both sides underneath the leg support. Then push the leg support down to the desired position.



B Raise the leg support by lifting it up until the release latches lock into the desired position.

6. TO ADJUST THE BACKREST

A To fully recline the backrest squeeze the adjusting bar up and lower the backrest down.



B To raise the backrest to the fully upright position, hold the fabric on the side of the seat clear and lift the backrest up until it locks into place.

7. TO ADJUST THE CANOPY

A Attach the canopy studs to the attachments on the seat back. Open the canopy by pulling the canopy forward or close it by pushing the canopy back.





17. TO INSTALL THE STRIDER PLUS INFANT CARRIER (CONT)

G Then with one hand holding the front of the Infant Carrier, use the other hand to push the Infant Carrier handle all the way down until it locks into the frame.





H The Infant Carrier handle indicator should now be GREEN and the Infant Carrier should be now be locked into the frame.



IMPORTANT: Pull up on both sides of the Infant Carrier and confirm it has locked into the frame.

Refer to the Infant Carrier instructions regarding placing and securing your baby in the Infant Carrier.

 
17. TO INSTALL THE STRIDER PLUS INFANT CARRIER (CONT)

D Position the Infant Carrier handle mouldings directly over the frame mouldings. The Infant Carrier handle must be in the upright position.



Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame. You will notice the handle indicator is GREEN and the frame indicator is RED.





F To lock the Infant Carrier onto the frame, squeeze in and hold the latches on either side of the handle, begin to rotate the handle backwards. The GREEN indicator will now start to turn RED. When the handle has been unlocked, release the handle latches.






8. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: USE THE HARNESS AT ALL TIMES.


When not in use disconnect shoulder straps from the waist strap and buckle to prevent strangulation.

A five point harness is provided to restrain your child. Buckle tongues separate for added safety. To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

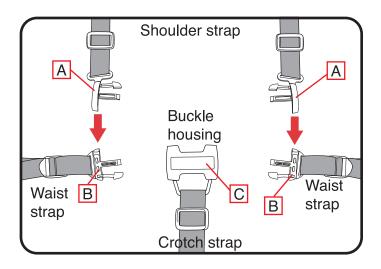


A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

8. TO SECURE YOUR CHILD IN THE HARNESS

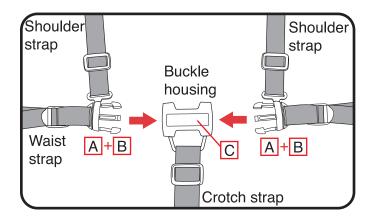

B Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.

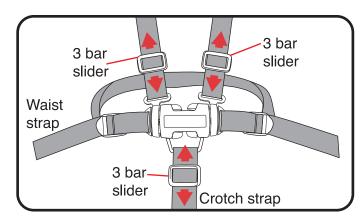


C Tighten or loosen shoulder and crotch straps by sliding up and down the 3 bar sliders.

17. TO INSTALL THE STRIDER PLUS INFANT CARRIER (CONT)

 - A To prevent the stroller from moving when installing the Infant carrier, lock the brakes on the stroller and lock the front wheels into the fixed (non swivel) position. Fully recline the backrest and fold the canopy back.
- B Locate the plastic clip on the bottom of the fabric armrest covers and pull the clip downwards to release the cover. To open the Infant Carrier compartments, push the cover forward slightly and then lift the cover up from the inside to fully open.











C The Infant Carrier can only be attached to the frame in the rearward facing position.




17. TO INSTALL THE STRDER PLUS INFANT CARRIER (Sold Separately)


WARNINGS

- THE STRIDER PLUS INFANT CARRIER AND THE UNITY INFANT CARRIER ARE THE ONLY INFANT CARRIERSDESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.

8. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

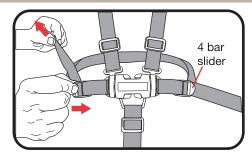


D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit. The waist strap needs to fit firmly around the child.

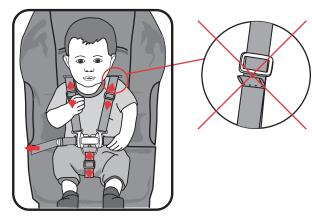


E Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

8. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

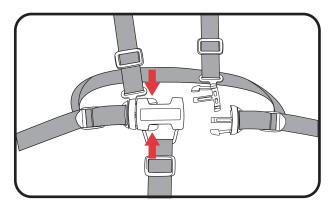

F To release the buckle. Squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

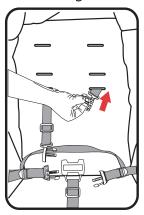

G The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.

16. TO FOLD THE STROLLER

- A Move the handle to the rear of the stroller (where you're standing behind your child). Close the canopy, remove the boot cover, storm cover and mesh cover (if fitted), lock all brakes and swivel wheels. Put the backrest into the fully reclined position.
- B To release the handle folding locks, push the button on top of the handle, then squeeze the lever on the underside of the handle and hold them in together.



C Depress the red safety lock located on the rear leg. Close the stroller fully until frame storage lock engages.





15. USING THE STROLLER

With your hand through the wrist tether strap loop, push the stroller holding both handles.

The stroller can be steered in the desired direction - See Section 3 - How to use the swivel wheels.


The wheels may wobble or oscillate when walking fast. Locking all the swivel wheels will stop this.

The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.

Caution is requires when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.

Whenever you stop, always apply the brakes before you leave the stroller.

8. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

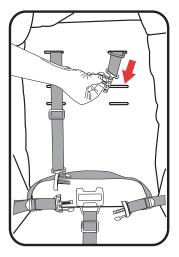


H To reposition harness, pull the shoulder harness buckle tongue through the desired slot.

9. TO USE THE ARM BAR

WARNING: WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED TO THE FRAME AT ALL TIMES.

A Fully depress the side arm bar buttons and slide the arm bar out for easy access, or push in to install it.

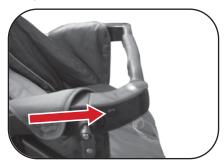

10. TO REVERSE THE HANDLE

WARNING: WHEN A CHILD IS IN THE STROLLER ENSURE THEIR FINGERS ARE NOT ON THE ARM REST WHEN MOVING THE HANDLE.

A Lift the finger grips on each side of the handle to release it for forward or reverse positioning. Ensure that both sides are fully locked before using the stroller.

14. TO USE THE TETHER STRAP

WARNING: USE THE TETHER STRAP TO PREVENT THE STROLLER ROLLING AWAY.

A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



13. TO FIT THE MESH COVER


- A Zip the mesh cover to front of the canopy.
- B Place the elastic front over the arm bar. Do not cover the handle lock with the mesh to prevent tearing.



C Loop the elastic attachments over the rear handle lock.



10. TO REVERSE THE HANDLE (Cont)

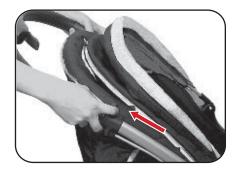










Please Note: When making adjustments to the handle position you must also adjust the position of the wheels.

See Section 3 - To use the swivel wheels.


11. TO FIT THE BOOT COVER


- A Raise the leg support and place the boot cover over the front of the leg support and the arm bar.
- B Attach the upper straps to the canopy frame support tubes.

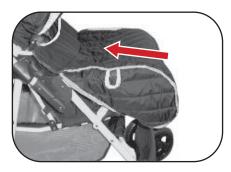

12. TO FIT THE STORM COVER

A Unlock the handle position so it moves freely from either locked position on the frame.

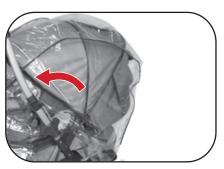

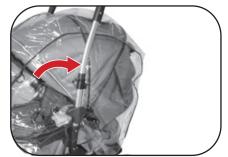

12. TO FIT THE STORM COVER (Cont)

- B Pull the storm cover over extended canopy, position large hole in storm cover over the rear handle lock. The storm cover needs to be on the inside of the handle.
- C Position the small hole in the front handle lock.



Attach the hook and loop at underside of storm cover. The handle is now free to move and lock into either position.

