

# **Steelcraft<sup>TM</sup>**

## **Orbit Reverse Handle Stroller**

BRITAX CHILDCARE PTY. LTD A Britax International company.  
(Incorporated in Victoria) A.B.N. 55 006 773 600  
99 Derby Road, Sunshine, Victoria 3020, Australia  
Phone: (03) 9288 7288 Fax: (03) 9311 5798

**CUSTOMER SERVICE**  
**1300 303 330 - Australia 0508 688 822 - New Zealand**

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: [www.britax.com.au](http://www.britax.com.au) or email us at [au-custserv@britax.com](mailto:au-custserv@britax.com)

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand Standard AS/NZS2088 "Prams and Strollers - Safety Requirements."

©2010 Copyright Britax Childcare Pty. Ltd. Australia



Suitable for use with Cruiser Infant Carrier

**IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.**



Series No. H309Q

RETAIN FOR FUTURE REFERENCE.  
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE  
OF THIS STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS.  
THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS  
ESSENTIAL.

## **WARNINGS: TO AVOID INJURY OR DEATH:**

**ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS  
STATIONARY.**

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.

## CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

**THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.**

## **WARNINGS**

- Do not lift the stroller by the armrest because it may disengage.
- Do not allow children to stand on the seat.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- Always raise the leg support (where fitted) to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- It is unsafe to use accessories other than those tested and approved by Britax. For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket, or 1kg in the Canopy Pocket (if supplied).
- The maximum weight of the child using this product is not to exceed 17kg.

## **IMPORTANT**


- The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

## SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

### 1. TO OPEN THE STROLLER

- A Release the storage latch located on the rear leg by depressing the latch lock.

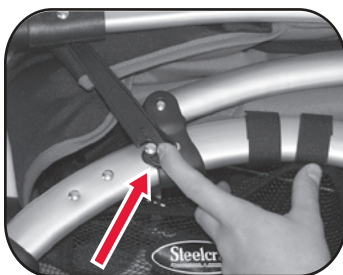

- B Whilst holding the handle, carefully lift and allow the frame to gently drop towards the floor, ensuring stroller locks into fully upright position.



## 17. TO RELEASE THE INFANT CARRIER

- A** Squeeze both handle latches in to release the locks and rotate forward slightly. The indicator will now be RED.



- B** With one hand on handle continue to rotate the handle forward until it returns to the upright position. The indicator should now be GREEN.





- C** Lift and remove the Infant Carrier from the stroller frame.




## 2. TO INSTALL THE FRONT SWIVEL WHEELS (Where required)

- A** Take each front swivel wheel assembly and push it down firmly onto each of the front legs.
- B** Check that each wheel is fully engaged and secured by pulling against it.

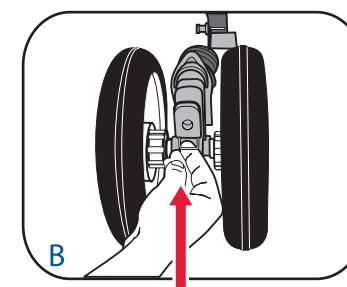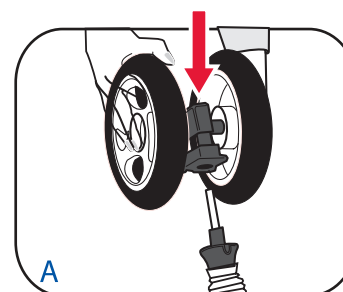

## 3. TO INSTALL THE REAR WHEELS

- A** Align the brake assembly with the rear legs of the stroller. Make sure the brake lever is facing up. Push the brake assembly onto each leg until it engages onto the pins (you will hear a 'Click' sound) under the rubber covers.

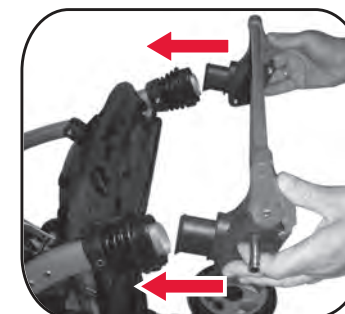


### 3. TO INSTALL THE REAR WHEELS

- B** Pull on each side to ensure the brake assembly is locked onto leg tubes. If not repeat Step A.



- C** Take each rear wheel and put it onto each rear axle with the brake lugs facing inwards.


- D** Lock them onto the axle by assembling them with the components provided in the order as shown. Make sure the cap (2) clicks fully over the locking ring (1).

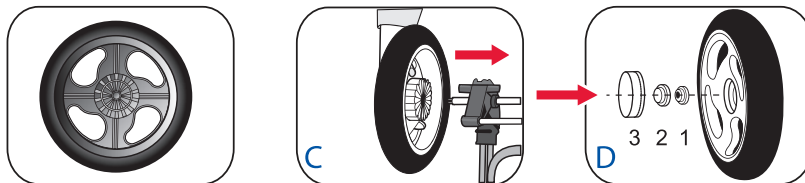

**NOTE:** To remove swivel wheel assembly, press metal clip and remove wheel assembly from stroller leg.

### 16. TO INSTALL THE INFANT CARRIER (Cont)

- G** The Infant Carrier handle indicator and the frame indicator should now be GREEN and the Infant Carrier should be now be locked into the frame.

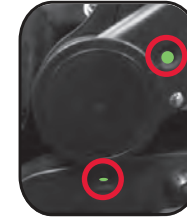

**IMPORTANT:** Pull up on both sides of the Infant Carrier and confirm it has locked into the frame. Refer to the Infant Carrier instructions regarding placing and securing your baby in the Infant Carrier.

## 16. TO INSTALL THE INFANT CARRIER (Cont)

- D** Push down on the Infant Carrier and make sure it is located in the frame mouldings. The Infant Carrier now needs to be locked securely into the frame. You will notice the handle indicator is GREEN and the frame indicator is RED.



- E** To lock the Infant Carrier onto the frame, squeeze in and hold the latches on either side of the handle, begin to rotate the handle backwards. The GREEN handle indicator will now start to turn RED.




- F** Then with one hand holding the front of the Infant Carrier, use the other hand to push the Infant Carrier handle all the way down until it locks into the frame.



## 4. TO USE THE SWIVEL WHEELS

- A** Lift the locking clip up to lock the swivel wheels.  
Push locking clip down to unlock the swivel wheels.

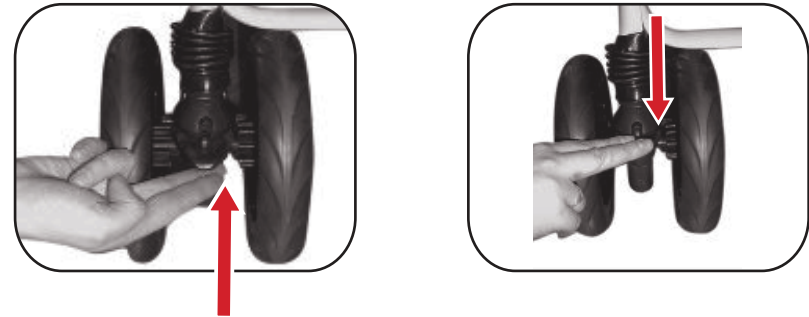

**NOTE: The swivel wheels should be locked when wheels are in the trailing position. The wheels will automatically move into trailing position when you move the stroller forward by around 1 metre. Always lock both swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.**





## 5. TO USE THE BRAKES

**⚠ WARNING:** ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS NOT MOVING. THE STROLLER MAY ROLL AWAY EVEN IF LEFT UNATTENDED FOR A FEW MOMENTS.

**WHEN BABY IS FACING AWAY FROM YOU, USE THE REAR BRAKE.**

A Push down on the brake lever to lock the rear brakes.



B Lift the brake lever up to release the rear brake.

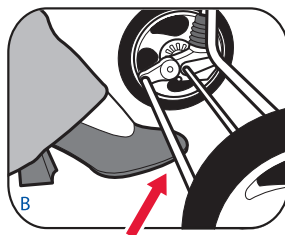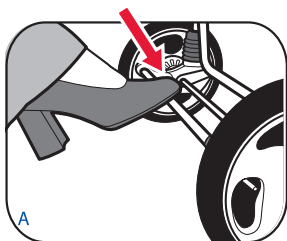

**WHEN BABY IS FACING YOU, USE THE SWIVEL WHEEL BRAKES.**

C Push the brake lever down to lock the brake on both swivel wheels.

D Lift the brake lever up to release the brakes.

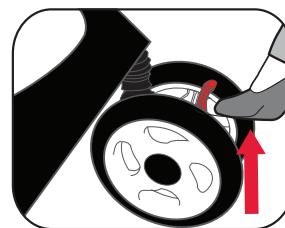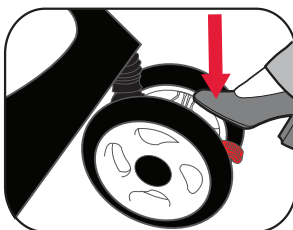

## 16. TO INSTALL THE INFANT CARRIER (Cont)

B Locate the plastic clip on the bottom of the fabric armrest covers and pull the clip downwards to release the cover. To open the Infant Carrier compartments, push the cover forward slightly and then lift the cover up from the inside to fully open.



C Position the Infant Carrier handle mouldings directly over the frame mouldings. The Infant Carrier handle must be in the upright position.





## 16. TO INSTALL THE INFANT CARRIER (SOLD SEPARATELY)

### **WARNINGS**

- THE CRUISER INFANT CARRIER IS THE ONLY INFANT CARRIER DESIGNED TO FIT THIS STROLLER.
  - THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
  - THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
  - SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
  - DO NOT LEAVE THE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
  - THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
  - THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
  - THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 9kg.
- A** To prevent the stroller from moving when installing the Infant Carrier, lock the brakes on the stroller and lock the front wheels into the fixed (non swivel) position. Fully recline the backrest and fold the canopy back.

## 6. TO ADJUST THE LEG SUPPORT


- A** Lower the leg support by pressing up the release latches located on both sides underneath the leg support. Then push the leg support down to the desired position.



- B** Raise the leg support by lifting it up until the release latches lock into the desired position.

## 7. TO ADJUST THE BACKREST


- A To fully recline the backrest squeeze the adjusting bar up and lower the backrest down.

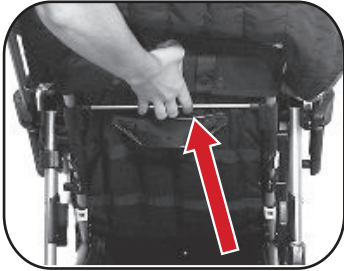

- B To raise the backrest to the fully upright position, lift the backrest up until it locks into place.


## 8. TO ADJUST THE CANOPY

- A Attach the canopy studs to the attachments on the seat back. Open the canopy by pulling the canopy forward or close it by pushing the canopy back.

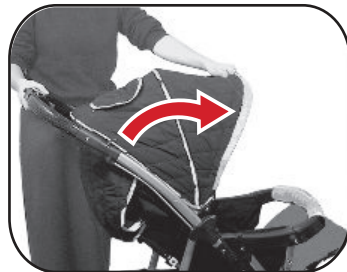

## 14. TO FOLD THE STROLLER (Cont)

- D Apply the storage latch.

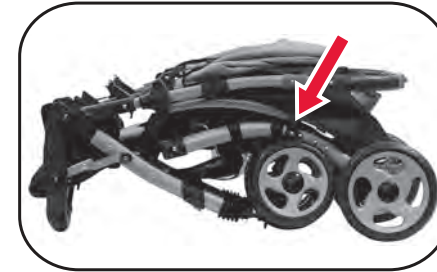

## 15. TO USE THE STROLLER

With your hand through the wrist tether strap loop, push the stroller holding both handles.

The stroller can be steered in the direction - allowing the front wheels to swivel will make this easier.

The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.


The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.

Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.

Whenever you stop, always apply the brakes before you leave the stroller.

## 14. TO FOLD THE STROLLER

- A Move the handle to the rear of the stroller (where you're standing behind your child). Close the canopy, remove the boot cover, lock all brakes and swivel wheels. Put the backrest into the fully reclined position.
- B To release the handle folding locks, push the button on top of the handle, then squeeze the lever on the underside of the handle and hold them in together.

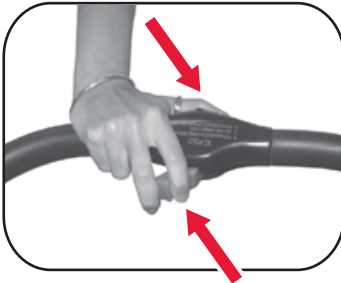

- C Now pull the red safety lock located (found on the left hand side of the frame) towards you and push down on the stroller until it is fully folded.



## 9. TO SECURE YOUR CHILD IN THE HARNESS


**! WARNING: USE THE HARNESS AT ALL TIMES.**

**When not in use disconnect shoulder straps from the waist strap and buckle to prevent strangulation.**

A five point harness is provided to restrain your child.


Buckle tongues separate for added safety.

To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

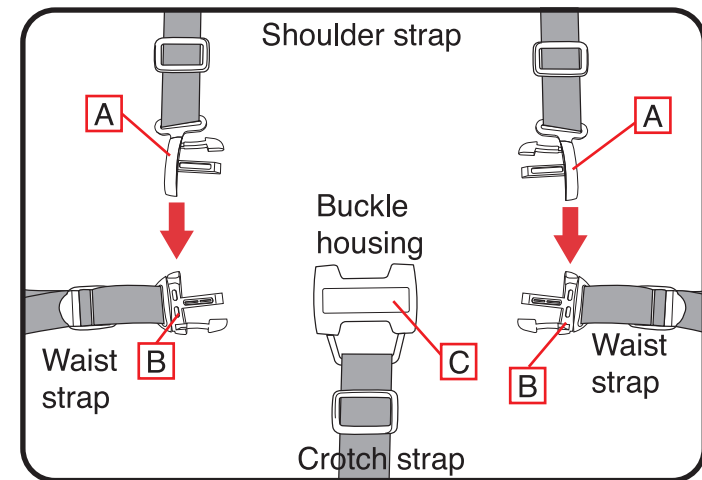


- A Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

## 9. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

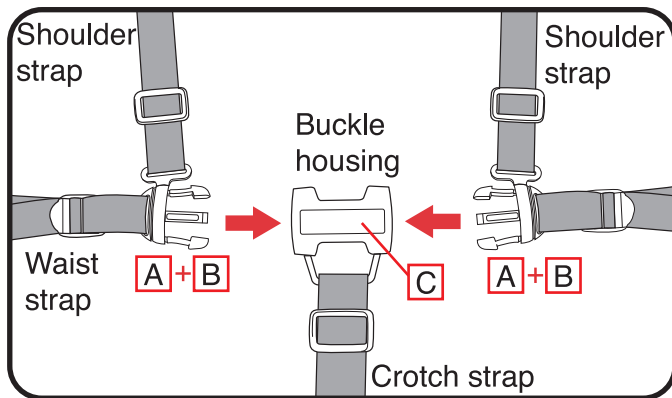

- B** Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.

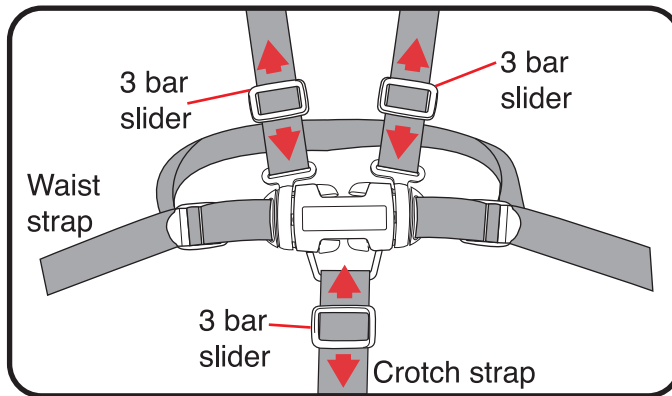

- C** Tighten or loosen shoulder and crotch straps by sliding up and down the 3 bar sliders.


## 12. TO FIT THE BOOT COVER (Cont)

- B** To remove the boot cover release the clips with care due to their 'snap fit'.

## 13. TO USE THE TETHER STRAP

**WARNING:** USE THE TETHER STRAP TO PREVENT THE STROLLER ROLLING AWAY.

- A** A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

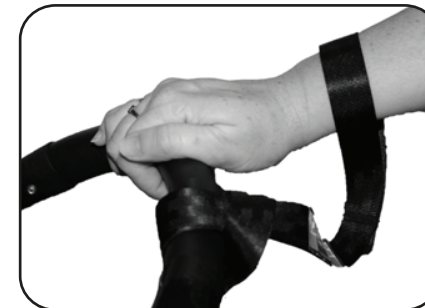

## 11. TO REVERSE THE HANDLE

**! WARNING:** WHEN A CHILD IS IN THE STROLLER ENSURE THEIR FINGERS ARE NOT ON THE ARM REST WHEN MOVING THE HANDLE.

- A Lift the finger grips on each side of the handle to release it for forward or reverse positioning. Ensure that both sides are fully locked before using the stroller.




## 12. TO FIT THE BOOT COVER


- A Raise the leg support and place the boot cover over the front of the leg support and the arm bar. Attach the upper straps to the canopy frame support tubes.



## 9. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

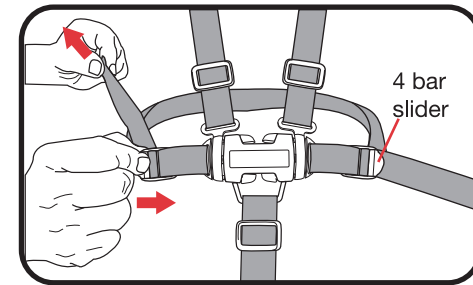


- D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap, to adjust to the desired fit. The waist strap needs to fit firmly around the child.

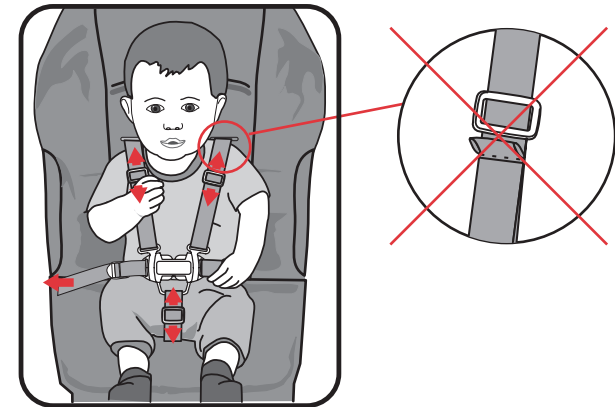



- E Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

**! CAUTION:** DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

## 9. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

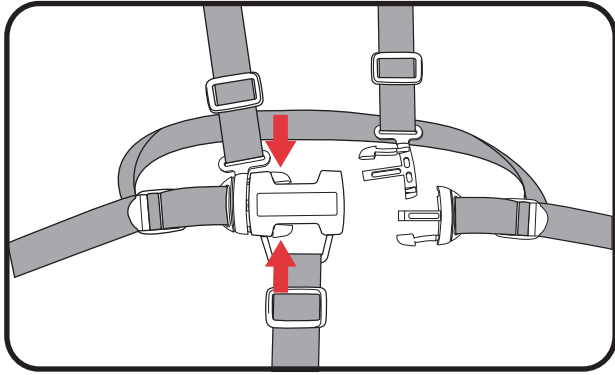


**F** To release the buckle. Squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

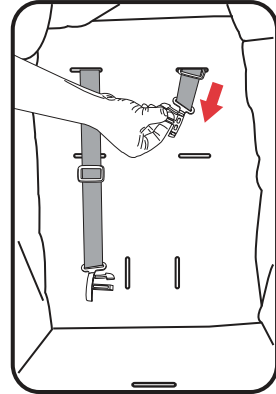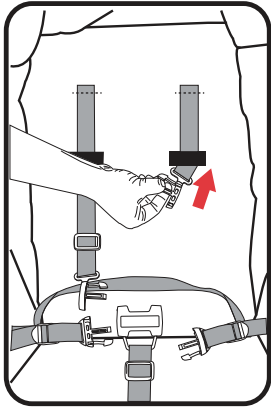

**G** The stroller seat has 2 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, either push the shoulder harness tongue in or out of the webbing tab on the seat pad and push through the correct harness slot on the seat pad.

## 9. TO SECURE YOUR CHILD IN THE HARNESS (Cont)

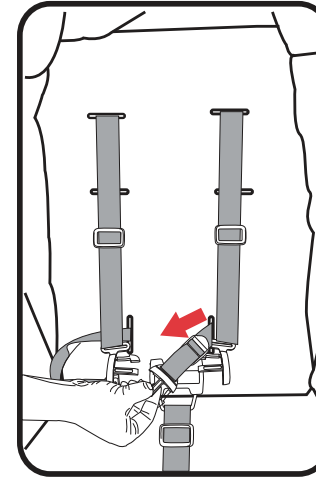

**H** Push the waist and crotch strap through the slot on the seat pad.

## 10. TO USE THE ARM BAR

**! WARNING:** WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED TO THE FRAME AT ALL TIMES.

**A** Fully depress the side arm bar buttons and slide the arm bar out for easy access, or push in to install it.

