

SteelcraftTM

Messina DLX

Hi Lo Highchair

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
99 Derby Road, Sunshine, Victoria 3020, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

 
The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian Standard AS 4684-2009

©2010-2013 Copyright Britax Childcare Pty. Ltd. Australia

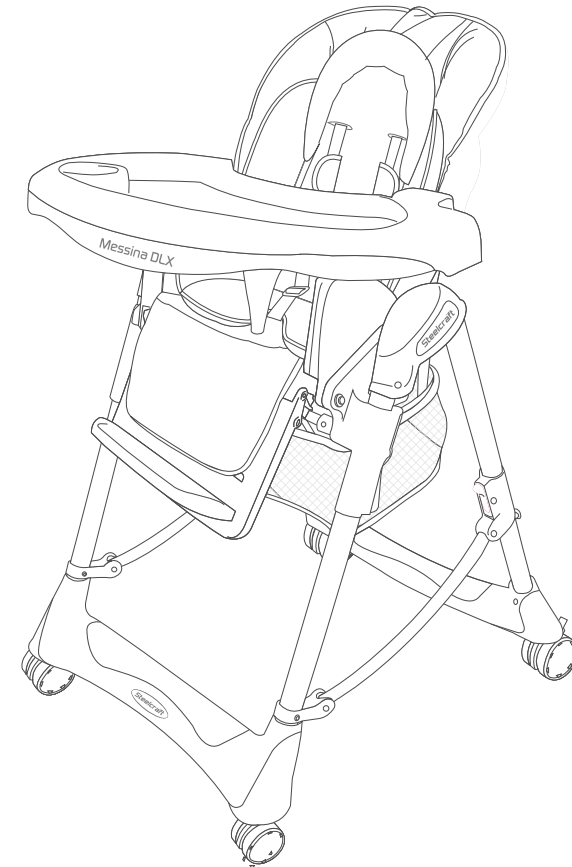

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

SteelcraftTM


SteelcraftTM

Series No. YS96

Art No.4001737_C

WARNINGS

RETAIN FOR FUTURE REFERENCE.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS HIGHCHAIR. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

 **WARNING:** THE CHILD SHOULD BE SECURED IN THE HIGHCHAIR AT ALL TIMES BY THE HARNESS, EITHER IN THE RECLINING OR UPRIGHT POSITION. THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR. IT IS RECOMMENDED THAT THE HIGHCHAIR BE USED IN THE UPRIGHT POSITION ONLY BY CHILDREN CAPABLE OF RELIABLY AND CONSISTENTLY SITTING UPRIGHT UNASSISTED.

 **WARNING:** TO PREVENT SERIOUS INJURY OR DEATH

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED.
 - MOST INJURIES FROM THE HIGHCHAIR ARE CAUSED BY FALLS.
- POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND ACCESS TO DANGEROUS ITEMS.
- Double check assembly before placing child into highchair.
- The weight of the child using this product is not to exceed 15kg.
- Always keep your child in view whilst using the highchair.

CARE AND MAINTENANCE

- To prolong the life of your highchair keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required.
- If the highchair is not working correctly stop using the highchair and seek repair.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

 **WARNINGS**

- Always apply the brakes when not moving the highchair.
- Do not allow children to stand on the seat.
- Use on a flat, even and horizontal floor and never use near stairs.
- Do not elevate the highchair on any structure or table.
- Do not allow child to stand on the seat.
- Never carry the highchair with the child in it.
- Do not use the highchair without the tray and always ensure the tray is secure on the arm rests. The tray is not designed to hold the child in the chair.
- When making adjustments to the highchair, ensure that you and your child's body, fingers and toes are clear of any moving parts on the highchair, otherwise they may be injured.
- Position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords, electrical cords and position the highchair away from furniture when the chair is not being used at a table.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

PARTS LIST



 
A 1 x Frame



B 2 x Lower Leg Moulding



C 1 x Seat Assembly

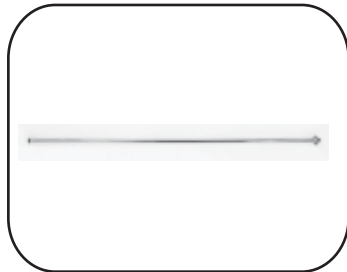

D 1 x Seat Support Bar



E 1 x Adjustable Leg Rest
1 x Adjustable Foot Rest

 


F 1 x Base tray
1 x Removable tray

NOTES



G 4 x Wheels

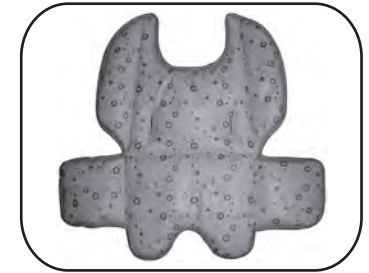

H 1 x Reversible Seat Insert



I 1 x Head Snuggler



 
J 2 x Shoulder Pads




K 6 x Phillip Head Screws
1 x Snap Fastener

01. TO ASSEMBLE THE HIGHCHAIR

- A Ensure that the seat supports are facing in towards the middle between the front and rear legs.

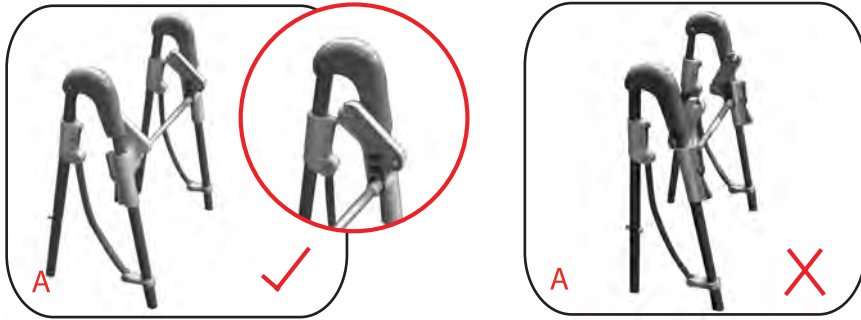

 - B If the seat supports are facing out then swing both rear legs outward 180° degrees to face the opposite way.

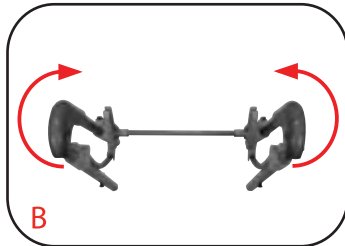

- C Press the folding release buttons then slide them down until they click into position.




NOTES

01. TO ASSEMBLE THE HIGHCHAIR

- D Insert the leg mouldings onto the corresponding legs. Use a phillips head screwdriver to install the screws and secure the leg mouldings to the legs of the highchair.





- E To install the seat assembly, align the locating tabs on both sides of the seat assembly with the slots in the frame. Ensure the seat assembly is installed in the correct orientation as shown. When in position, hold the assembly in place to prevent it from falling backwards.


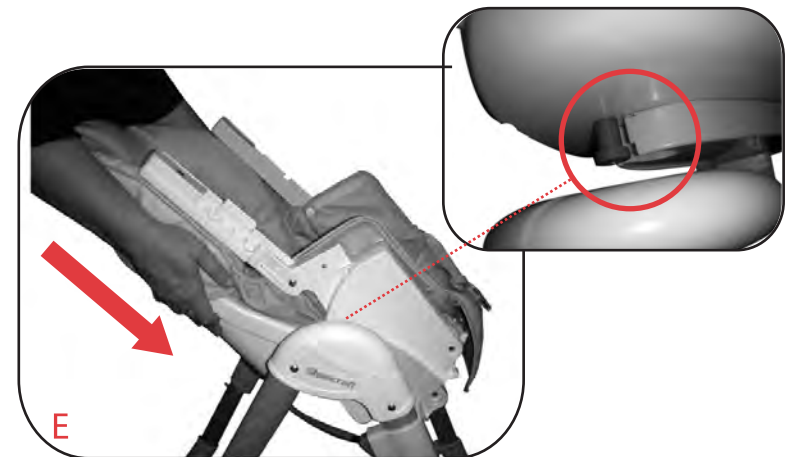


01. TO ASSEMBLE THE HIGHCHAIR (Cont)

- F Rotate the seat assembly until the two holes in the front of the seat assembly align with the two holes in the frame. Insert the seat support bar into the hole at the front right of the frame and push it through the seat assembly and out of the hole on the opposite side. Secure the seat support bar with the snap on fastener. Ensure the seat assembly is securely fitted.

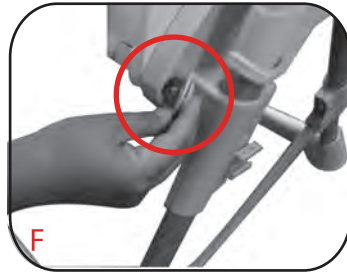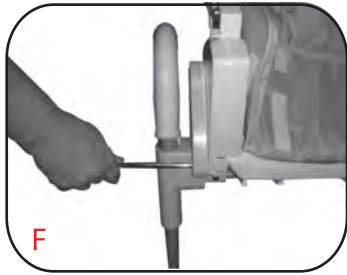

- G To install the leg rest, align the leg rest with the locating tabs on the lower front of the seat and slide the leg rest all the way in until it latches in place. Install the screws in the upper corners of the leg rest to secure the leg rest to the highchair.

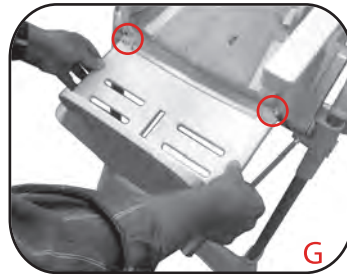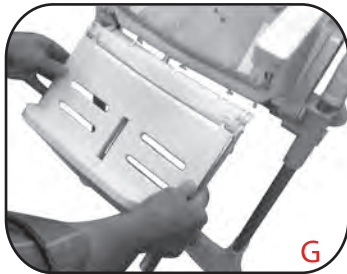


16. TO USE THE HIGHCHAIR

- Place the highchair on a horizontal, flat and even floor ensuring all wheels are in contact with the floor.
- The highchair must not be placed on a table or similar surface to elevate the child.
- The highchair is fitted with brakes on two castors. Ensure the brakes are applied when the child is in the highchair and only release the brakes to move the highchair.
- If pushing the highchair on carpet, be careful that the highchair is not pushed over as the castors may not roll easily on the carpet.
- Position the highchair away from potential hazards and other furniture or structures that the child may be able to grasp or push.
- Keep away from walls, kitchen benches, hot surfaces, hot liquids and electrical cords.

15. TO FOLD/UNFOLD THE HIGHCHAIR (Cont)

- B Press the folding release levers then slide them up until they click into position. Ensure the frame has locked in place and is secure. Attach the tray to the rear legs as shown in Section 9. To unfold the highchair, reverse Steps A and B.

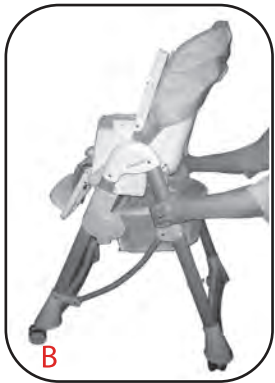

! **CAUTION:** ALWAYS STORE THE HIGHCHAIR SO IT CANNOT BE PULLED OR FALL ON CHILDREN.

01. TO ASSEMBLE THE HIGHCHAIR (Cont)

- H To attach the wheels, insert the pin of each wheel assembly into the corner of leg mouldings and push in to secure. Two of the wheel assemblies are fitted with brakes which will prevent the highchair from moving. Place the wheels with the brakes to the rear of the highchair.



 
Wheel without brake



Wheel with brake


02. TO ATTACH THE BASKET

- A Attach the basket hangers onto the studs at both sides of the seat back.
- B Attach press studs over the frame support bar under the seat.

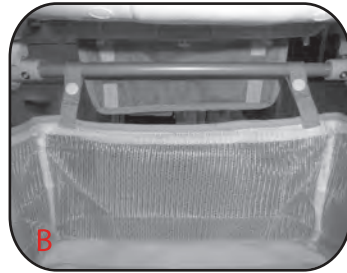

03. TO INSTALL THE PADDED SEAT INSERT

 
- A Disconnect the harness shoulder straps from waist straps and install the padded seat insert by sliding it under the shoulder harness. Attach the hook strip on the side of the seat insert to the loop strip on the side of the seat pad.

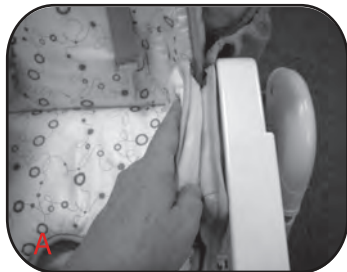

14. TO RECLINE THE HIGHCHAIR

! WARNING: DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

- A Lift and hold the recline latch located on the back of the seat and tilt the seat assembly back to the desired position.

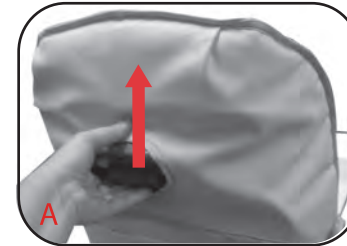

15. TO FOLD/UNFOLD THE HIGHCHAIR

! WARNING: DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

- A Remove the child and tray from the highchair. Release the tray attachment arms by pressing in the trigger located on the outside of each arm. Fold the arms up.



13. TO ADJUST THE HEIGHT OF THE HIGHCHAIR

! **WARNING:** DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

- A Remove the child and tray from the highchair.
- B Stand at the front of the highchair and press the height adjustment levers on both sides and either push the chair up or down to the desired height. Check the height adjustment levers on both sides have locked into place to ensure secure engagement of the seat assembly.



03. TO INSTALL THE PADDED SEAT INSERT (Cont)

- B Pull the waist straps of the harness through the button holes on the padded seat insert then reconnect shoulder straps to the waist straps.



04. TO INSTALL THE HEAD SNUGLER

- A Disconnect the harness shoulder straps from the waist straps and install the head snuggler by placing on top of the padded seat insert. Pull the shoulder straps through the button holes on the head snuggler then reconnect shoulder straps to the waist straps.



05. TO INSTALL THE SHOULDER PADS



- A Install the shoulder pads by fitting around the harness shoulder strap and attach both sides together with press studs.



06. TO USE THE BRAKES

⚠ WARNING: ALWAYS APPLY THE BRAKES EXCEPT WHEN MOVING THE HIGHCHAIR.

- A Press down on the brake lever to lock the brakes.
- B Push the brake lever up to unlock the brakes.

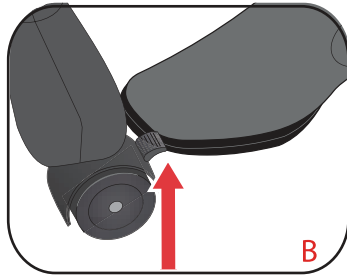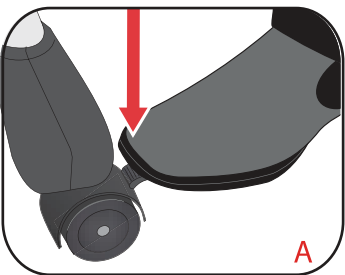


12. TO ADJUST THE FOOT REST (Cont)

- D When adjusting the height of the foot rest you will need to adjust the height of the vinyl foot rest flap. Fold the vinyl foot rest flap under and attach together with the hook and loop.




12. TO ADJUST THE FOOT REST (Cont)

- B Pull foot rest out of slot and move up or down to desired height.

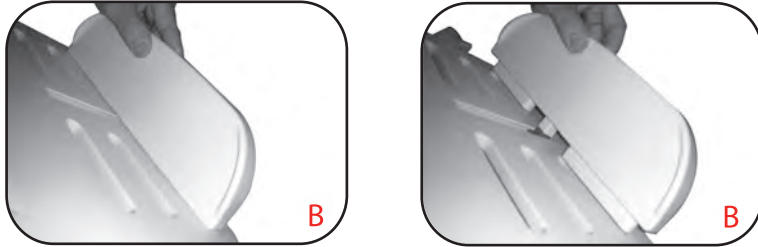


- C Push the foot rest into desired slot and lock into position by pulling the red tab behind the foot rest outwards and turning it horizontally.

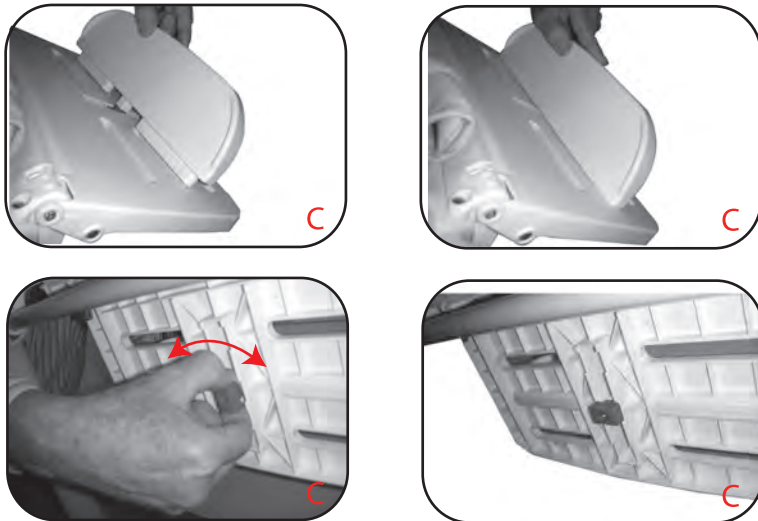

07. TO SECURE YOUR CHILD IN THE HARNESS

! WARNING: USE THE HARNESS AT ALL TIMES.


- A A five point harness is provided to restrain your child. To secure your child in the harness please follow the steps below carefully. Push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To remove the child, release the buckle by squeezing the top and bottom prongs, remove the shoulder straps and lift the child out of the highchair.

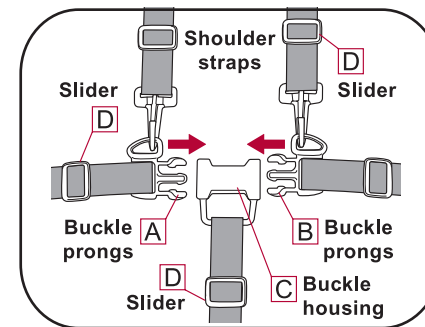

08. TO ADJUST THE SHOULDER STRAPS

PLEASE NOTE: The shoulder straps can be positioned at two heights. Choose a shoulder strap height that is close to the child's shoulders.


- A The shoulder straps are secured to the back of the high chair with a screw. To change the shoulder strap height, undo the screw and push the webbing end through the slot and then insert into the next slot. Pull the shoulder strap through the back of the high chair. Ensure the webbing end sits flat against the slot in the backrest moulding. Insert the screw through the hole in the harness and into the plug and tighten to secure shoulder strap to the back of the high chair.

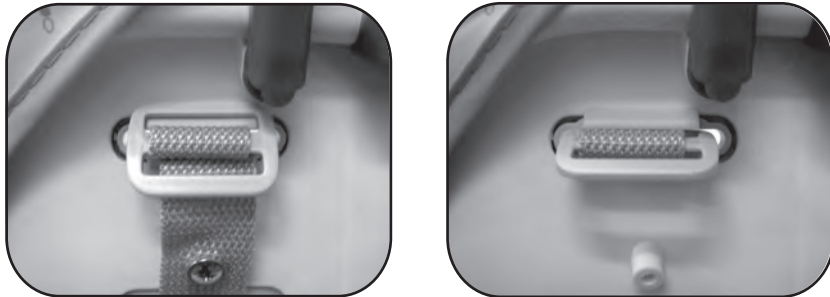

PLEASE NOTE: The crotch strap and the waist straps also have a webbing end. Ensure webbing end sits flat against the slot moulding. The crotch strap and waist straps are also secured to the high chair with a screw. To remove undo the screw and push the webbing end through the slot.



11. TO ADJUST THE LEG SUPPORT

- A Press on the end of the release latches which are located underneath the leg support on both sides and squeeze them up to lower. Raise the leg support by lifting it until the release latches lock into place

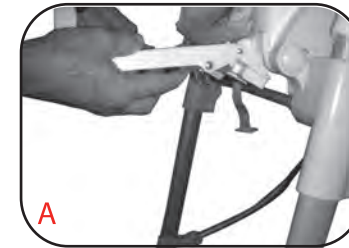




12. TO ADJUST THE FOOT REST

- A To unlock and adjust the height of the foot rest, pull the red tab located behind the foot rest outwards and turn the tab so it is positioned upright in the vertical slot of the leg support.

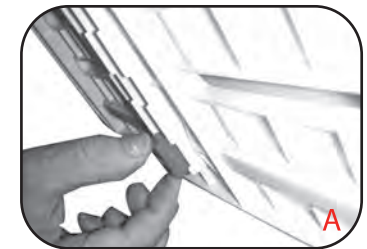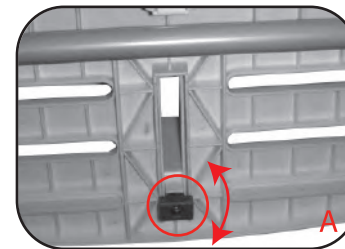

10. TO ATTACH THE CUP HOLDER (IF SUPPLIED)

- A Slide cup holder into mounting slot on side of highchair and pull the base downwards to open. Push base upwards to close the cup holder.

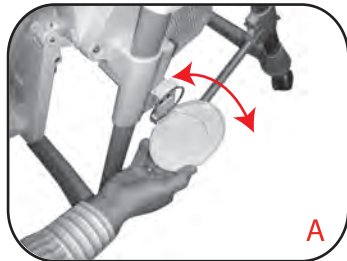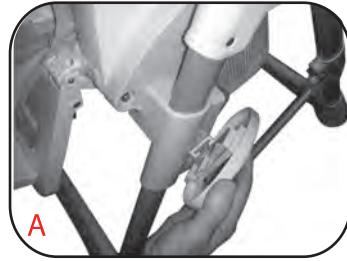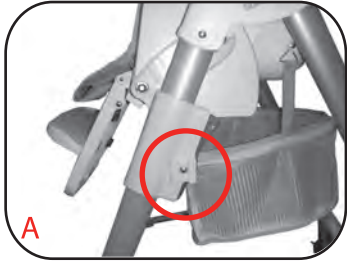

- B Use the metal ring to secure bottles on the cup holder. Unclip the metal ring to open and push down into clips to lock the metal ring.




09. TO ATTACH AND USE THE TRAY

! WARNING: THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE HIGHCHAIR. THE CHILD IS TO BE SECURED BY THE SAFETY HARNESS AT ALL TIMES WHILE IN THE HIGHCHAIR.

- A Ensure the tray attachment arms are lowered and locked.



- B Pull forward the release latch of the tray which is located under its front edge.

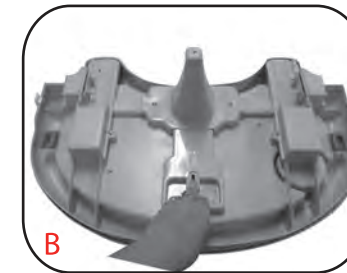

CAUTION: Ensure the child's hands are free from moving parts when the tray is being attached or removed to avoid pinching or entrapment.

09. TO ATTACH AND USE THE TRAY (Cont)

- C Align both tray slots with the arm rests and slide the tray back onto the arm rests to the desired position and release the tray latch ensuring it has locked into position. The position of the tray can be adjusted by pulling forward the release and sliding the tray to the desired position.



- D The tray features a removable second tray for convenient cleaning. Remove by releasing both tabs on the left and right side of tray.



09. TO ATTACH AND USE THE TRAY (Cont)

- E When the tray is not in use you can store the tray by sliding it onto the pegs located on the rear legs.



Please Note: Before using the tray, check it is securely locked onto the arm rests by pulling on the tray.