
Steelcraft

Agile Signature TRAVEL SYSTEM STROLLER

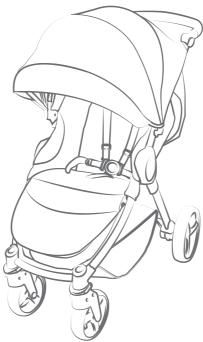

Suitable for use with the Steelcraft Baby Capsule or the Safe n Sound Unity Baby Capsule (Baby Capsules sold separately) IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

IMPORTANT NOTES

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE
OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR OR TRAY (Sold separately) BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 12 KG IN THE BASKET, OR 1 KG IN THE CANOPY POCKET (IF SUPPLIED).

WARNINGS



! WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS **NOT TO EXCEED 22 KG.**

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES -REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

03

MANUAL HANDLING TECHNIQUES

The SMART lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.


- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

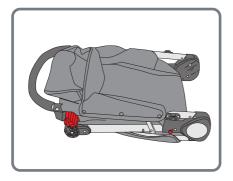


A 1 x Stroller Frame, Seats & Basket

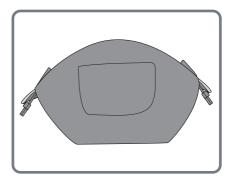


B 1 x Canopy

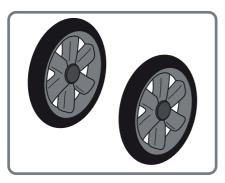

C 2 x Rear Wheels

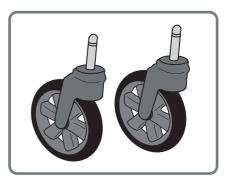

D 2 x Front wheels

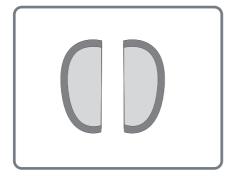


E 1 x set of Shoulder pads




F 1 x Rain cover

PARTS LIST

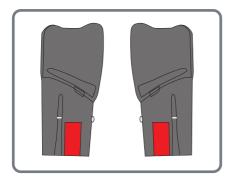

H 2 x Car Seat Receivers for Steelcraft Baby Capsule

STROLLER LEGEND

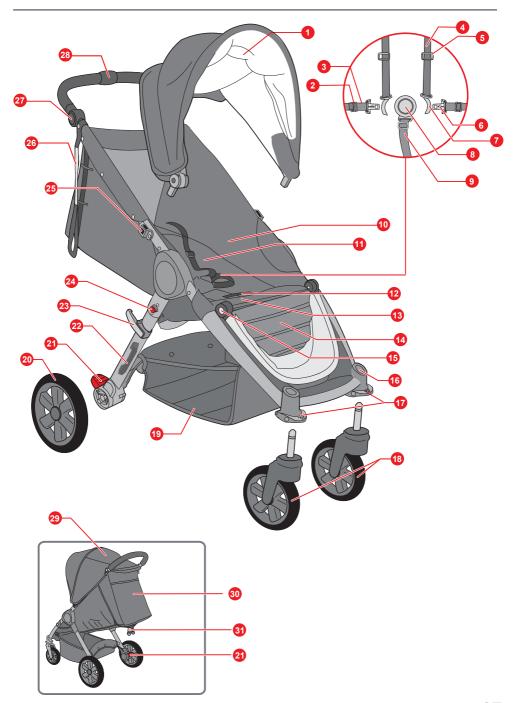

07

STROLLER LEGEND

- 1. Canopy
- 2. 4 bar waist harness slider
- 3. Waist harness straps
- 4. Shoulder harness straps
- 5. 3 bar shoulder harness slider
- 6. Waist strap buckle tongues
- 7. Shoulder strap
- 8. Buckle
- 9. Crotch harness strap
- 10. Inner seat
- 11. Upper seat
- 12. Folding strap
- 13. Lower seat
- 14. Leg rest
- 15. Leg rest release button
- 16. Front wheel release button
- 17. Swivel wheel locks
- 18. Swivel wheels
- 19. Basket
- 20. Rear wheels
- 21. Brake
- 22. Carry handle
- 23. Frame lock
- 24. Sure lock release button
- 25. Canopy frame socket
- 26. Tether strap
- 27. Pivotal Handle release button
- 28. Pivotal Handle
- 29. Canopy window cover
- 30. Canopy back pocket
- 31. Backrest adjuster

OPENING THE STROLLER FRAME


IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING TH PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.


OPENING THE STROLLER FRAME

A Release the storage latch located on the rear leg.

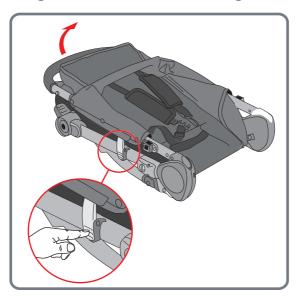

OPENING THE STROLLER FRAME

B Open the frame as shown by the arrow until you hear a 'click' which indicates the frame is fully opened and locked.

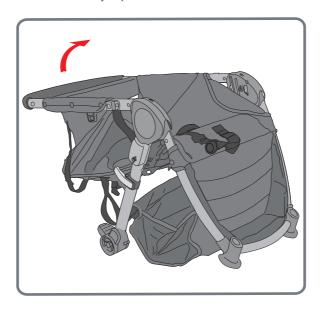

ATTACHING THE FRONT AND REAR WHEELS

- A To attach the front swivel wheel assembly, insert the swivel wheel assembly and push it into the wheel moulding until you hear a 'click which indicates the wheel is locked in. Pull on each wheel to make sure it is engaged. Repeat the process if not locked in.
- **B** To attach the rear wheels, insert each wheel axle into the moulding and push in until locked. You should hear a 'click' which indicates the wheel has locked in. Pull on each wheel to make sure it is engaged. Repeat the process if not locked in.

See Page 11 for Illustration.



ATTACHING THE CANOPY


IMPORTANT NOTE:

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

- **A** To attach the canopy, insert the canopy mouldings into the canopy frame sockets until they connect together.
- **B** Locate the straps on the outer sides of the canopy and press the snap fastener on each strap to the snap fastener on the top of each outer handle tube, then fold the strap up under the canopy back flap and secure strap with hook and loop to the underneath of the canopy.

See Page 12 for Illustrations.



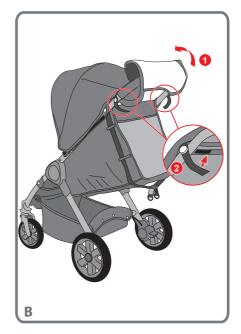


C Fasten the hook strip on the inside bottom edge of each canopy back flap to the loop strip along the top edge of the back rest.



ATTACHING THE CANOPY

- **D** Fasten the hook square on the inside of the canopy back flap to the loop strip on the side of the stroller.
- **E** Fasten the hook strip on the inside edge of the canopy to the loop strip on the side of the stroller.

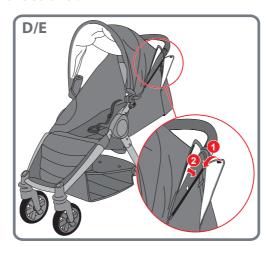

F For additional air circulation the back flap of the canopy can be rolled up and secured with elastic loop and toggle.





ATTACHING THE ARM BAR OR CHILD TRAY (If Supplied or Purchased)

Please Note: The adaptor for arm bar and child tray are the same. Each adaptor is marked Left & Right for correct fitting.

A Pull the fabric back from the sides of the stroller to expose the stroller hinge. Take each arm bar adaptor & insert into the stroller hinge as shown. Push on the adaptor until you hear a 'click' which indicates the adaptor has locked into the stroller hinge. Pull up on each adaptor to ensure they have fully locked in.






Please Note: To assist with putting a child in the stroller, the arm bar and child tray can be rotated clear of the stroller seat.

B Align the arm bar with the adaptors and lower onto the adaptors until you hear a 'click' which indicates the arm bar has locked on to the adaptors.





C To release the arm bar from the adaptor, press in and hold the grey release button located under the arm bar, and rotate the arm bar clear of the stroller seat.

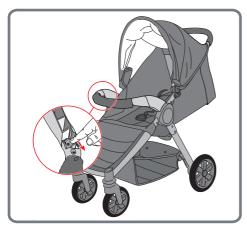



IMPORTANT NOTE: Do not place hot drinks on the child tray. Do not place more than 2kg on the child tray.

D Align the child tray with the adaptors and lower onto the adaptors until you hear a 'click' which indicates the child tray has locked on to the adaptors.





E To release the child tray from the adaptor, press in and hold the grey release button located under the child tray, and rotate the child tray clear of the stroller seat.





USING THE BRAKES



WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.


A The red brake lever is located on the right hand side of the stroller beside the rear wheel.



- **B** To lock the rear wheels, press the red brake lever down until you hear a 'click'. Push the stroller back and forth to confirm the wheels are locked. If not locked, repeat this step.
- C To unlock the rear wheels, push the red brake lever up until you hear a 'click'.

See Page 18 for Illustrations.

USING THE BRAKES

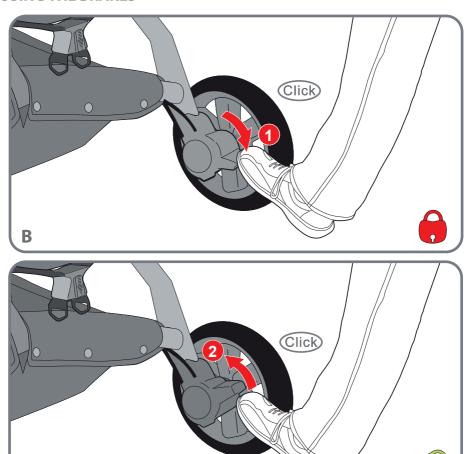

USING THE SWIVEL WHEELS

PLEASE NOTE: Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.

The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

- A To lock the front wheels into the fixed position, press the black swivel lock down until you hear a 'click'.
- **B** To allow the wheels to swivel, push the black swivel wheel lock up until you hear a 'click'.



ADJUSTING THE BACKREST




WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.


PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.


A To adjust the backrest, fold the canopy back flap up over the handle to gain access to the adjuster straps.

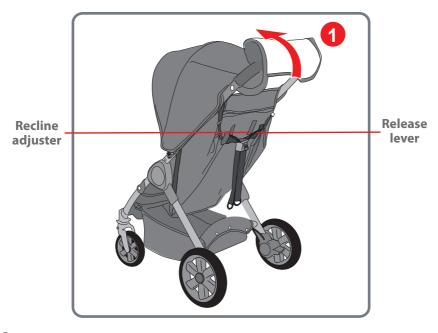

ADJUSTING THE BACKREST

- **B** To raise the backrest, hold the plastic ring at the end of each adjuster strap and pull the straps apart until you reach your desired position.
- **C** To lower the backrest, slide the release lever down on the recline adjuster and pull down on the recline adjuster and lower the backrest to the desired position.
- **D** There is a little pocket under the backrest strap, you can tuck the straps in the pocket when the backrest is in upright position.

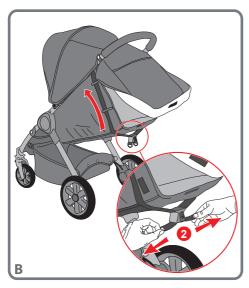

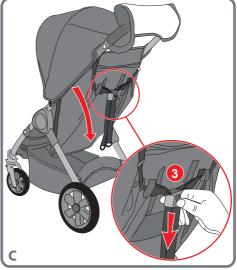

ADJUSTING THE LEG REST

IMPORTANT NOTES:


- THE LEG REST FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG REST IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG REST.
 IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG REST DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG REST MODE.

A To adjust the leg rest, press the release buttons in on both sides of the leg rest and raise or lower to your desired position.



ADJUSTING THE PIVOTAL HANDLE


A To adjust the handle height, squeeze in and hold the buttons on the inside of the handle. Rotate the handle up or down to the desired position then release the buttons.

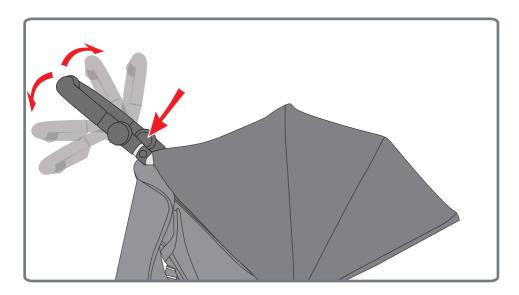

USING THE TETHER STRAP



- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.
- A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

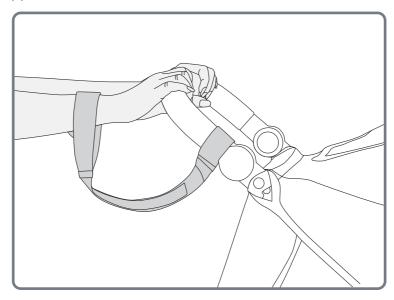


ATTACHING THE RAIN COVER

IMPORTANT NOTE:

ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE. REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.

- A Pull the rain cover over extended canopy and push the back flap of rain cover through the handle opening.
- **B** Attach the hook and loop strips on the sides of the rain cover and the back flap of the rain cover.
- **C** Attach the hook and loop strips on the front of the rain cover around the wheel moulding above the swivel lock.

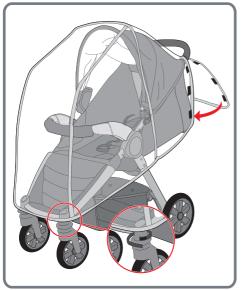




USING THE HARNESS



! WARNING: USE THE HARNESS AT ALL TIMES.


- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

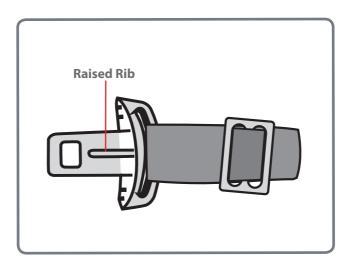

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.


USING THE HARNESS

A Always apply the brakes. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

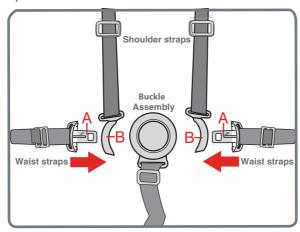


PLEASE NOTE: Ensure the straps are not twisted as they may become uncomfortable for the child.

B Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

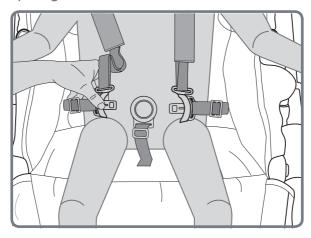


USING THE HARNESS

C Press in and hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

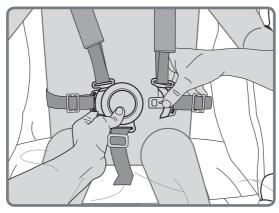

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.


D Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

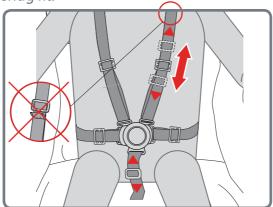


CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

USING THE HARNESS

E Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

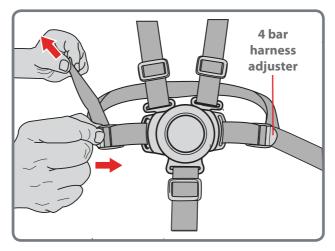



F Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

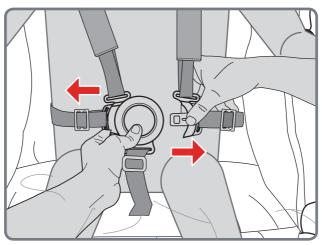

USING THE HARNESS

G The stroller seat has 3 sets of harness slots at different heights to accommodate the child. The shoulder straps must be positioned near the child's shoulders. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat and then pull the shoulder harness buckle tongue through the desired slot.

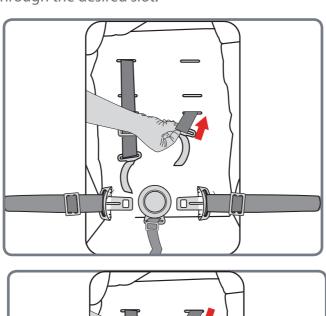

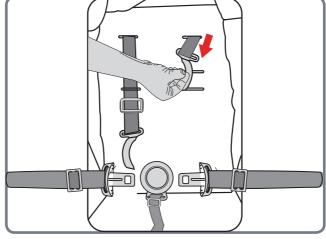

USING THE STROLLER

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

FOLDING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.


- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.
- A Remove the child from the stroller before commencing any folding operation.
- B Lock the brakes. (Refer to Pages 17 & 18, Step B)
- C Lock the swivel wheels. (Refer to Page 19, StepA)
- D Raise the backrest to the fully upright position. (Refer to Pages 20 & 21, Step A & Step B)

PLEASE NOTE: To prevent the canopy back flap from dragging on the ground when the stroller is folded, tuck the bottom of the canopy back flap into the small mesh pocket on the backrest.


E Close the canopy.

FOLDING THE STROLLER

- **F** Press in the Sure Lock release button (1) located on the right hand side of the stroller.
- **G** Move to the front of the stroller and with one hand pull up on the folding strap (2) as shown by the arrow. The stroller will now fold.
- **H** The frame will lock automatically with the storage latch.

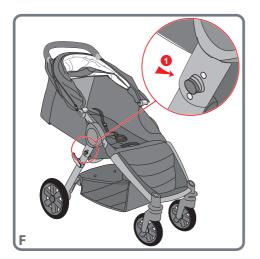



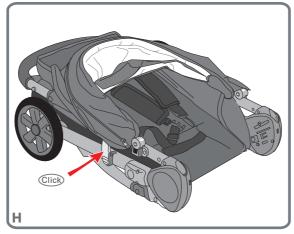


LIFTING AND CARRYING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- A Ensure the storage latch is locked onto the frame before lifting the stroller. To lift the stroller, grasp the carry handle, so the stroller is balanced.

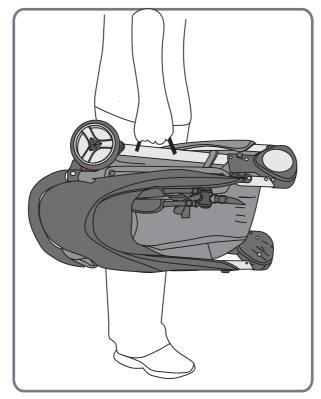

Note: Only use the handle to carry the stroller.

REMOVING THE FRONT AND REAR WHEELS


- **A** To remove the front swivel wheel assembly, locate and press in the black button on top of the wheel moulding.
- **B** To remove the rear wheels, pull the metal latch downwards on the underneath of the brake moulding to release the wheel, and then pull the wheel off.



REMOVING THE CANOPIES


- **A1** Unfasten the hook strip on the inside edge of the canopy from the loop strip on the side of the stroller.
- **A2** Unfasten the hook square on the inside of the canopy back flap from the loop strip on the side of the stroller.
- **A3** Unfasten the hook strip on the inside bottom edge of each canopy back flap from the loop strip along the top edge of the back rest.



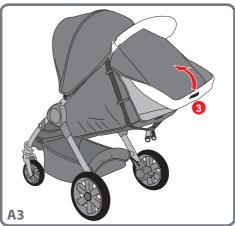

- **B1** Lift the back flap of the canopy over the stroller handle to reveal the hook strips along the back edge of the canopy.
- **B2** Unfasten the loop strip on the back of the outer side canopy straps from the hook strips along the back edge of the canopy.

See Page 37 for Illustration

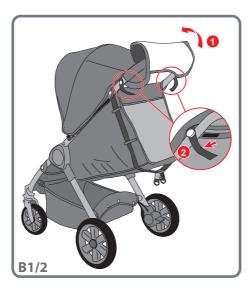

- **C1** Locate the straps on the outer sides of each canopy and pull the snap fastener on each strap out of the snap fastener on the top of each outer handle tube.
- **C2** To remove the canopies, press in the button on the canopy mouldings and pull out of the canopy frame sockets.



www.britax.com.au 37

BABY CAPSULE WARNINGS

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE STEELCRAFT BABY CAPSULE IS NOT TO EXCEED 9kg.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE SAFE N SOUND UNITY BABY CAPSULE IS NOT TO EXCEED 12kg.

BABY CAPSULE IMPORTANT NOTES

- THE STEELCRAFT BABY CAPSULE AND BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE ARE THE ONLY COMPATIBLE BABY CAPSULES DESIGNED TO FIT THE AGILE, AGILE PLUS & Agile Signature STROLLERS.
- THE BABY CAPSULE MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE BABY CAPSULE MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD USING THE BABY CAPSULE HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILD IN THE BABY CAPSULE FOR EXTENDED PERIODS.
- THE BABY CAPSULE IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE BABY CAPSULE MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.

BABY CAPSULE IMPORTANT NOTES


 THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

PLEASE NOTE: THE TRAY OR ARM BAR (IF SUPPLIED OR MAY BE SOLD SEPARATELY) MUST BE REMOVED.

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE BABY CAPSULE.


ATTACHING THE STEELCRAFT BABY CAPSULE PLEASE NOTE: FIT RECEIVERS STANDING IN FRONT OF THE STROLLER.

A Pull the fabric back from the sides of the stroller to expose the stroller hinge. Take each baby capsule receiver and insert into the stroller hinge as shown. Push on the receiver until you hear a 'click' which indicates the receiver has locked in. Pull up on each receiver to check they have fully locked in.

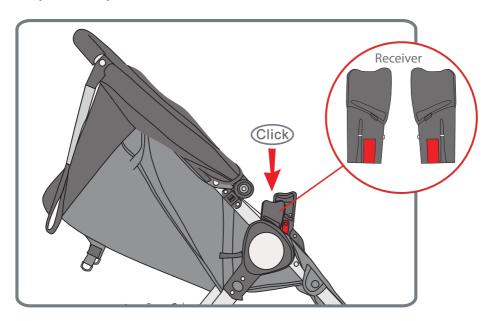


ATTACHING THE STEELCRAFT BABY CAPSULE

B Face the feet end of the Baby Capsule towards the stroller backrest. With the Baby Capsule handle in the upright position, locate the Baby Capsule handle mouldings over the receivers on either side. Notice the indicator is **GREEN**.

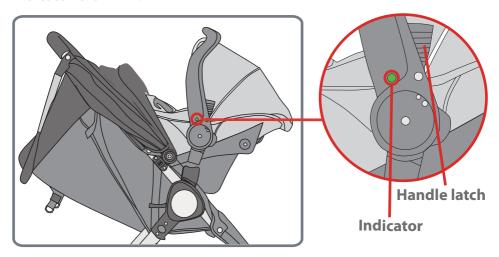


C Lower the Baby Capsule into the receivers. Press down firmly on both sides.

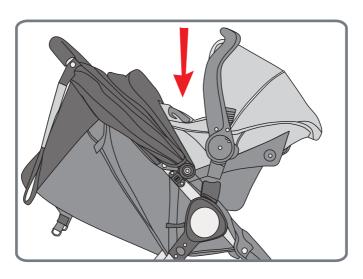

www.britax.com.au 41

ATTACHING THE STEELCRAFT BABY CAPSULE

D The Baby Capsule now needs to be locked securely into the receivers. Squeeze in and hold the latches on either side of the handle, rotate the handle backwards. The **GREEN** indicator will now turn to **RED**.

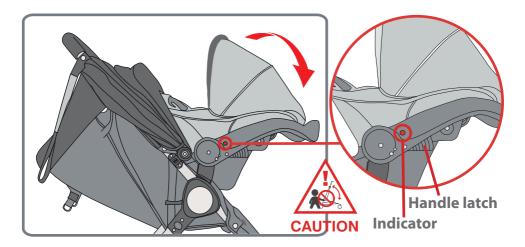


E Release the handle latches. Then with one hand holding the front of the Baby Capsule, push the Baby Capsule handle all the way down until you hear it lock into the receivers. The handle indicator should now be **GREEN** and the Baby Capsule should be locked into the receivers. If the indicator is **RED** the Baby Capsule handle is not in the locked position, repeat step **D**.

See page 43 for Illustration.

IMPORTANT: Ensure that the Baby Capsule is locked into place by pulling up on both sides. Do not use the Baby Capsule if it is not correctly installed.

ATTACHING THE STEELCRAFT BABY CAPSULE

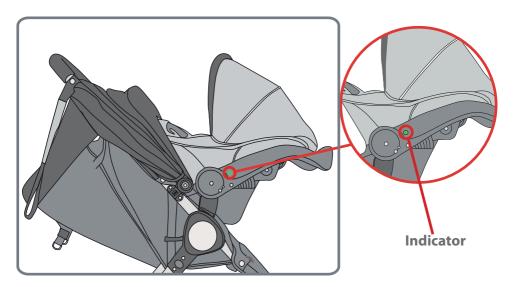


NOTE: Ensure the baby is secured in the Baby Capsule with the harness at all times. Refer to the Baby Capsule instructions regarding placing and securing your baby in the Baby Capsule. The Baby Capsule has been fitted with a hood when using the stroller. The hood may also be used in the car.


43

REMOVING THE STEELCRAFT BABY CAPSULE

A To remove the Baby Capsule, squeeze both handle latches in to release the locks. The indicator will now be **RED**.

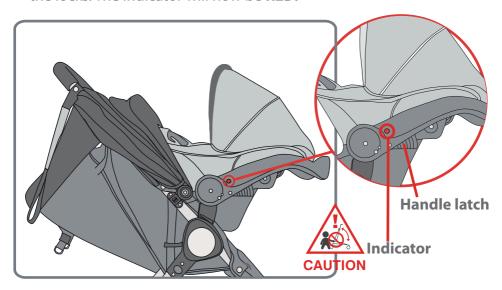


B Continue to rotate the handle forward until it returns to the upright position. Release the latches, the indicator should now be **GREEN**.

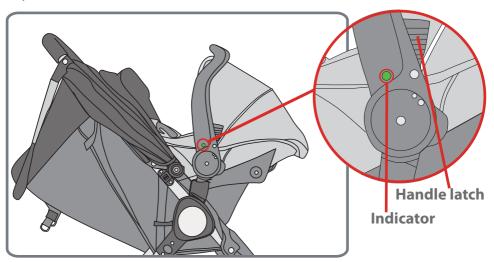


REMOVING THE STEELCRAFT BABY CAPSULE

C Lift and remove the Baby Capsule away from the stroller.

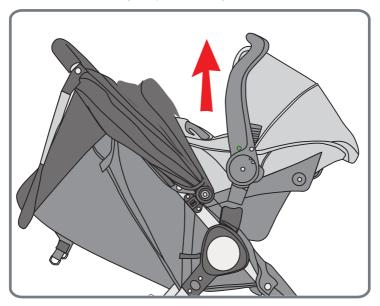

D To remove the receivers, press the red button in on the inside of the receiver and pull the receiver up.

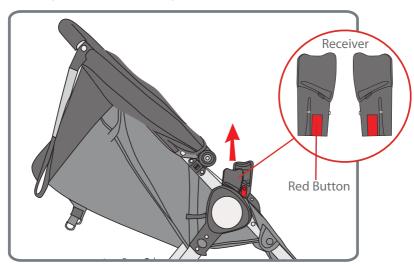


45

INSTALLATION OF BRITAX SAFE N SOUND UNITY BABY CAPSULE

IMPORTANT NOTES


AGILE CLICK & GO RECEIVERS (SOLD SEPARATELY) ARE REQUIRED FOR INSTALLATION OF THE SAFE-N SOUND UNITY BABY CAPSULE TO THE AGILE/AGILE PLUS/AGILE ELITE/AGILE SIGNATURE STROLLER.


PLEASE NOTE: BABY CAPSULE RECEIVERS ARE MARKED LEFT AND RIGHT FOR CORRECT FITTING, The Left and Right indicate correct side when you standing behind the stroller handle.

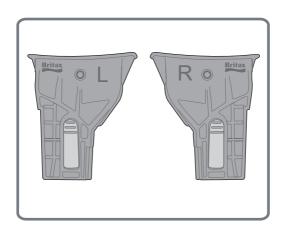

INSTALLATION OF AGILE CLICK & GO RECEIVERS PLEASE NOTE: FIT RECEIVERS STANDING IN FRONT OF THE STROLLER.


A Pull the fabric back from the sides of the stroller to expose the stroller hinge. Take each baby capsule receiver and insert into the stroller hinge as shown. Push on the receiver until you hear a 'click' which indicates the receiver has locked in. Pull up on each receiver to check they have fully locked in.

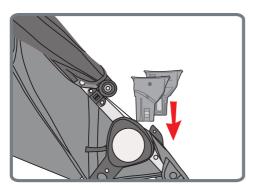


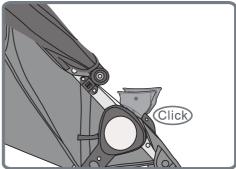

INSTALLATION OF BRITAX SAFE N SOUND UNITY BABY CAPSULE


- A Align the Unity Baby capsule with the Click N Go receivers. The Baby Capsule must be facing handle.
- **B** Press firmly down on the Click N Go receivers until you hear a 'click' which indicates the Baby Capsule have locked into position. Pull up the Baby Capsule to ensure they are locked into the stroller frame.

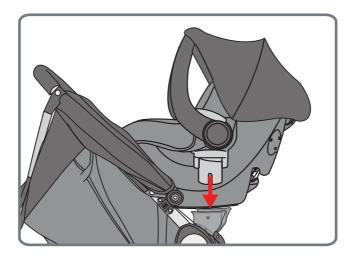


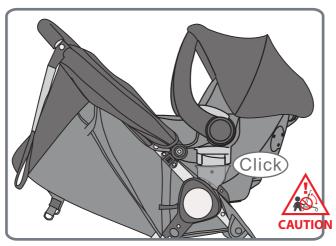

REMOVING THE BRITAX SAFE N SOUND UNITY BABY CAPSULE

A Before remove the Baby Capsule, lock the stroller brake first. Squeeze both release levers on the Click N Go connectors at the same time and support the weight of the baby capsule. Lift and remove the baby capsule from the stroller frame.

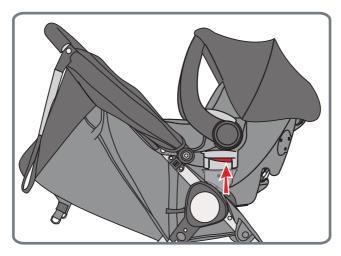

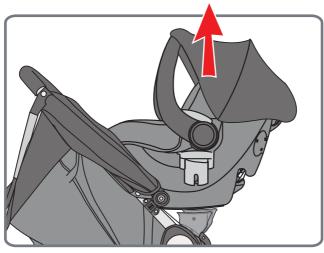

www.britax.com.au 49

NOTES

50

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



BRITAX CHILDCARE PTY. LTD A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600
Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE 1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prams and Strollers - Safety Requirements."

©2019 Copyright Britax Childcare Pty. Ltd. Australia

