

ONE 2 TRAVEL SYSTEM STROLLER



Suitable for use with the One 2 Second Seat, and Britax Unity Baby Capsule. (All products are sold separately)

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

www.britax.com.au

Series TK321-T

CONTENTS

STROLLER SECTION

| Stroller warnings and important Notes | 4 |
|---------------------------------------|----|
| Manual handling techniques | 6 |
| Stroller parts list | 7 |
| Stroller Features | 9 |
| Stroller configurations | 11 |

STROLLER ASSEMBLY

| Opening the stroller frame | 12 |
|---|----|
| Attaching or removing the rear & front wheels | 13 |
| Attaching the stroller seat | 14 |
| Attaching the canopy | 15 |
| Attaching the arm bar | 16 |
| Attaching the shoulder harness pads | 17 |
| Attaching the boot cover | 17 |
| Attaching the organiser bag | 18 |
| Attaching the cup/bottle holder | 18 |
| Installing the rain cover | |
| | |

STROLLER OPERATION

| Using the brakes | 19 |
|---------------------------------------|----|
| Using the front wheel swivel lock | 20 |
| Adjusting the backrest | 21 |
| Adjusting the leg rest | 22 |
| Adjusting the pivotal handle | 22 |
| Securing your child in the harness | 23 |
| Adjusting the harness | 24 |
| Opening the harness | 24 |
| Adjusting the shoulder harness height | |
| Using the storage basket | |
| | |

CONTENTS

STROLLER OPERATION

| Using the tether strap | 27 |
|--|----|
| Removing and reversing the stroller seat | 28 |
| Converting stroller to bassinet | 29 |
| Fitting the Bassinet liner | 30 |
| Using the stroller | 31 |
| Folding the stroller | 32 |
| Lifting and carrying the stroller | |

SECOND SEAT

| Second Seat Warnings & Important Notes | 34 |
|--|----|
| Attaching the wheel guards | 35 |
| Installing and removing seat extension adaptors | 35 |
| Attaching the Second Seat to the stroller frame | 36 |
| Removing the Second Seat from the stroller frame | 37 |

BABY CAPSULE

| Baby Capsule Warnings & Important Notes | 38 |
|--|----|
| Installing and Removing the Click n Go receivers | 39 |
| Attaching the Britax Unity baby capsule | 40 |
| Removing the Britax Unity baby capsule | |
| CARE AND MAINTENANCE | 42 |
| WARRANTY | 43 |
| NOTES | 46 |

WARNINGS

ALWAYS FOLLOW THE MANUFACTURES INSTRUCTIONS.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.



ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20 KG. 15KG FOR MOTHER FACING BABY MODE, 12KG FOR THE BRITAX UNITY BABY CAPSULE (SOLD SEPARATELY) OR 15KG FOR THE SECOND SEAT (SOLD SEPARATELY).

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK OR THE INSTRUCTION MANUAL INCLUDED WITH THE INDIVIDUAL PRODUCTS. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

IMPORTANT NOTES

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR (SUPPLIED) BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS UNLESS THEY ARE SUPPLIED OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 12 KG IN THE BASKET AT SINGLE MODE OR 4 kg at double mode, 1 kg in the cup/bottle holder or 1.5 kg in the organiser bag if supplied.

MANUAL HANDLING TECHNIQUES

The SMART lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- · Assess whether the load needs to be moved;
- Where is it going to be placed, check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

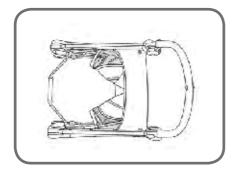


1x Stroller Frame & Basket




1x Stroller Seat

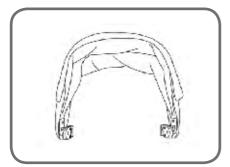


1x Canopy

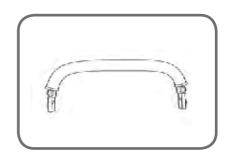


1x Arm Bar

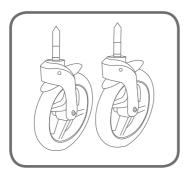


2x Front Wheels

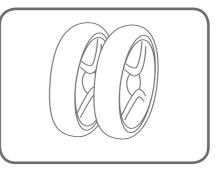


 


PARTS LIST

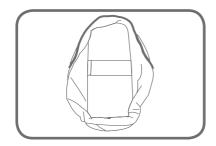


1x Bassinet liner

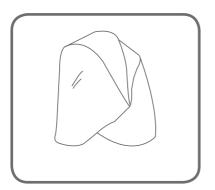


1x Rain Cover (fit both single and double mode)

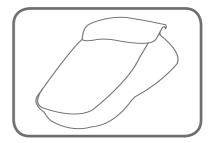


1x Boot Cover

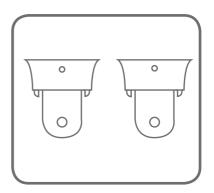


1x set of Click N Go Receivers

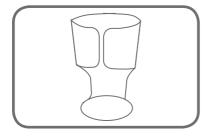

1x Cup/Bottle holder

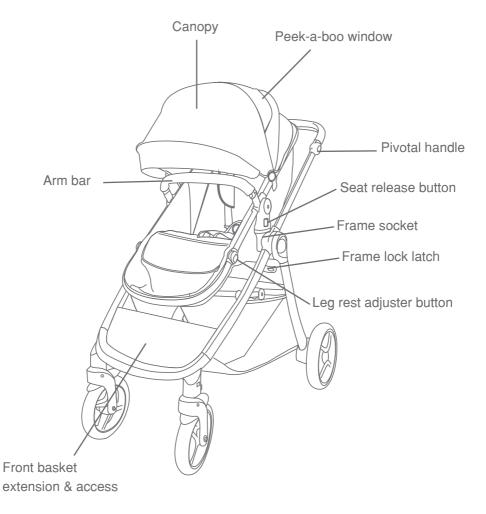

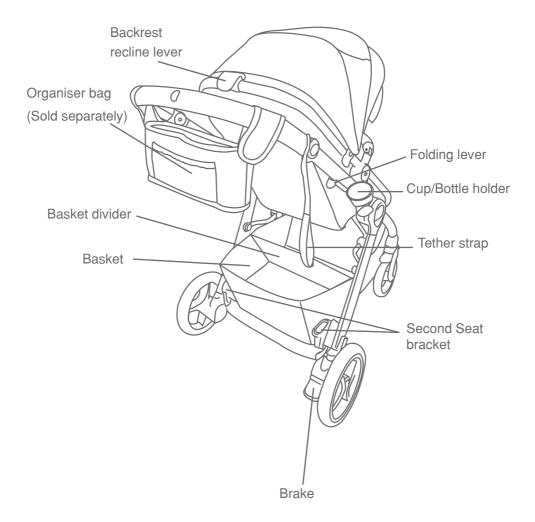

STROLLER CONFIGURATIONS

PLEASE NOTE: Shown with optional Accessories (sold separately).

D0 N0T exceed maximum weight limits defined in the Baby Capsules or accessory instruction manuals.

SINGLE MODE










DOUBLE MODE

It is recommended to use the extension receivers (**supplied with the Second Seat**). There are various positions available for double mode, please adjust seat positions and do not use the positions if there is not enough space for the lower occupant.

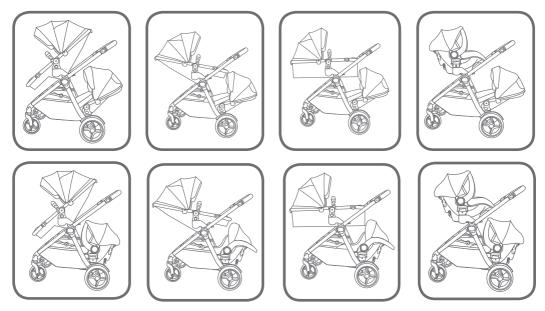


IMPORTANT NOTES:


PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.

OPENING THE STROLLER FRAME

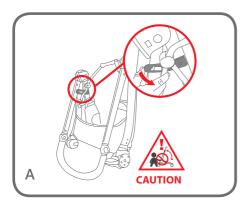


A Open the frame lock latches inside the frame. The lower part of the stroller will be open.

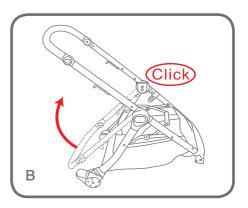


B Lift the handle upwards until the frame is fully open and locked.

ATTACHING OR REMOVING THE REAR WHEELS

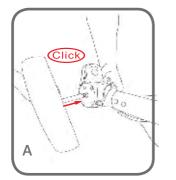


A Insert wheel axle into the moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

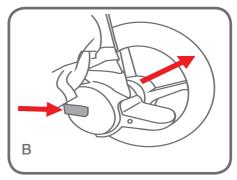


B To remove the rear wheels, press and hold the release button in the wheel housing and pull away.

ATTACHING OR REMOVING THE FRONT WHEELS

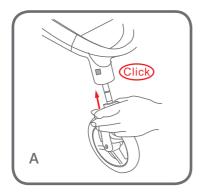

A Insert each front swivel wheel assembly into the wheel moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

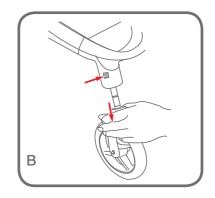


B To remove the front wheels, push the release button on wheel moulding.

ATTACHING THE STROLLER SEAT


IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING THE SEAT DIRECTION.

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

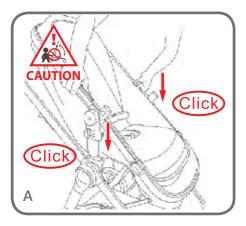

A Hold the stroller seat over the frame and align the seat connectors with frame sockets. Push down on the seat until both stroller seat connectors have locked into the frame sockets.

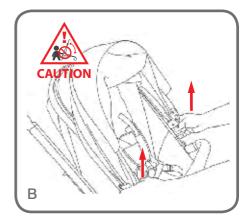

B Pull up on both sides of the seat to ensure the seat is locked.


ATTACHING THE CANOPY

IMPORTANT NOTE:


The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.



A Place the canopy on the stroller seat and push the clips on the sides of the canopy onto the stroller seat until they snap into place.

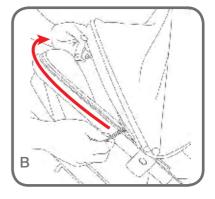


B Attach the canopy to the seat unit with the zipper. There is peek a boo window with magnetic closer for viewing and ventilation.

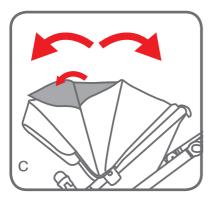


C To adjust the canopy, open by pulling forward, or close by pushing the canopy backward. There is window on the canopy, just lift the window flap to expose mesh window underneath.

ATTACHING THE ARM BAR

WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.

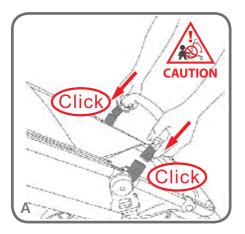

A Insert the arm bar mouldings into the sockets on each side of the stroller frame and push down on the arm bar until a 'click'. To assist with putting a child in the stroller, you can release the arm bar on one side. Press the button on the side of the arm bar moulding and pull the arm bar up and out of the socket. Rotate the arm bar clear of the stroller. Reattach the arm bar after fastening the child in the harness.

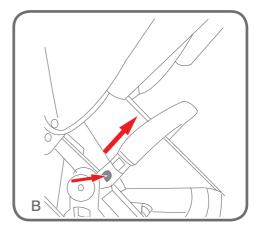


B To remove the arm bar, press the button on each side of the arm bar moulding and pull arm bar up and out of the sockets.

ATTACHING THE SHOULDER HARNESS PADS


IMPORTANT NOTE:

ENSURE THAT THE SHOULDER STRAPS ARE FITTED THROUGH THE APPROPRIATE HARNESS SLOTS TO SUIT YOUR CHILD'S SEATED SHOULDER HEIGHT. (Refer to Page 25)

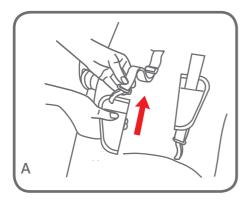

A Slide the shoulder harness pads onto the shoulder harness straps and adjust to the position which fits comfortably on the child.

ATTACHING THE BOOT COVER

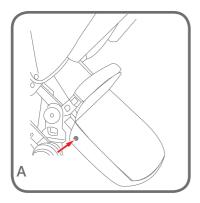


A Fit the boot cover over the leg rest and close the snap fastener on both sides of the boot cover.


ATTACHING THE ORGANISER BAG (Sold separately)

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 1.5 KG IN THE ORGANISER BAG.

A The organiser bag attaches to the handle just above the handle height adjuster with hook and loop.

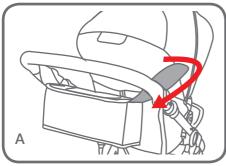


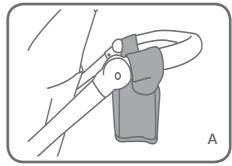


ATTACHING THE CUP/BOTTLE HOLDER

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 1 KG IN THE CUP/BOTTLE HOLDER. DO NOT PLACE HOT DRINKS IN THE CUP/BOTTLE HOLDER. REMOVE THE CUP HOLDER BEFORE FOLDING THE STROLLER.

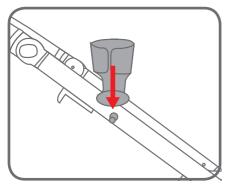

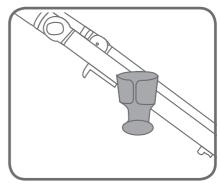

A The cup/bottle holder can only fit on the right hand side of the frame. Push the cup/bottle holder attachment to the connector on the frame.

INSTALLING THE RAIN COVER

IMPORTANT NOTE:


ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE. REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.




A Fit the rain cover over the canopy and hook the front elastic section of rain cover over the leg rest. The back part of the rain cover will fit both single and double mode.

USING THE BRAKES



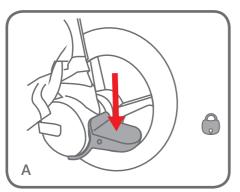

A Push down the brake pedal to engage the brake.

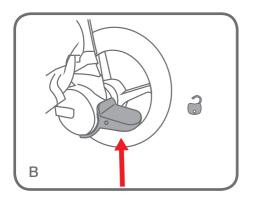


B Push the brake pedal upward until the brake is disengaged.


USING THE FRONT WHEEL SWIVEL LOCK

PLEASE NOTE: Always lock the swivel wheels when locking the stroller on rough surfaces as this will minimise wheel wobble.

The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

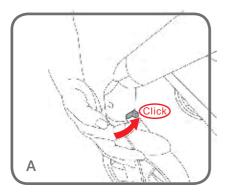

A To lock the front wheels into the fixed position, slide the swivel wheel locking clip towards the inside of the frame until you hear a 'click'.

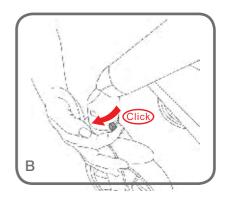


B To allow the wheels to swivel, slide the black swivel wheel locking clip towards the outside of the frame until you hear a 'click'.

ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

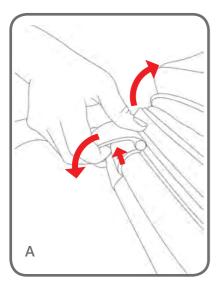


PLEASE NOTE: There are four backrest positions.

A Lift the recline lever on the back of the seat and hold while raising or lowering the backrest to the desired position.

ADJUSTING THE LEG REST


IMPORTANT NOTES:

- THE LEG REST FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG REST IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG REST, IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG REST DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG REST MODE.

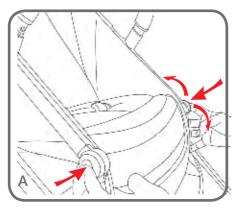

A Press the two release buttons on both sides of the leg rest hinge and hold while raising or lowering the leg rest to the desired position.

ADJUSTING THE PIVOTING HANDLE

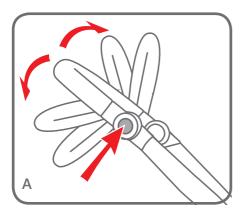

A Press the two release buttons on the outside of the handle and hold while raising or lowering the handle to the desired position.


When the desired height has been achieved let go of both release buttons.

SECURING YOUR CHILD HARNESS

WARNINGS: USE THE HARNESS AT ALL TIMES.


- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up. Ensure the harness straps are not twisted as they may become uncomfortable for the child.

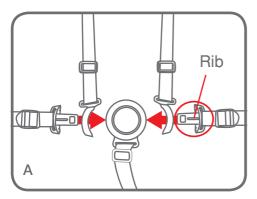

A Always apply the brakes before placing child in stroller seat. Position the shoulder strap near the child's shoulder and position crotch strap between legs.

Thread the waist strap buckle tongues through the shoulder straps tongue guides.

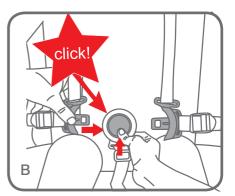

B Hold the centre button in on the crotch buckle and insert the waist buckle tongues into the crotch strap buckle until you hear a 'click'.


Repeat the procedure on the other side.

Please ensure it is locked.

ADJUSTING THE HARNESS




A Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

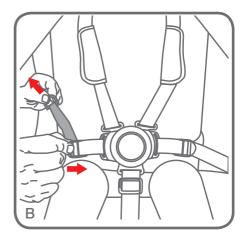

B Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

OPENING THE HARNESS

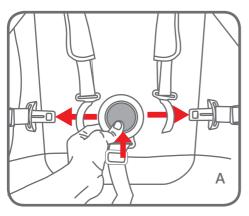


A Release the harness by pressing the centre button in on the crotch buckle while pulling the waist tongues out of the crotch buckle.


ADJUSTING THE SHOULDER HARNESS HEIGHT

IMPORTANT NOTE:

THE HARNESS CAN BE ADJUSTED TO THREE DIFFERENT HEIGHTS TO ACCOMMODATE THE CHILD. THE SHOULDER STRAPS MUST BE POSITIONED NEAR THE CHILD'S SHOULDERS.

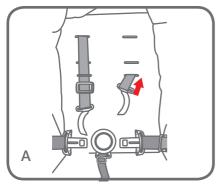

A To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.

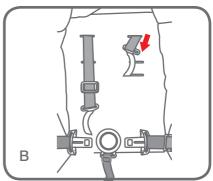


B Select the appropriate shoulder harness height and pull each shoulder harness tongue through the harness slot.

USING THE STORAGE BASKET


IMPORTANT NOTE:

DO NOT PLACE MORE THAN 12 KG IN THE BASKET AT SINGLE MODE OR 4 KG AT DOUBLE MODE.

PLEASE NOTE: WHEN A CHILD IS IN THE SECOND SEAT, IT IS RECOMMENDED TO ACCESS THE STORAGE BASKET FROM THE FRONT.

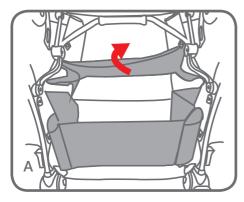

A There is basket divider in the base of the basket, lift the basket divider up and press the snaps on the side to create the division in the basket.

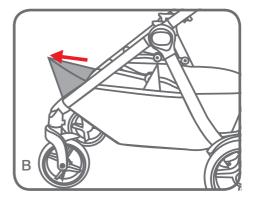


B You can extend the front of the basket to create more storage space and easy access to basket.

USING THE TETHER STRAP

WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOP-ING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

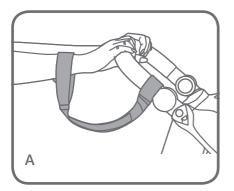


A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

REMOVING & REVERSING THE STROLLER SEAT IMPORTANT NOTE:


ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING THE SEAT DIRECTION.

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IN REWARD FACING POSITION (MOTHER FACING BABY POSITION) IS 15KG.

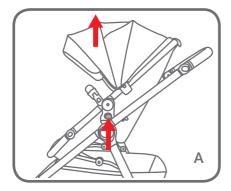

A Lift both release levers on the seat connectors at the same time and lift the seat up and away from the stroller frame.

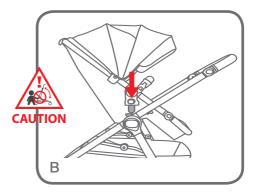


B Turn the seat facing opposite direction and then attach the stroller seat to the frame in the rearward facing position.


CONVERTING STROLLER TO BASSINET

WARNINGS:


- DO NOT USE THIS BASSINET ONCE THE CHILD CAN SIT UP UNAIDED.
- THIS BASSINET IS ONLY USED ON THE FRAME AND CAN'T BE USED AS STAND ALONE BASSINET.

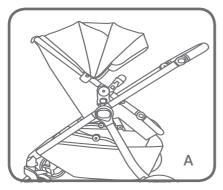

A Put the stroller seat into reverse facing position.

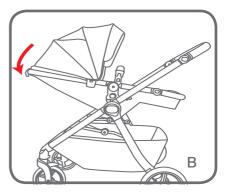


B Put the backrest to lowest position.

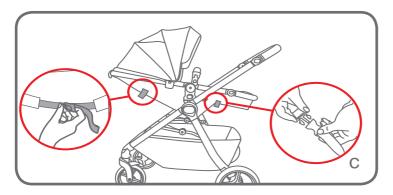


C Pull the backrest clip to extend the strap all the way and push down the backrest. Unbuckle the clip under leg rest and push down the leg rest.

FITTING THE BASSINET LINER

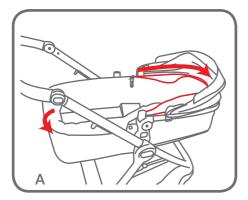

A The bassinet must face the stroller handle.

Place bassinet liner over the bassinet and zip the top half of the liner to attach to seat. Pull the bottom half of the bassinet liner over the frame.

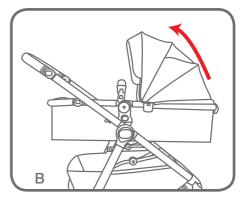

B Pull the canopy up for protection. For attaching and using of canopy, please refer to page 15.

USING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast, locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods unless it is supplied from the handle. Use the storage basket.

FOLDING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

IMPORTANT NOTE:

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.

PLEASE NOTE: The stroller seat and wheels can be removed to reduce the total folded size.


FOLDING TIPS:

- 1. For easier handling. It is recommended to remove the stroller seat from the frame (Refer to Page 27) before folding. Then fold the frame and put both the seat and frame in the car.
- 2. For smaller cars it may be convenient to simply remove the rear wheels.

IMPORTANT NOTE:

- Make sure the seat is in upright position before folding if you fold the stroller with seat attached.
- Remove the Baby Capsule if connected to the frame prior to folding.
- The Second Seat MUST be removed prior to folding.
- The rain cover must also be removed if fitted.



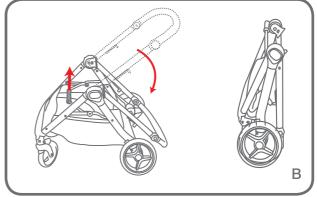

- A Engage the brake. Pull the latches on the handle tube upwards and drop down the handle all the way.
- B Pull the handle under the stroller seat upwards until you hear a 'click' and the frame is fully folded and the frame lock latch is locked in properly.

LIFTING AND CARRYING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES

IMPORTANT NOTE:

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CAR-RYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- TO AVOID DAMAGE, DO NOT PLACE HEAVY OBJECTS ON TOP OF THE FOLDED STROLLER.
- ENSURE THAT THE STORAGE LATCH IS ENGAGED WHEN LIFTING OR CARRYING THE VEHICLE.

SECOND SEAT

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE SECOND SEAT ON THE STROLLER ONLY. FOR PROPER USE OF THE SEC-OND SEAT, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE SECOND SEAT.




- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS SECOND SEAT IS NOT TO EXCEED 15KG.

IMPORTANT NOTES:

- DO NOT USE THIS SECOND SEAT WITH ANY OTHER MODELS OF STROLLER.
- THE SECOND SEAT MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER FRAME.
- THE SECOND SEAT CAN ONLY BE USED IN THE FORWARD FACING POSITION, CONNECTED TO THE REAR OF THE STROLLER.
- DO NOT OVERLOAD THE STROLLER. OVERLOADING WILL CAUSE THE STROLLER TO TIP BACKWARDS.


ATTACHING THE WHEEL GUARDS

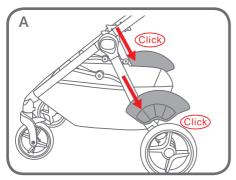


A Slide each guard onto the mounting bracket above each rear wheel housing and push down until it locks into place.

There is left and right wheel guard. Please ensure it is locked.

INSTALLING AND REMOVING SEAT EXTENSION ADAPTORS

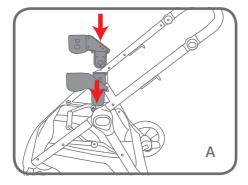


A Select the extension adaptor that has a coloured dot and align with the coloured dot on the frame socket. Note: Coloured dots are only on one side of the frame socket. Firmly press down on the Extension adaptor until you hear a 'click' and a green indicator can be seen through a window in the frame socket. Repeat on the other side with the receiver with no coloured dot. To ensure the receiver is engaged pull upwards.

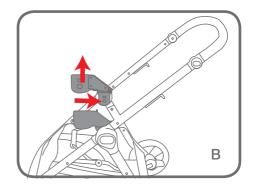


B To remove the extension adaptors, press in and hold the button on the inside of the receiver and pull up the extension adaptors out of the frame sockets.

SECOND SEAT


ATTACHING THE SECOND SEAT TO THE STROLLER FRAME

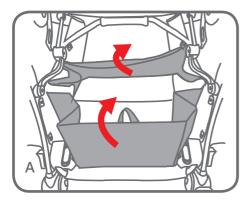


A Before attaching the Second Seat to the stroller frame push down the back of the basket to the base of the basket and lift the basket divider up and press the snaps on the side to create the division in the basket.

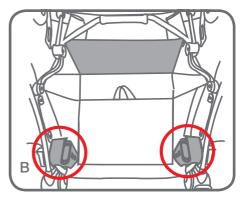

A Line up the Second Seat connectors to the second seat frame socket inside of the stroller frame (located on inside of thee rear wheel housing).

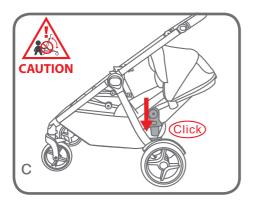

C Push down the Second seat until it locks. Pull up on both sides of the seat to ensure the seat is locked.

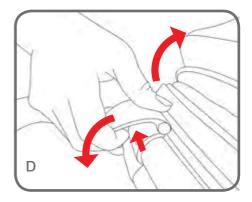


D Adjust the backrest to desired position.

SECOND SEAT

REMOVING THE SECOND SEAT FROM THE STROLLER FRAME

IMPORTANT NOTES:

- ALWAYS REMOVE YOUR CHILD FROM THE SECOND SEAT BEFORE REMOVING THE SECOND SEAT.
- ALWAYS REMOVE THE SECOND SEAT BEFORE FOLDING.

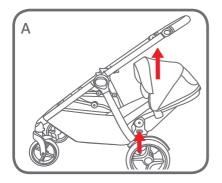

A Lift both release levers on the seat connectors at the same time and lift the seat up and away from the stroller frame.

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE IS NOT TO EXCEED 12kg.

IMPORTANT NOTES:

- THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE ARE THE ONLY COMPATIBLE BABY CAPSULES DESIGNED TO FIT THE ONE 2 STROLLER, THE UNITY BABY CAPSULE TO BE USED WITH CLICK N GO RECEIVERS (SUPPLIED).
- REMOVE THE STROLLER SEAT OR BASSINET FROM THE STROLLER FRAME BEFORE INSTALLING THE BABY CAPSULE.
- THE BABY CAPSULE MUST BE CORRECTLY FITTED AND LOCKED ONTO THE FRAME.
- ON TOP SEAT POSITION THE BABY CAPSULE MUST ONLY BE USED IN THE REARWARD FACING POSITION (BABY FACING PARENT), FITTED FACING TOWARD THE STROLLER HANDLE.
- ON SECOND SEAT POSITION THE BABY CAPSULE MUST ONLY BE USED IN THE FORWARD FACING POSITION, FITTED FACING TOWARD THE FRONT OF THE STROLLER.
- SECURE THE CHILD USING THE BABY CAPSULE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE BABY CAPSULE FOR EXTENDED PERIODS.
- THE BABY CAPSULE IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE BABY CAPSULE MUST BE REMOVED FROM THE STROLLER FRAME OR THE SECOND SEAT FRAME BEFORE FOLDING.


BABY CAPSULE OPERATION

• THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.




THE ONE 2 CLICK N GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALL THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR THE BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE.

INSTALLING AND REMOVING THE CLICK N GO RECEIVERS

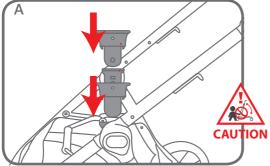


A Select the Click n Go receiver that has a coloured dot and align with the coloured dot on the frame socket. Note: Coloured dots are only on one side of the frame socket. Firmly press down on the Click N go receivers until you hear a 'click' and a green indicator can be seen through a window in the frame socket. Repeat on the other side with the receiver with no coloured dot.

To ensure the receiver is engaged before placing the baby capsule.

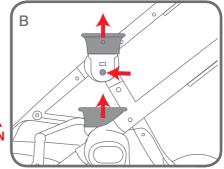

B To remove the Click N Go receivers, press in and hold the button on the top of the receiver and pull up the receivers out of the frame sockets.

BABY CAPSULE OPERATION

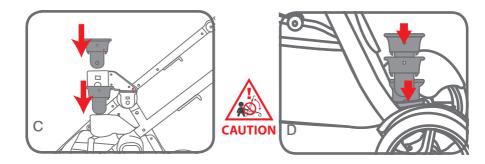


- C You can use the Click N go receivers with extension adaptors. Just follow the step A.
- D You can use the Click N go receivers at the Second Seat sockets if you wish to attach Unity baby capsule at the Second Seat position. Just follow the step A.

ATTACHING THE BRITAX UNITY BABY CAPSULE

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE BABY CAPSULE.


ENSURE THE BABY IS SECURED IN THE BABY CAPSULE WITH THE HARNESS AT ALL TIMES. REFER TO THE BABY CAPSULE INSTRUCTION MANUAL RE-GARDING PLACING AND SECURING YOUR BABY IN THE BABY CAPSULE.

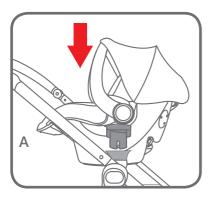


A Engage the stroller brake. Align the Unity Baby capsule with the Click N Go receivers.

The Baby Capsule must be facing handle.


BABY CAPSULE OPERATION

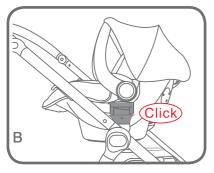

B Press firmly down on the Click N Go receivers until you hear a 'click'. Pull up the Baby Capsule to ensure they are locked into the stroller frame.

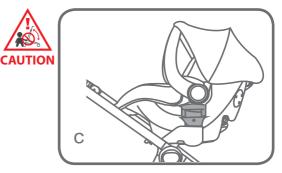


C With extension adaptors, the Baby capsule fits the same way.

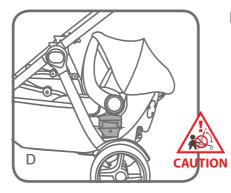

D On second seat position, align the Unity Baby capsule with the Click N Go receivers.

The Baby Capsule must be facing front of the stroller.

REMOVING THE BRITAX UNITY BABY CAPSULE

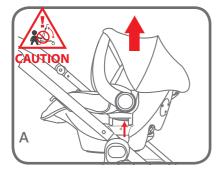

A Before remove the Baby Capsule, lock the stroller brake first.

Squeeze both release levers on the Click N Go connectors at the same time and support the weight of the baby capsule. Lift and remove the baby capsule from the stroller frame.

CARE & MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew, to help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and Salt will cause premature wear and corrosion.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



DID YOU KNOW:

Registering your product purchase online simplifies proof of purchase in event of a warranty claim.

Scan this QR code on your phone to go straight to our website to fill out the registration form.



MAKING A WARRANTY CLAIM

Your rights under a Britax company warranty are separate from and independent of your rights under the statutory consumer guarantees. What you need to do to enforce your rights under a statutory consumer guarantee is set out in the Australian Competition and Consumer Commission's Consumer Guarantees - A Guide for Consumers.

To make a claim under a Britax company warranty, please contact our customer service team on:

1300 303 330 - Australia, 0508 688 822 - New Zealand or alternatively by email at:

Australia - au-custserv@britax.com

New Zealand - nzoffice@britax.com

You will be required to :

- 1. Return the product to the place of purchase or to a designated repair agent;
- 2. Present your receipt as proof of purchase;
- 3. Identify the defect in the product; and
- 4. Present the product to Britax for inspection on request.

WARRANTY

Britax will advise you whether the product is covered by the Britax company warranty. Britax's decision of whether a product is covered by a Britax company warranty is final. Britax will act reasonably when determining whether a product is covered by a company warranty.

AUSTRALIAN CONSUMER LAW

On all of our goods, you have the benefit of a statutory consumer guarantee. In summary, goods are guaranteed to be of "acceptable quality" (fit for purpose), goods are guaranteed to match any sample against which they are sold. These consumer guarantees are provided for by the Australian Consumer Law and, if you believe anyone of these guarantees is not satisfied by a Britax product, you have rights under the Australian Consumer law to enforce that guarantee.

Your rights under the statutory consumer guarantees are set out in the Australian Competion and Consumer Commission's Consumer Guarantees - A Guide for Consumers.

In addition to the statutory consumer guarantees, BRITAX offers its own company warranty on all of its products. You therefore have the option of seeking redress for defective or faulty product either under the BRITAX company warranty or the statutory guarantees. After the Britax company warranty expires, you still have your rights under the statutory consumer guarantees.

Depending on the product involved, the following Britax company warranty applies:

WARRANTY

STEELCRAFT WARRANTY

Steelcraft products are covered by this company warranty against faulty materials and workmanship (normal wear and tear excluded) that affects the normal operation of your Steelcraft product. In the unlikely event that you find that your Steelcraft product does not satisfy this warranty, Britax will (at its option) repair or replace that product within a reasonable period of you making a claim in accordance with this policy.

In the event that a replacement product is no longer available, Britax reserves the right to provide what it considers to be a suitable alternative.

For this company warranty to apply, you must make an application before the expiration of the following periods from date of purchase:

• 2 years on Steelcraft strollers, Steelcraft stroller accessories, highchairs, portable cots, walkers and rockers.

This company warranty does not apply to second hand or aftermarket goods or goods used for rental, hire or other commercial purposes or to any claim where the damage or fault is, in whole or part, the result of incorrect installation, mistreatment, intentional damage, any use other than use in normal conditions or any use otherwise than in accordance with the Instruction Manual for that product.

Please read your instruction manual carefully before using any of our products.

INTERNATIONAL WARRANTY

Britax products are available through a network of retailers in Australia and New Zealand. If you are an International customer we do not offer a warranty service outside of these regions.



BRITAX CHILDCARE PTY. LTD. A.B.N. 55 006 773 600 Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE 1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS 2088:2013 "Prams and Strollers - Safety Requirements"

[©]2019 Copyright Britax Childcare Pty. Ltd. Australia

