Steelcraft

VIRTU TRAVEL SYSTEM STROLLER



Suitable for use with Britax Unity Baby Capsule. (Baby capsule and recivers both sold separately)

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

WARNINGS

ALWAYS FOLLOW THE MANUFACTURES INSTRUCTIONS.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.



!\WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20 KG. 15KG FOR MOTHER FACING BABY MODE, 12KG FOR THE BRITAX UNITY BABY CAPSULE (SOLD SEPARATELY).

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK OR THE INSTRUCTION MANUAL INCLUDED WITH THE INDIVIDUAL PRODUCTS. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

IMPORTANT NOTES

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR (SUPPLIED) BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS UNLESS THEY ARE SUPPLIED OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 10 KG IN THE BASKET.

MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved:
- Where is it going to be placed, check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

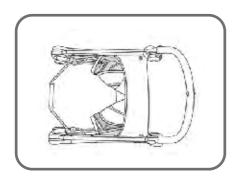


1x Stroller Frame & Basket



1x Stroller Seat

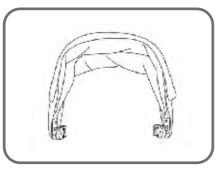


1x Canopy

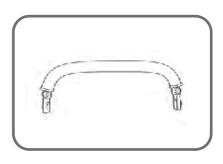

1x Arm Bar



2x Front Wheels

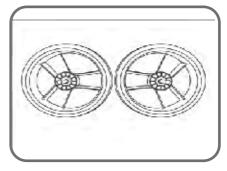


2x Rear Wheels

IMPORTANT NOTES:


PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.

OPENING THE STROLLER FRAME

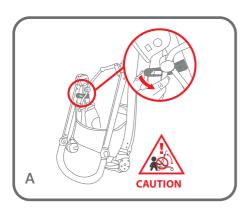


A Open the frame lock latches inside the frame. The lower part of the stroller will be open.

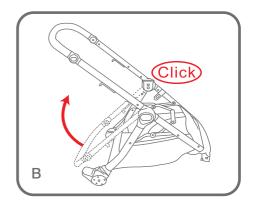


B Lift the handle upwards until the frame is fully open and locked.

ATTACHING OR REMOVING THE REAR WHEELS

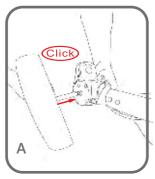


A Insert wheel axle into the moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

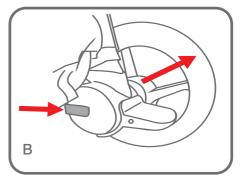


B To remove the rear wheels, press and hold the release button in the wheel housing and pull away.

ATTACHING OR REMOVING THE FRONT WHEELS

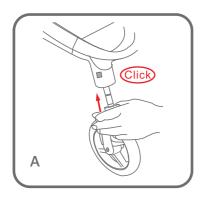

A Insert each front swivel wheel assembly into the wheel moulding and push in until you hear a 'click'. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

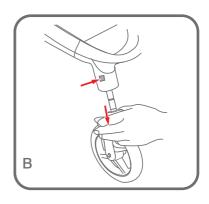


B To remove the front wheels, push the release button on wheel moulding.

ATTACHING THE STROLLER SEAT

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING. REMOVING OR CHANGING THE SEAT DIRECTION.

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

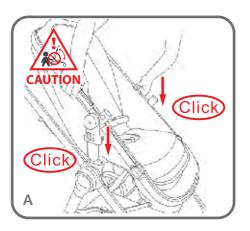

A Hold the stroller seat over the frame and align the seat connectors with frame sockets. Push down on the seat until both stroller seat connectors have locked into the frame sockets.




B Pull up on both sides of the seat to ensure the seat is locked.


ATTACHING THE CANOPY

IMPORTANT NOTE:

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

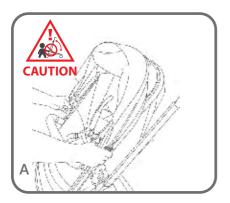


A Place the canopy on the stroller seat and push the clips on the sides of the canopy onto the stroller seat until they snap into place.

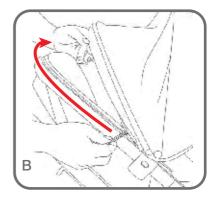


B Attach the canopy to the seat unit with the zipper. There is peek a boo window for viewing and ventilation.

ATTACHING THE ARM BAR

WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.

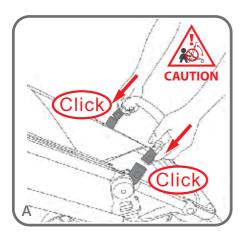

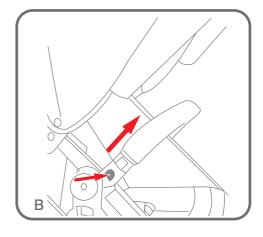

A Insert the arm bar mouldings into the sockets on each side of the stroller frame and push down on the arm bar until a 'click'.

To assist with putting a child in the stroller, you can release the arm bar on one side. Press the button on the side of the arm bar moulding and pull the arm bar up and out of the socket. Rotate the arm bar clear of the stroller.


Reattach the arm bar after fastening the child in the harness.

B To remove the arm bar, press the button on each side of the arm bar moulding and pull arm bar up and out of the sockets.

ATTACHING THE SHOULDER HARNESS PADS

IMPORTANT NOTE:


ENSURE THAT THE SHOULDER STRAPS ARE FITTED THROUGH THE APPROPRIATE HARNESS SLOTS TO SUIT YOUR CHILD'S SEATED SHOULDER HEIGHT. (Refer to Page 25)

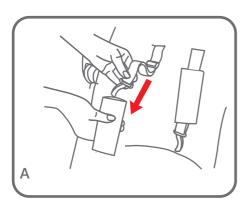


A Slide the shoulder harness pads onto the shoulder harness straps and adjust to the position which fits comfortably on the child.

USING THE BRAKES



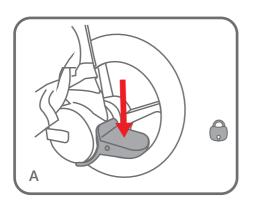

A Push down the brake pedal to engage the brake.

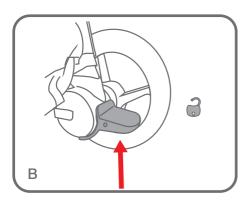


B Push the brake pedal upward until the brake is disengaged.


USING THE FRONT WHEEL SWIVEL LOCK

PLEASE NOTE: Always lock the swivel wheels when locking the stroller on rough surfaces as this will minimise wheel wobble.

The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

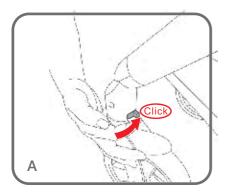

A To lock the front wheels into the fixed position, slide the swivel wheel locking clip towards the inside of the frame until you hear a 'click'.

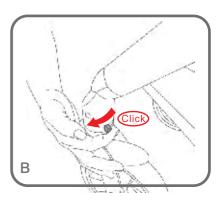


B To allow the wheels to swivel, slide the black swivel wheel locking clip towards the outside of the frame until you hear a 'click'.

ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

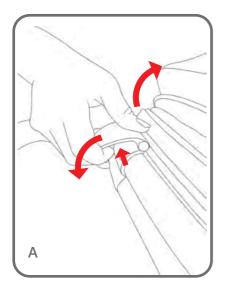


PLEASE NOTE: There are four backrest positions.

A Lift the recline lever on the back of the seat and hold while raising or lowering the backrest to the desired position.

ADJUSTING THE LEG REST


IMPORTANT NOTES:

- THE LEG REST FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG REST IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG REST, IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG REST DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG REST MODE.

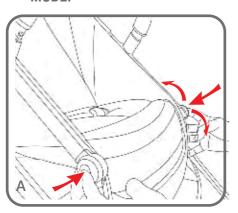

A Press the two release buttons on both sides of the leg rest hinge and hold while raising or lowering the leg rest to the desired position.

ADJUSTING THE PIVOTING HANDLE

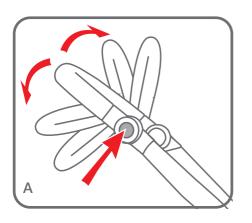

A Press the two release buttons on the outside of the handle and hold while raising or lowering the handle to the desired position.


When the desired height has been achieved let go of both release buttons.

SECURING YOUR CHILD HARNESS

! WARNINGS: USE THE HARNESS AT ALL TIMES.


- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- · Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up. Ensure the harness straps are not twisted as they may become uncomfortable for the child.

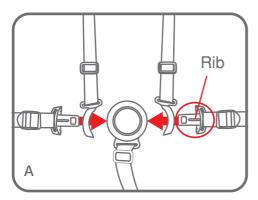

A Always apply the brakes before placing child in stroller seat. Position the shoulder strap near the child's shoulder and position crotch strap between legs.

Thread the waist strap buckle tongues through the shoulder straps tongue guides.

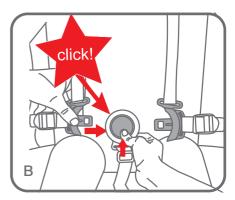

B Hold the centre button in on the crotch buckle and insert the waist buckle tongues into the crotch strap buckle until you hear a 'click'.


Repeat the procedure on the other side.

Please ensure it is locked.

ADJUSTING THE HARNESS




A Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

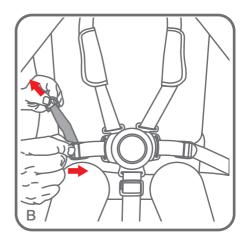

B Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

OPENING THE HARNESS

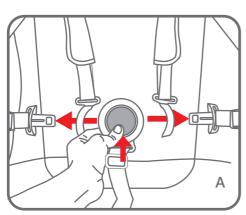


A Release the harness by pressing the centre button in on the crotch buckle while pulling the waist tongues out of the crotch buckle.


ADJUSTING THE SHOULDER HARNESS HEIGHT

IMPORTANT NOTE:

THE HARNESS CAN BE ADJUSTED TO THREE DIFFERENT HEIGHTS TO ACCOMMODATE THE CHILD. THE SHOULDER STRAPS MUST BE POSITIONED NEAR THE CHILD'S SHOULDERS.

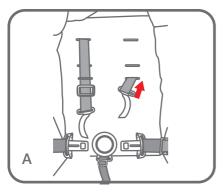

A To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat

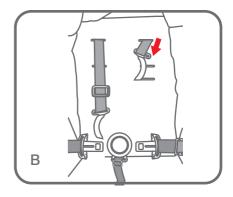

B Select the appropriate shoulder harness height and pull each shoulder harness tongue through the harness slot.

USING THE STORAGE BASKET


IMPORTANT NOTE:

DO NOT PLACE MORE THAN 9 KG IN THE BASKET.

USING THE TETHER STRAP

WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOP-ING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

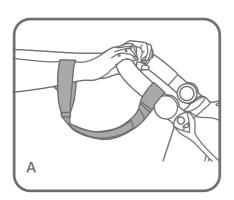

A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

REMOVING & REVERSING THE STROLLER SEAT


IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING THE SEAT DIRECTION.


PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IN REWARD FACING POSITION (MOTHER FACING BABY POSITION) IS 15KG.

britax.com.au

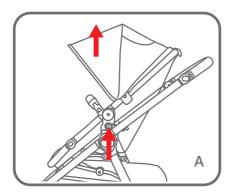

A Lift both release levers on the seat connectors at the same time and lift the seat up and away from the stroller frame.

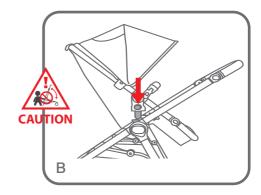


B Turn the seat facing opposite direction and then attach the stroller seat to the frame in the rearward facing position.

CONVERTING STROLLER TO BASSINET


! WARNINGS:

- DO NOT USE THE BASSINET MODE ONCE THE CHILD CAN SIT UP.
- THIS BASSINET IS ONLY USED ON THE FRAME AND CAN'T BE USED AS STAND ALONE BASSINET.
- THE MAXIMUM WEIGHT OF THE CHILD USING BASSINET MODE IS NOT TO EXCEED 9KG.

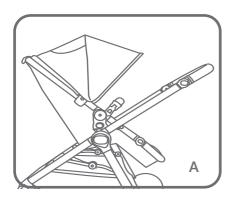


A Put the stroller seat into reverse facing position.


BASSINET MODE

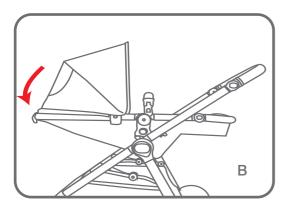

B Put the backrest to lowest position.

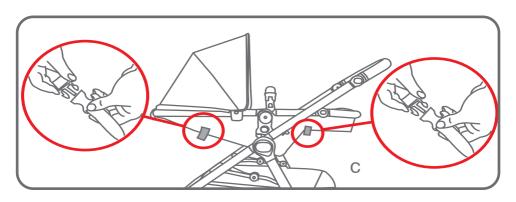

C Unbuckle the clips on the backrest and under the leg rest.

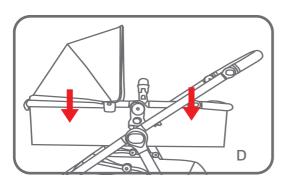

D Push down the backrest and leg rest to complete the coverting. Use the harness to secure the baby in bassinet mode.

USING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast, locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods unless it is supplied from the handle.
 Use the storage basket.

FOLDING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

IMPORTANT NOTE:

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.


PLEASE NOTE: The stroller seat and wheels can be removed to reduce the total folded size.


FOLDING TIPS:

- For easier handling. It is recommended to remove the stroller seat from the frame (Refer to Page 27) before folding. Then fold the frame and put both the seat and frame in the car.
- 2. For smaller cars it may be convenient to simply remove the rear wheels.

IMPORTANT NOTE:

- Make sure the seat is in upright position before folding if you fold the stroller with seat attached.
- Remove the Baby Capsule if connected to the frame prior to folding.
- The Second Seat MUST be removed prior to folding.
- The rain cover must also be removed if fitted.

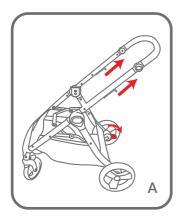

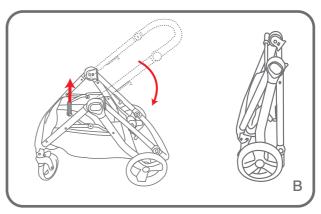

A Engage the brake.
Pull the latches on the handle tube upwards and drop down the handle all the way.

B Pull the handle under the stroller seat upwards until you hear a 'click' and the frame is fully folded and the frame lock latch is locked in properly.

LIFTING AND CARRYING THE STROLLER PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES

IMPORTANT NOTE:

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CAR-RYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- TO AVOID DAMAGE, DO NOT PLACE HEAVY OBJECTS ON TOP OF THE FOLDED STROLLER.
- ENSURE THAT THE STORAGE LATCH IS ENGAGED WHEN LIFTING OR CARRYING THE VEHICLE.

BABY CAPSULE (Sold separately)

! WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE IS NOT TO EXCEED 12kg.

IMPORTANT NOTES:

- THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE ARE THE ONLY COMPATIBLE BABY CAPSULES DESIGNED TO FIT THE VIRTU STROLLER, THE UNITY BABY CAPSULE TO BE USED WITH CLICK N GO RECEIVERS (SOLD SEPARATELY - Contact Britax customer service team for purchase).
- REMOVE THE STROLLER SEAT OR BASSINET FROM THE STROLLER FRAME BEFORE INSTALLING THE BABY CAPSULE.
- THE BABY CAPSULE MUST BE CORRECTLY FITTED AND LOCKED ONTO THE FRAME.
- THE BABY CAPSULE MUST ONLY BE USED IN THE REARWARD FACING POSITION (BABY FACING PARENT), FITTED FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD USING THE BABY CAPSULE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE BABY CAPSULE FOR EXTENDED PERIODS.
- THE BABY CAPSULE IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE BABY CAPSULE MUST BE REMOVED FROM THE STROLLER FRAME BEFORE FOLDING.


BABY CAPSULE OPERATION

 THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

WARNINGS:

THE VIRTU CLICK N GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE INSTALL THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR THE BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE.


INSTALLING AND REMOVING THE CLICK N GO RECEIVERS

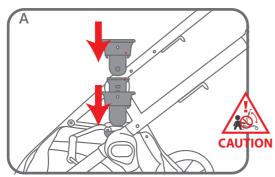

A Select the Click n Go receiver that has a coloured dot and align with the coloured dot on the frame socket.

Note: Coloured dots are only on one side of the frame socket. Firmly press down on the Click N go receivers until you hear a 'click' and a green indicator can be seen through a window in the frame socket. Repeat on the other side with the receiver with no coloured dot.

To ensure the receiver is engaged before placing the baby capsule.

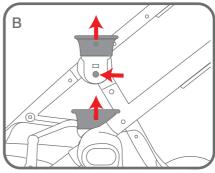


B To remove the Click N Go receivers, press in and hold the button on the top of the receiver and pull up the receivers out of the frame sockets.

BABY CAPSULE OPERATION

ATTACHING THE BRITAX UNITY BABY CAPSULE

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE BABY CAPSULE.


ENSURE THE BABY IS SECURED IN THE BABY CAPSULE WITH THE HARNESS AT ALL TIMES. REFER TO THE BABY CAPSULE INSTRUCTION MANUAL REGARDING PLACING AND SECURING YOUR BABY IN THE BABY CAPSULE.

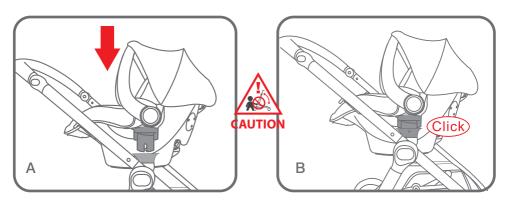

A Engage the stroller brake. Align the Unity Baby capsule with the Click N Go receivers. The Baby Capsule must be facing handle.

B Press firmly down on the Click N Go receivers until you hear a 'click'. Pull up the Baby Capsule to ensure they are locked into the stroller frame.

REMOVING THE BRITAX UNITY BABY CAPSULE

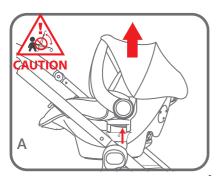

A Before remove the Baby Capsule, lock the stroller brake first.

Squeeze both release levers on the Click N Go connectors at the same time and support the weight of the baby capsule. Lift and remove the baby capsule from the stroller frame.

britax.com.au

CARE & MAINTENANCE

To prolong the life of your stroller, a regular maintenance should be performed. We recommend you service your stroller at least once a year and perform quick regular inspections.

GENERAL MAINTENANCE & REPAIR

- Ensure all safety devices, locks, harness and brakes are in working order.
- Ensure all joints and folding areas move freely as intended.
- Should any moving or locking parts become stiff or hard to operate, ensure these are free from tension or dirt. Regularly lightly lubricate all moving parts.
- Ensure all connecting rivets and screws are secure. Tighten if required.
- Do not leave the stroller in direct sunlight for extended periods of time, as colours of some fabrics may fade, and tyres may deteriorate.
- Do no store the stroller in your car for prolonged periods of time during summer as it may lead to damage to some the plastics components.
- Do not fold or store the stroller if damp or wet, as fabric may develop mould or mildew. Always store the stroller inside in a dry, well-ventilated area.
- Do not place heavy objects on top of the stroller as it may alter the shape.
- If there are compression marks on the tyres, use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- To maintain the safety and longevity of the stroller, seek prompt repairs or replacement for bent, torn, worn or broken parts. Do not continue to use the stroller if unsafe.
- All repairs should only be carried out by an authorised Britax/ Steelcraft repairer. Only Britax/Steelcraft replacement parts should be used with the stroller. It may be unsafe to use parts supplied from another manufacturer.

CARE & MAINTENANCE

 Should you have any further questions on Care & Maintenance of the stroller, please contact our Consumer Service Team at au-support@britax.com

CLEANING

Fabrics

- Removable fabrics may be cleaned using luke warm water and soap or mild detergent. Rinse thoroughly and allow to dry away from direct sunlight.
- Non-removable fabrics can be spot cleaned using a damp sponge and soap or mild detergent. Allow to dry completely before re-use or storage.
- Never use bleach, or abrasive cleaning products.
- DO NOT iron or dry clean.

NOTE: DO NOT place any of the stroller fabrics in the dryer. Allow to dry naturally, away from direct sunlight.

Frame

- Remove dirt and dust away from any moving mechanism.
- Clean frame with a soft damp cloth and soap or mild detergent and allow to dry thoroughly.
- DO NOT use abrasive cleaning products as it may cause stains, discolouration or scratches to the frame.

NOTE: DO NOT soak or submerge frame in water. DO NOT remove, dismantle or alter any part of the stroller mechanism or brakes.

Leatherette

- Spot clean with a damp soft cloth.
- DO NOT use a dripping wet cloth or wet the leatherette excessively.

Wheels

- · Remove wheels from stroller.
- Clean with damp cloth and soap or mild detergent. Use brush to remove dirt and mud build up around the tyre. Allow to dry thoroughly before placing wheels back on the frame.

britax.com.au

WARRANTY REGISTRATION

 If necessary lubricate wheel shaft with a small amount of lubricant before placing into the stroller.

NOTE: Ensure the stroller is cleaned thoroughly after using it on the beach as sand and salt can damage stroller mechanism, wheel assembly, causing premature wear and corrosion.



DID YOU KNOW:

Registering your product purchase online simplifies proof of purchase in event of a warranty claim.

Scan this QR code on yourphone to go straight to our website to fill out the registration form.



MAKING A WARRANTY CLAIM

Your rights under a Britax company warranty are separate from and independent of your rights under the statutory consumer guarantees. What you need to do to enforce your rights under a statutory consumer guarantee is set out in the Australian Competition and Consumer Commission's Consumer Guarantees - A Guide for Consumers.

To make a claim under a Britax company warranty, please contact our customer service team on:

1300 303 330 - Australia, 0508 688 822 - New Zealand or alternatively by email at:

Australia: au-support@britax.com New Zealand: nzoffice@britax.com

WARRANTY

You will be required to:

- 1. Return the product to the place of purchase or to a designated repair agent;
- 2. Present your receipt as proof of purchase;
- 3. Identify the defect in the product; and
- 4. Present the product to Britax for inspection on request.

Britax will advise you whether the product is covered by the Britax company warranty. Britax's decision of whether a product is covered by a Britax company warranty is final. Britax will act reasonably when determining whether a product is covered by a company warranty.

AUSTRALIAN CONSUMER LAW

On all of our goods, you have the benefit of a statutory consumer guarantee. In summary, goods are guaranteed to be of "acceptable quality" (fit for purpose), goods are guaranteed to match any sample against which they are sold. These consumer guarantees are provided for by the Australian Consumer Law and, if you believe anyone of these guarantees is not satisfied by a Britax product, you have rights under the Australian Consumer law to enforce that guarantee.

Your rights under the statutory consumer guarantees are set out in the Australian Competion and Consumer Commission's Consumer Guarantees - A Guide for Consumers.

In addition to the statutory consumer guarantees, BRITAX offers its own company warranty on all of its products. You therefore have the option of seeking redress for defective or faulty product either under the BRITAX company warranty or the statutory guarantees.

After the Britax company warranty expires, you still have your rights under the statutory consumer guarantees.

Depending on the product involved, the following Britax company warranty applies:

WARRANTY

STEEL CRAFT WARRANTY

Steelcraft products are covered by this company warranty against faulty materials and workmanship (normal wear and tear excluded) that affects the normal operation of your Steelcraft product. In the unlikely event that you find that your Steelcraft product does not satisfy this warranty, Britax will (at its option) repair or replace that product within a reasonable period of you making a claim in accordance with this policy.

In the event that a replacement product is no longer available, Britax reserves the right to provide what it considers to be a suitable alternative.

For this company warranty to apply, you must make an application before the expiration of the following periods from date of purchase*:

• 2 years on Steelcraft strollers, Steelcraft stroller accessories, highchairs, portable cots, walkers and rockers.

This company warranty does not apply to second hand or aftermarket goods or goods used for rental, hire or other commercial purposes or to any claim where the damage or fault is, in whole or part, the result of incorrect installation, mistreatment, intentional damage, any use other than use in normal conditions or any use otherwise than in accordance with the Instruction Manual for that product.

Please read your instruction manual carefully before using any of our

products.

INTERNATIONAL WARRANTY

Britax products are available through a network of retailers in Australia and New Zealand. If you are an International customer we do not offer a warranty service outside of these regions.



BRITAX CHILDCARE PTY. LTD. A.B.N. 55 006 773 600

Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE 1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS 2088:2013 "Prams and Strollers - Safety Requirements"

© 2020 Copyright Britax Childcare Pty. Ltd. Australia