

Jetta Baby Walker

BRITAX CHILDCARE PTY. LTD A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road, Sunshine, Victoria 3020, Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE

1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with ASTM F977

©2010 Copyright Britax Childcare Pty. Ltd. Australia



IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE





WARNINGS

RETAIN FOR FUTURE REFERENCE.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE
OF THIS WALKER. ALWAYS FOLLOW THE INSTRUCTIONS.
THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS
ESSENTIAL.



SAFETY WARNINGS

STAIR HAZARD AVOID SERIOUS INJURY OR DEATH. BLOCK STAIRS/STEPS SECURELY BEFORE USING THE WALKER.

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT USE WALKER UNTIL BABY CAN SIT UP BY ITSELF.
- NEVER LEAVE YOUR CHILD UNATTENDED, ALWAYS KEEP YOUR CHILD IN VIEW WHILST IN THE WALKER.
- TO PREVENT INJURIES, ALWAYS ENSURE THE CHILD IS WELL CLEAR
 OF ANY MOVING PARTS WHEN FOLDING OR UNFOLDING THE BABY
 WALKER.
- NEVER ADJUST OR CARRY THE WALKER WITH THE CHILD IN IT.
- ENSURE THAT THE CHILD CAN TOUCH THE FLOOR WITH BOTH FEET, AFTER ADJUSTING THE HEIGHT OF THE WALKER.
- DOUBLE CHECK ASSEMBLY BEFORE USING THE BABY WALKER.
- TOYS MUST BE ASSEMBLED BY AN ADULT.
- To avoid burns, keep the child away from hot liquids, ranges, radiators, space heaters, fireplaces, etc.
- Use only on flat surfaces free of objects that could cause the walker to tip over.

CARE AND MAINTENANCE

- To prolong the life of your walker keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- DO NOT DRY CLEAN, OR USE BLEACH.
- Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- Remove batteries before storing for a prolonged period of time.
 Check the condition of batteries periodically for fluid leakage.
 Do not use the walker if batteries are leaking.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

WARNING CLEAN SAFETY GRIP PADS REGULARLY, USING WARM WATER WITH A HOUSEHOLD SOAP OR MILD DETERGENT TO MAINTAIN STOPPING PERFORMANCE.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.



- Clean grip pads regularly to maintain stopping performance.
- Do not allow children to stand on the seat.
- The baby walker should not be used by children who can walk unaided.
- Discontinue use of the walker should any part become damaged or broken.
- · Do not store outdoors.
- Do not leave your child exposed to the sun.
- The wheels may scratch some painted, polished or wooden flooring.
- If used on carpets, the safety grip pads may reduce the walker speed.
- Do not use accessories other than those tested and approved by Britax.
- The weight of the child using this product should be less than 13kg and the height should be 81cm, or less.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

PARTS LIST NOTES



A 1 x Frame



B 1 x Padded Seat



C 4 x Front Swivel Wheels



D 1 x Activity Tray




E 2 x Activity Tray Aeroplanes



F 2 x Activity Tray Bars

05. TO FOLD THE WALKER


A To fold the walker, support the upper plate with one hand. Locate the safety lock button underneath the upper plate. Turn the safety button to the right and hold before pushing it upwards to release the lock and then slightly lower before letting go of the safety lock. Now use both hands to slowly lower the walker completely down to the folded position.

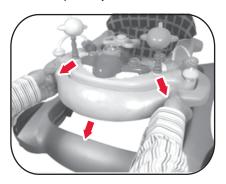



PARTS LIST



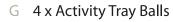 



H 2 x Activity Centre Bolts

www.britax.com.au www.britax.com.au www.britax.com.au 05

WARNING: THE WHEELS MAY SCRATCH SOME PAINTED, POLISHED OR WOODEN FLOORING.

A Turn the frame upside down and insert the end of the swivel wheel posts all the way into the holes located in each corner of the walker base.




WARNING: CLEAN SAFETY GRIP PADS
REGULARLY USING WARM WATER WITH A HOUSEHOLD
SOAP OR MILD DETERGENT TO MAINTAIN STOPPING
PERFORMANCE.



04. TO ADJUST THE HEIGHT OF THE WALKER

If changing the height from the top position to the middle or the lowest position, slightly lower before letting go of the safety lock button. Press down lightly on the upper plate to confirm it is locked into place. Push up on the upper plate to raise the seat height.

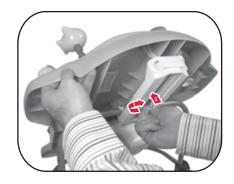



04. TO ADJUST THE HEIGHT OF THE WALKER

WARNING: REMOVE THE CHILD FROM THE WALKER BEFORE ADJUSTING THE HEIGHT. NEVER ADJUST THE HEIGHT WHILE THE WALKER IS OCCUPIED.

NOTE: There are three seat height positions. Follow these instructions carefully to avoid the upper plate falling down onto your hand.

To adjust the seat height from the highest position to a lower position.

A Support the upper plate with one hand. Locate the safety lock button underneath and in the centre of the upper plate. Turn the safety lock button to the right and hold before pushing it upwards to release the lock.





01. TO ASSEMBLE THE WALKER (Cont)

B Turn walker right side up. Position one hand underneath the top edge of the tray, and the other hand on the top of the outer base of the frame.



Raise the tray into the highest position by lifting the tray slowly while holding down the base until you hear the tray lock into position.



14 www.britax.com.au www.britax.com.au www.britax.com.au

01. TO ASSEMBLE THE WALKER (Cont)

Position the seat pad into the upper tray cavity. Attach the seat pad to the rear of the frame by locating the four plastic posts on the back of the seat pad over the keyholes. Insert each post into the keyholes and push push the posts forward with moderate force to lock into position. Make sure all four posts are locked into position by pulling up on the seat pad to confirm. Repeat steps if not locked onto the frame.










03. TO ASSEMBLE AND INSTALL THE ACTIVITY TRAY (Cont)

Fit the completed activity tray onto the upper plate. Take one of the two bolts and align it with the small hole underneath and towards the sides of the upper plate. Use your other hand to shift the activity tray slightly to line it up with the bolt before screwing the bolt all the way in. The bolt will screw in easily when in line with the activity tray. Do not force it.

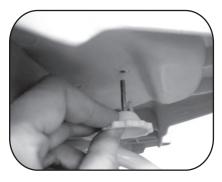








03. TO ASSEMBLE AND INSTALL THE TOY TRAY

WARNING: TOYS MUST BE ASSEMBLED BY AN ADULT.

A To assemble the activity tray, insert the two aeroplane toys into the two largest holes on the tray and push down until they lock into place.



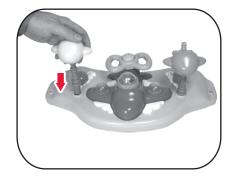

B Take the four balls and fit one mixed pair onto the small ends of each curved bar. Align the large and small ends of the bars with the correct size holes at both ends of the activity tray and push down until they lock into place.



01. TO ASSEMBLE THE WALKER (Cont)

Attach the seat pad to the front section of the frame by locating the three plastic pins on the front of of the seat pad over the keyholes at the front of the walker. One at a time, insert each plastic pin into the hole and pull down to lock into position. Make sure all three pins are locked into position by pulling up on the seat pad to confirm. Repeat steps if not locked onto the frame.



12 www.britax.com.au www.britax.com.au www.britax.com.au 09

02. TO INSTALL THE BATTERIES

IMPORTANT: BATTERIES ARE NOT INCLUDED. 2"AA" (1.5V) SIZE BATTERIES ARE REQUIRED FOR THE **ACTIVITY TRAY.**

WARNING: DO NOT MIX USED AND NEW OR **DIFFERENT (ALKALINE, CARBON-ZINC OR RECHARGEABLE: NICKEL-CADMIUM) TYPES OF BATTERIES. NON-RECHARGEABLE BATTERIES (ALKALINE AND CARBON-ZINC) TYPES OF BATTERIES CANNOT BE RECHARGED. ADULT SUPERVISION IS REQUIRED WHEN** CHARGING RECHARGEABLE: NICKEL-CADMIUM BATTERIES. REMOVE THE BATTERIES AS SOON AS THEY BECOME **EXHAUSTED. SUPPLY TERMINALS FOR BATTERIES ARE NOT** TO BE SHORT CIRCUITED. REMOVE THE BATTERIES BEFORE STORING WALKER FOR A PROLONGED PERIOD.

MPORTANT: USE THE APPROPRIATE SIZE PHILLIPS HEAD SCREWDRIVER TO UNSCREW THE BATTERY COVER.



02. TO INSTALL THE BATTERIES (Cont)

To insert the batteries, locate the battery housing underneath the activity tray. Unscrew the screw on battery cover and insert 2"AA" batteries observing the correct positive and negative positions. Refit the battery cover and then insert the screw to secure in place. Test correct installation by turning over and pressing the button in the centre of the steering wheel.







IMPORTANT: NEVER REPLACE BATTERIES WHILE THE WALKER IS OCCUPIED.

10