

SteelcraftTM

snack time high + low chair

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
99 Derby Road, Sunshine, Victoria 3020, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.


The Britax trademark is the property of Britax Excelsior Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian Standard AS 4684-2009

©2010 Copyright Britax Childcare Pty. Ltd. Australia

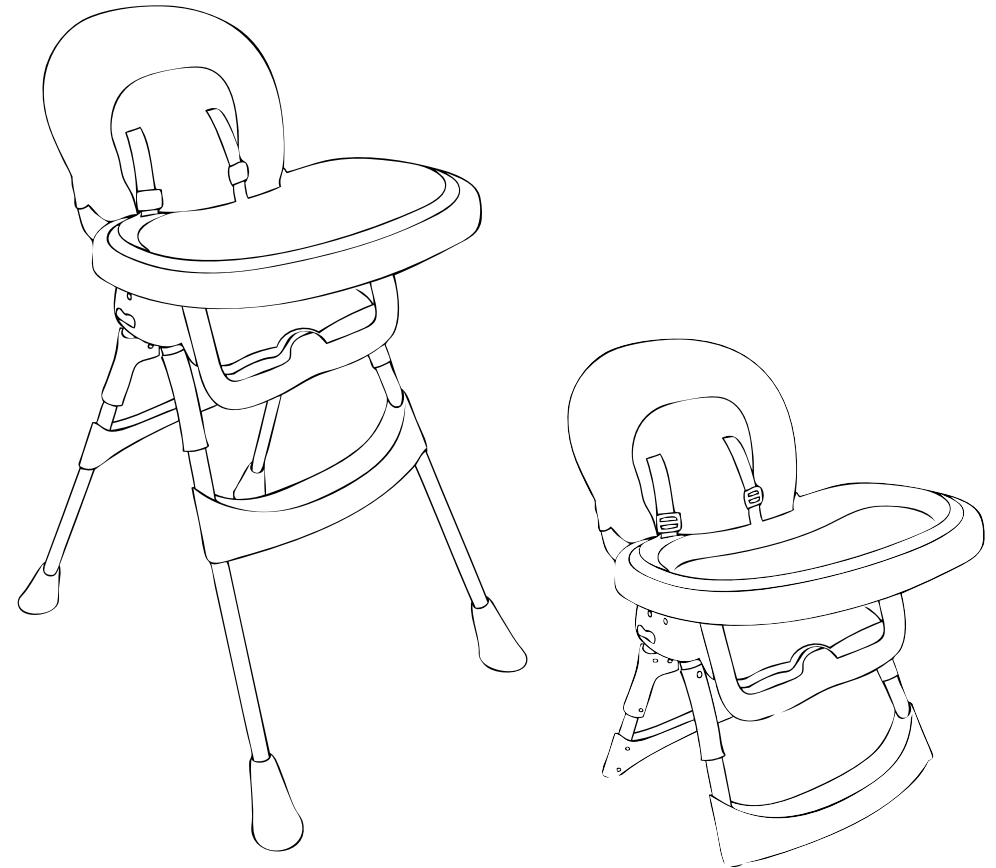

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE.

SteelcraftTM

SteelcraftTM


Series No. YS-101

Art No.4001526_B

WARNINGS

RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS HIGHCHAIR. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

 **WARNING:** THE CHILD SHOULD BE SECURED IN THE HIGHCHAIR AT ALL TIMES BY THE HARNESS, EITHER IN THE RECLINING OR UPRIGHT POSITION. THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE CHAIR. IT IS RECOMMENDED THAT THE HIGHCHAIR BE USED IN THE UPRIGHT POSITION ONLY BY CHILDREN CAPABLE OF RELIABLY AND CONSISTENTLY SITTING UPRIGHT UNASSISTED.

 **WARNING:** TO PREVENT SERIOUS INJURY OR DEATH

- FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED.
 - MOST INJURIES FROM THE HIGHCHAIR ARE CAUSED BY FALLS.
- POSITION THE HIGHCHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND ACCESS TO DANGEROUS ITEMS.
- Double check assembly before placing child into highchair.
- The weight of the child using this product is not to exceed 15kg.
- Always keep your child in view whilst using the highchair.


CARE AND MAINTENANCE

- To prolong the life of your highchair keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required.
- If the highchair is not working correctly stop using the highchair and seek repair.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

07. TO CONVERT TO A LOW CHAIR

- A To convert the high chair to a low chair, remove the basket and remove the four legs from the footrest mouldings.

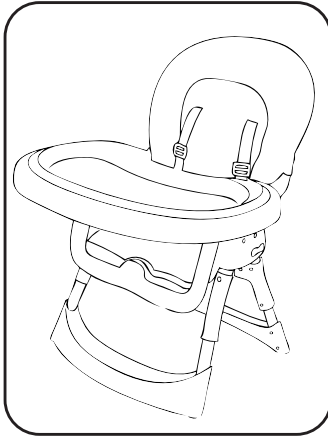

08. TO USE THE HIGH CHAIR

- Place the high chair on a horizontal, flat and even floor ensuring all feet are in contact with the floor.
- The high chair must not be placed on a table or similar surface to elevate the child.
- Position the high chair away from potential hazards and other furniture or structures that the child may be able to grasp or push.
- Keep away from walls, kitchen benches, hot surfaces, hot liquids and electrical cords


WARNINGS CONTINUED

WARNINGS


- Do not allow children to stand on the seat.
- Use on a flat, even and horizontal floor and never use near stairs.
- Do not elevate the highchair on any structure or table.
- Do not allow child to stand on the seat.
- Never carry the highchair with the child in it.
- Do not use the highchair without the tray and always ensure the tray is secure on the arm rests. The tray is not designed to hold the child in the chair.
- When making adjustments to the highchair, ensure that you and your child's body, fingers and toes are clear of any moving parts on the highchair, otherwise they may be injured.
- Position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords, electrical cords and position the highchair away from furniture when the chair is not being used at a table.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.


PARTS LIST

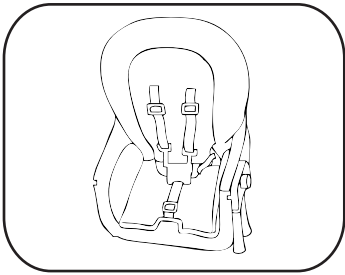


A 1 x Seat Assembly

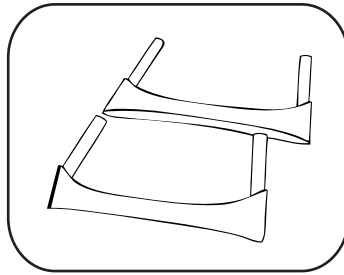

B 2 x Footrest Moulding
(Front Footrest moulding with
"Footprint" marking)

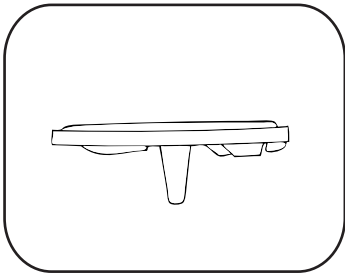



C 1 x Base tray
1 x Removable tray

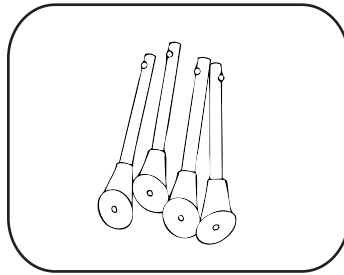

D 4 x Legs
(2 x "L" & 2 x "R")

06. TO FOLD/UNFOLD THE HIGHCHAIR

- B Press the front 'RED' button on each side of the high chair at the same time and pull the rear legs outward with your foot until you hear a click which indicates that the high chair is in the open position.

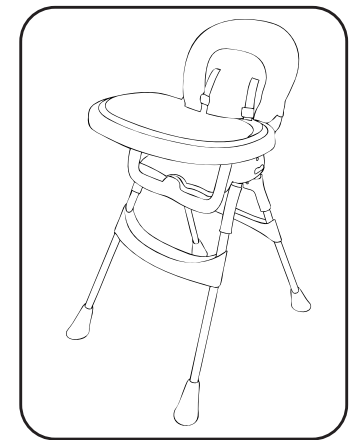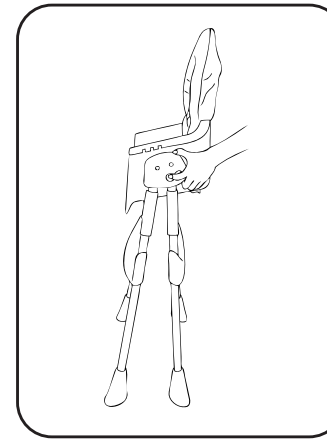

05. TO ATTACH AND USE THE TRAY (3 Positions)



- B The tray features a removable second tray for convenient cleaning.

PLEASE NOTE: Before using the tray, check it is securely locked onto the arm rests by pulling on the tray.

06. TO FOLD/UNFOLD THE HIGHCHAIR


⚠ WARNING: DO NOT ADJUST WITH THE CHILD IN THE CHAIR.

- A Remove the child from the high chair. Stand behind the high chair and press the rear 'RED' button on each side of the high chair at the same time and push the rear legs forward with your foot until you hear a click which indicates that the high chair is secured in the closed position.

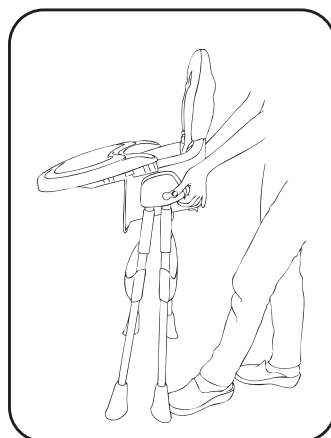
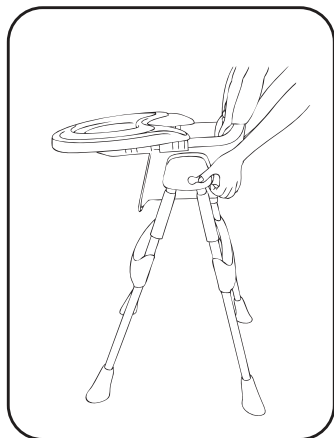


01. TO ASSEMBLE THE HIGHCHAIR

- A Lay the seat assembly on its back and insert and push the front footrest into front tube connection, until the pins are fixed.

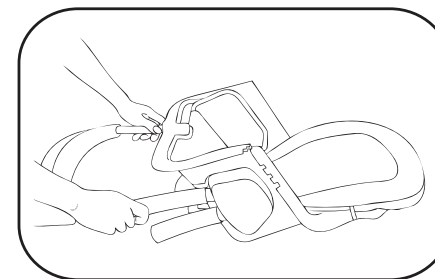


- B Insert and push rear footrest into rear tube connection, until the pins are fixed.

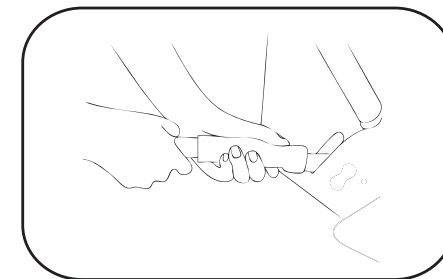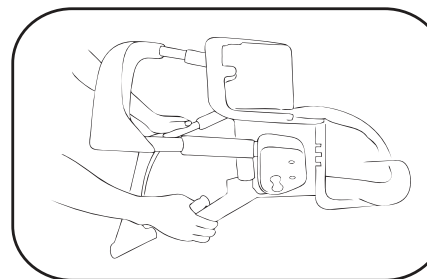

01. TO ASSEMBLE THE HIGHCHAIR (Cont)

- C PLEASE NOTE:** The front and back footrest mouldings are marked with an "L" for Left and an "R" for Right (as shown in below picture) and the base of each leg is marked with an "L" for Left and an "R" for Right (as shown in below picture)


Install the two "L" legs into "L" side of footrest, press until the pins are fixed. Install two "R" legs into "R" side of footrest, press until the pins are fixed.

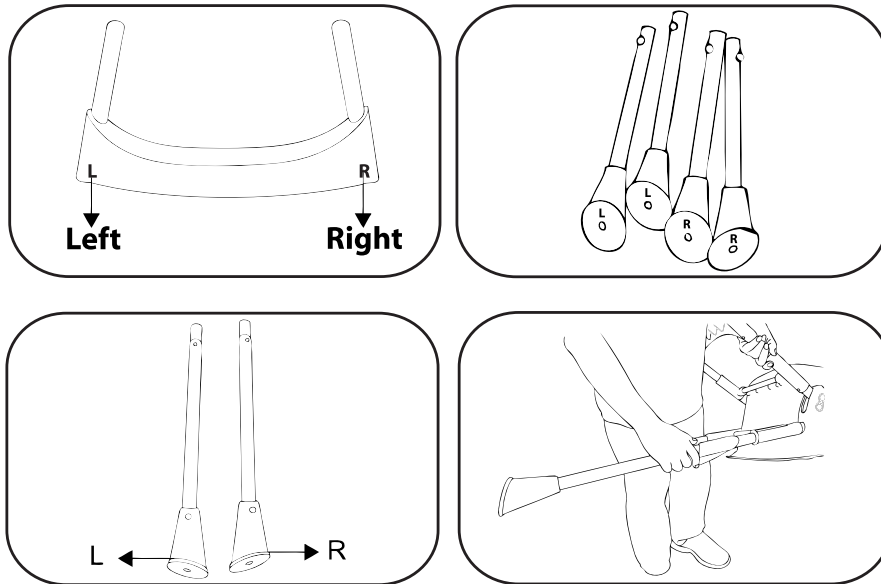

05. TO ATTACH AND USE THE TRAY (3 Positions)

! WARNING: THE TRAY IS NOT DESIGNED TO HOLD THE CHILD IN THE HIGH CHAIR. THE CHILD IS TO BE SECURED BY THE SAFETY HARNESS AT ALL TIMES WHILE IN THE HIGHCHAIR.

- A** Align both tray slots with the arm rests and then press the 'RED' tray adjustment levers on both sides of the tray to slide the tray back onto the arm rests to the desired position then release the tray adjustment levers ensuring it has locked into position. The position of the tray can be adjusted by pressing the adjustment levers and sliding the tray. To remove the tray press the adjustment levers and pull tray away from the seat.

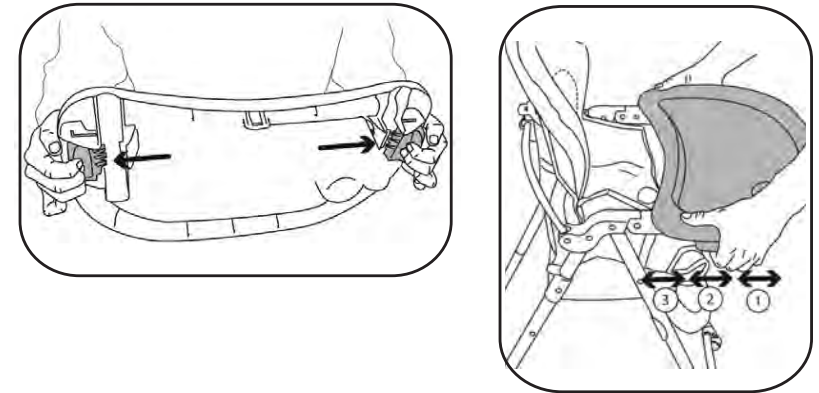

CAUTION: Ensure the child's hands are free from moving parts when the tray is being attached or removed to avoid pinching or entrapment.

04. TO ADJUST THE SHOULDER STRAPS

- B** Push the webbing end through the slot and then insert into the next slot. Pull the shoulder strap through the back of the high chair. Ensure the webbing end sits flat against the slot in the backrest moulding. Replace the harness adjusting clip by using the side of the screwdriver to push the tabs on the adjusting clip down into the slider moulding until it is secure.



PLEASE NOTE: The crotch strap and the waist straps also have a webbing end. Ensure webbing end sits flat against the slot moulding. The crotch strap and waist straps are also secured to the high chair with a harness adjusting clip. To remove adjusting clip. (See 4A)

02. TO ATTACH THE BASKET

- A** Attach the basket hangers on each corner of the basket onto the studs on the back of both footrests.




PLEASE NOTE: The basket must be removed when converting the high chair to a low chair.

03. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: USE THE HARNESS AT ALL TIMES.

- A A five point harness is provided to restrain your child.
To secure your child in the harness please follow the steps below carefully.
Push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position.
Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps.
Always adjust the harness when changing the seating position of the child.
To remove the child, release the buckle by squeezing the top and bottom prongs, remove the shoulder straps and lift the child out of the highchair.

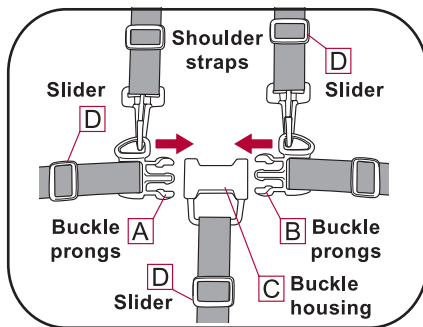

04. TO ADJUST THE SHOULDER STRAPS

PLEASE NOTE: The shoulder straps can be positioned at two heights. Choose a shoulder strap height that is close to the child's shoulders.

- A The shoulder straps are secured to the back of the high chair with a harness adjusting clip. To change the shoulder strap height, remove the adjusting clip from the slider by inserting a small flat head screwdriver in the opening on the side of the clip and push up to release.

