





A Britax International company. (Incorporated in Victoria) A.B.N. 55 006 773 600 99 Derby Road, Sunshine, Victoria 3020. Australia Phone: (03) 9288 7288 Fax: (03) 9311 5798 Copyright [®]2010 Britax Childcare Pty. Ltd. and Britax Child Safety Inc. USA

www.britax.com.au

BOB, BOB Strollers, Stroller Strides, Revolution, BOB Gear and the BOB device are the property of Britax Childcare Holding Limited (UK)

This product and its components are subject to change without notice.



Before attempting to assemble or use your new stroller, read and understand these assembly and use instructions completely, as well as the warnings at the beginning and throughout this document, to ensure proper assembly and operation.

If you are unclear on any point, contact Britax Customer Service on 1300 303 330 before use.

Service No.: ST908BOB

Printed in China

rt No.: 4001564 C



Table of Contents

Warnings	3 - 5
Features	6
In the Box	7
Assembly	8
Unfolding	8
Front Wheels	8
Rear Wheels	8
Removing Front Wheels	9
Removing Rear Wheels	9
Attaching the Canopy	9 - 10
Operating Instructions	
Parking Brake	11
Swivel Wheel	11
Recline	12
Canopy	12 - 13
Pivotal Handle	13
Tether Strap	14
Folding	14
Securing Your Child	15 - 17
Infant Car seat Mode	
Warnings	18
Attaching Infant Car Seat Receivers	19
Removing Infant Car Seat Receivers	19
Attaching a BOB Unity Infant Car Seat	20 - 21
Removing a BOB Unity Infant Car Seat	22
Available Accessories	23 - 24
Care and Maintenance	25 - 26

Notes



Care and Maintenance

Maintenance

- If stroller gets wet wipe with a clean cloth or towel to prevent corrosion.
- DO NOT fold stroller when wet or damp. Always make sure that the stroller is dry before storing.
- Always check parts regularly for tightness of screws, nuts and other fasteners tighten if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts.
- When using your stroller at the beach completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.

Storage

- Store in a well ventilated area.
- Store away from extreme heat to prevent damage to plastic parts.
- Cover stroller to prevent dust build-up and exposure to sunlight.
- DO NOT stack other items on top of stroller.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER. ALWAYS FOLLOW THE INSTRUCTIONS. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- FOLLOW THE MANUFACTURERS INSTRUCTIONS.
- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- USE THE HARNESS AT ALL TIMES.
- WHEN NOT IN USE DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- Check that all safety locks are engaged before placing a child in the stroller.
- Ensure your child is secured with a correctly adjusted safety harness.
- Use the tether strap to prevent the stroller from rolling away.
- Never let go of the stroller when parked on an incline because it may slide or tip over. Always park on a flat surface.
- Remove the child from the stroller before going up or down stairs or escalators.
- DO NOT allow children to stand on the seat.
- DO NOT hang or place items on the stroller handle or frame except those approved by Britax. They may cause the stroller to become unstable and tip over.

26

B·O·B



Warnings

- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Stroller is intended for walking speed only. DO NOT use while running, jogging, skating, etc.
- Always lock swivel wheels when on rough surfaces as this will help eliminate wheel wobble.
- It is unsafe to use accessories other than those tested and approved by Britax. For maximum safety only use accessories designed for this stroller.
- Do not place more than 4kg in the basket or 1kg in the Canopy Pocket (if supplied)
- The maximum weight of the child using this product is not to exceed 22kg for the Stroller or 12kg for the Infant Carrier.

FOR WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.

The upright positions are not suitable for use with children less than six months old. The lowest recline position should be used to transport babies, and the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

Parking Brake

- Periodically check that the parking brake works properly and locks both wheels securely.
- Clean out any dirt or debris that may prevent the brake from working.

Frame

• Wipe the frame with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.

Tyres

- Pneumatic front and rear tyres can be inflated with the pump (where supplied) or a bicycle pump or at a garage pump. Maximum inflation pressure front tyre: 2.1 bar (30 p.s.i).
 Maximum inflation pressure rear tyre: 2.1 bar (30 p.s.i).
- If there are compression marks on the tyres Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.

Fabric and Harness

- DO NOT machine wash or tumble dry the cover.
- Hand wash with cold water and mild soap. Allow to air dry completely before folding or storing away.
- DO NOT iron.

Plastic Parts

- Wipe with a damp cloth and mild soap. Use clean, dry cloth or towel to wipe away excess water and soap.
- DO NOT use abrasives, solvents, strong detergents, or household cleaners. These products can scratch, discolour and weaken plastic or cause corrosion on metal surfaces.






Accessories (Sold Separately)

Travel Bag

Provides great protection when travelling

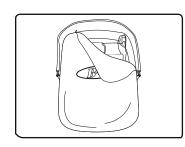


▲ SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

Accessories (Sold Separately)

Features

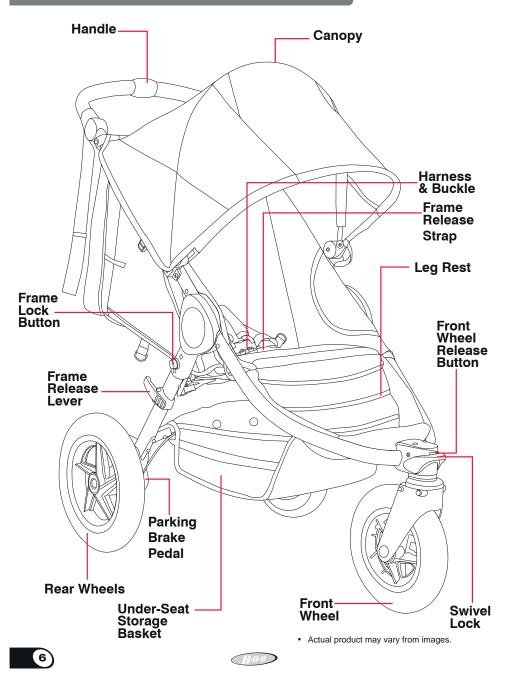

Snack Tray

Easy storage for drinks and snacks

Sun Shield

Protects your child from sun and insects while enjoying the outdoors




Warm Fuzzy

Extra protection from the cold for your child

Weather Shield

Protection from the rain for your child

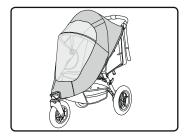






Infant Car Seat Mode


In the Box

Removing BOB Unity Infant Car Seat


1. Lock the parking brake. Squeeze both handle latches in to release the locks and move the handle forward. Release the latches and continue to rotate the handle forward until it returns to the upright position.

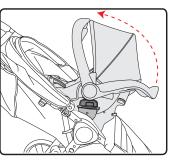


2. Lift and remove the Infant Car Seat away from the stroller.

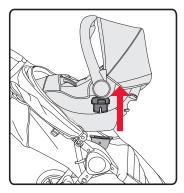


BOB MOTION 3 Stroller

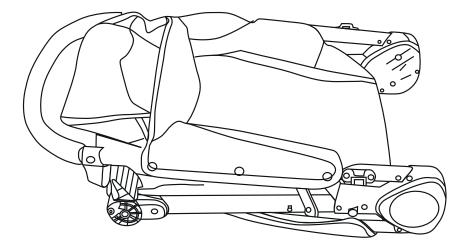

Rear Wheels

 

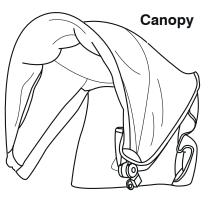

Front Wheel



Infant Car Seat Receivers











Assembly

Unfolding

1. Push the release lever on the chassis lock and open the frame.

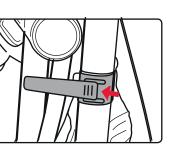

2. Lift handle until frame locks into upright position. Push down on the stroller handle to confirm it is locked.

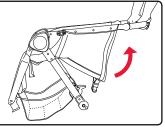


Front Wheel

- 1. Slide the front wheel mounting pin into the stroller housing until you hear an audible 'click'.
- 2. Pull wheel to ensure that it is secure in housing.

Rear Wheels


- 1. Slide the rear wheel pin into the rear axle mounting bracket until it locks into place. The wheels are labelled left and right (child's left or right from the seated position).
- 2. Pull wheel to ensure that it is secure.

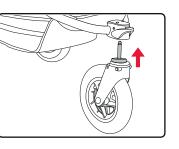

RorL

Attaching BOB Unity Infant Car Seat (Continued)

3. Release the handle latches and push the Infant Car Seat handle all the way down until you hear it lock into the receivers.

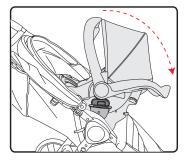

IMPORTANT: ENSURE THAT THE INFANT CAR SEAT IS LOCKED INTO PLACE BY PULLING UP ON BOTH SIDES. DO NOT USE THE INFANT CAR SEAT IF IT IS NOT CORRECTLY INSTALLED.

Please Note: The infant Car Seat has been fitted with a hood when using the stroller. The hood can also be used in the car. Refer to the Infant Car Seat Instructions regarding placing and securing your baby in the Infant Car Seat.






Infant Car Seat Mode

Assembly


Attaching BOB Unity Infant Car Seat

 Lock the parking brake. Fully recline the backrest and fold the canopy back.
Position the Infant Car Seat over the stroller with feet end facing the stroller backrest.
With the Infant Car Seat handle in the upright position align the adaptors on the Car Seat with the receivers on the stroller.

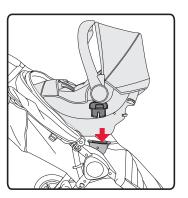


2. Lower the Infant Car Seat into the receivers. The Infant Car Seat now needs to be locked securely into the receivers. Squeeze in and hold the latches on either side of the handle and rotate the handle backwards.



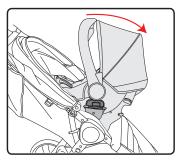


Removing Front Wheel

1. Push the metal tab above the swivel lock in to release the wheel and pull wheel away from the stroller.

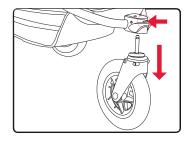

Removing Rear Wheels


1. Pull and hold the release lever on the rear axle bottom while pulling the rear wheel away from the stroller.

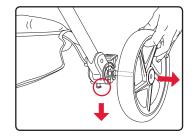

NOTE: Pneumatic front and rear tyres can be inflated with the pump (where supplied) or a bicycle pump or at a garage pump. Maximum inflation pressure front tyre: 2.1 bar (30 p.s.i). Maximum inflation pressure rear tyre: 2.1 bar (30 p.s.i).

Attaching the Canopy

1. Slide the canopy stay brackets into the canopy mounts of the stroller frame until they lock into place.

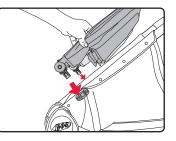


20


Assembly

Attaching the Canopy (continued)

2. Snap the support strap to the frame just below the stroller handle and connect them using the hook and loop fasteners on the inside of the canopy.

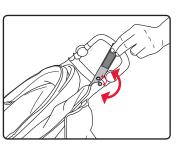


3. Attach the hook and loop fasteners located around the outer edge of the canopy and back flap to the stroller.

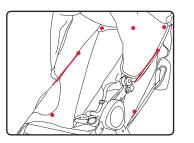


Attaching Infant Car Seat Receivers

 Lock the parking brake. Pull the fabric back from the sides to expose the frame mounts. Align the receivers with the inside frame mounts of the stroller. Receivers are labelled Left and Right (child's left and right from seated position.)

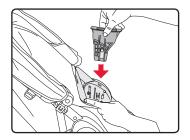


2. Push down until an audible 'click' is heard. Pull up on each receiver to ensure they are locked onto the frame.

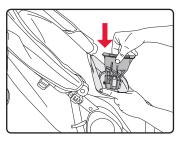

Removing Infant Car Seat Receivers

1. Squeeze the button on the receiver and lift upward.

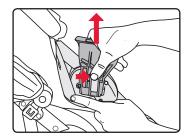



Infant Car Seat Mode

- THE UNITY BOB INFANT CAR SEAT IS THE ONLY INFANT CAR SEAT DESIGNED TO FIT THIS STROLLER.
- THE INFANT CAR SEAT MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- THE INFANT CAR SEAT MUST ONLY BE USED IN THE REARWARD FACING POSITION, FITTED TO THE STROLLER FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE INFANT CAR SEAT FOR EXTENDED PERIODS.
- THE INFANT CAR SEAT IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CAR SEAT MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS PRODUCT IS NOT TO EXCEED 12kg.


Please Note: These Instructions are for installing and removing the Infant Car Seat on the stroller only.

For installing and proper care of the Infant Car Seat in the car please follow the Instruction book that is included with the Infant Car Seat.

Parking Brake

WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS NOT MOVING. THE STROLLER MAY ROLL AWAY EVEN IF LEFT UNATTENDED FOR A FEW MOMENTS.

1. Press the parking brake pedal down to lock the brake. Lift the brake pedal to release the brake.

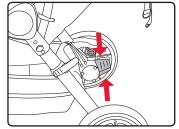


2. To ensure the brake is set properly, attempt to roll the stroller forward and backward after setting the brake. If the stroller will not roll, the brake is set properly.

NOTE: Locking the brake locks both back wheels

Swivel Wheel Locks

1. Lift the swivel lock lever up to lock the front wheel. Press the swivel lock lever down to unlock the front wheel.

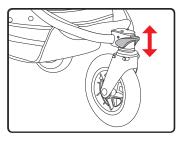

NOTE: Always lock the swivel wheel when using the stroller on rough surfaces as it will minimise wheel wobble.








Seat Recline


WARNING: ENSURE THAT YOUR CHILD'S LIMBS ARE IN THE CENTRE OF THE SEAT AND SUPPORT YOUR CHILD'S WEIGHT WHEN USING THE BACKREST.

1. To recline, pull the release lever on the recline adjuster and slide it away from the seat. To raise, pull both straps apart.

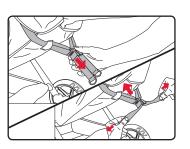

Canopy

1. To adjust the canopy, open by pulling forward, or close by pushing it backward.

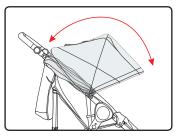


2. To open the canopy window, lift the canopy window flap away from the canopy and push window flap under the mesh panel.

Seat Harness (Continued)


IMPORTANT: The lower section of the shoulder harness strap should be adjusted to fit the child's height.

4. Tighten or loosen shoulder and crotch straps by sliding the 3 bar harness adjuster up or down.


Note: Crotch strap should be adjusted to a snug fit.

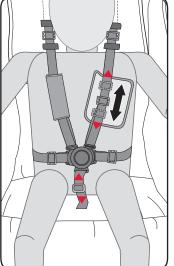

5. Tighten or loosen the waist straps, hold and lift the 4 bar slider and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

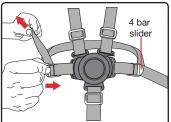

6. Release the harness by depressing the button in the centre of the buckle while pulling the two latch tongues away from the buckle assembly.

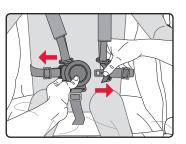

Securing Your Child



Operating Instructions

Securing Your Child

Seat Harness (Continued)

2. Fasten the harness by inserting the buckle tongues into the buckle assembly. Each buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.


Note: Ensure the straps are not twisted as they may become uncomfortable for the child.


IMPORTANT: Pull on each buckle tongue to make sure the are locked into the crotch buckle assembly. If not, repeat above procedure.


3. IMPORTANT: The top section of the shoulder harness strap should be adjusted to fit just above the child's shoulder height.

(16)

Open hook and loop straps. Slide the 3 bar harness adjuster up or down to adjust to the desired shoulder height then fasten hook and loop strips below the harness adjuster to keep the adjusters in place.

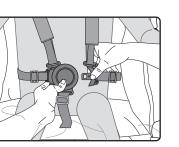


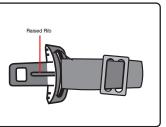


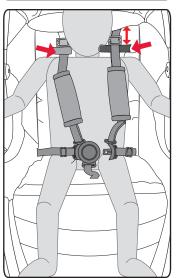

Canopy


3. For additional air circulation, the back flap of the canopy can be rolled up and secured with the toggle and elastic.

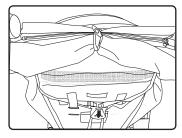

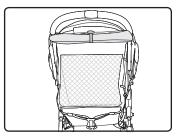

Pivotal Handle

1. To adjust the handle height, squeeze in and hold the buttons on the inside of the handle. Rotate the handle up and down to the desired position. When the desired position has been achieved, release the buttons.

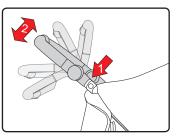




13

Tether Strap

WARNING: ALWAYS USE THE TETHER STRAP TO PREVENT THE STROLLER ROLLING AWAY.


1. A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

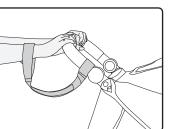


Folding

IMPORTANT: Always apply brake and remove child before folding the stroller.

1. Press the frame lock button.

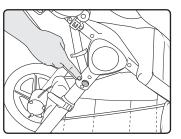

2. Lift the frame release strap in the middle of the seat until the stroller collapses and the chassis lock engages.

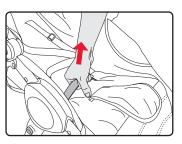

WARNING: USE THE HARNESS AT ALL TIMES.

When not in use disconnect shoulder straps from the waist strap and buckle to prevent strangulation.

A five point harness is provided to restrain your child. Buckle tongues separate for added safety. To secure the child in the harness please follow the steps below carefully.

Seat Harness

 Set parking brake. Place child in seat. Slip one shoulder strap over each shoulder.
Position crotch strap between legs. Push the buckle tongues (A)on waist straps through the tongue buckle guides (B) on shoulder straps.

