


Steelcraft™

ACCENT REVERSE HANDLE STROLLER

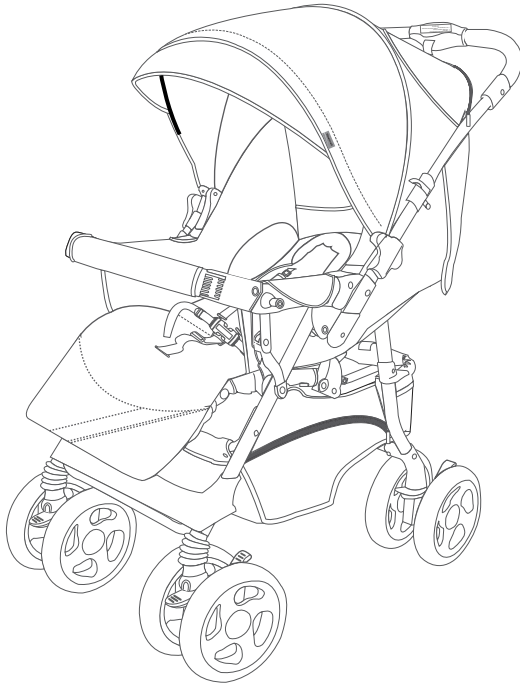

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

www.britax.com.au

Series H319

IMPORTANT NOTES

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE
OF THIS STROLLER.
THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS
ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR (If Supplied) BECAUSE IT MAY DISENGAGE.
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 4 KG IN THE BASKET, OR 1KG IN THE CANOPY POCKET (IF SUPPLIED).

WARNINGS

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- DO NOT LEAVE CHILDREN UNATTENDED.
- SECURE THE CHILD IN THE HARNESS AT ALL TIMES.
- DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.
- MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 17 KG.

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

CAUTION

MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions";
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.

ASSEMBLING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.

OPENING THE STROLLER


- A** Release the storage latch on the rear leg by depressing the latch lock. Open the stroller slowly and be careful where you place your hands. Keeping your hand/s on the handle/s is the best way to fold or unfold the stroller.
- B** Lift the handle up until the stroller locks into the fully upright position.



ASSEMBLING THE STROLLER

ATTACHING THE SWIVEL WHEELS

- A** Take each swivel wheel assembly and push it down firmly onto each of the legs until a click is heard. Check that each wheel is fully engaged and secured by pulling against it.

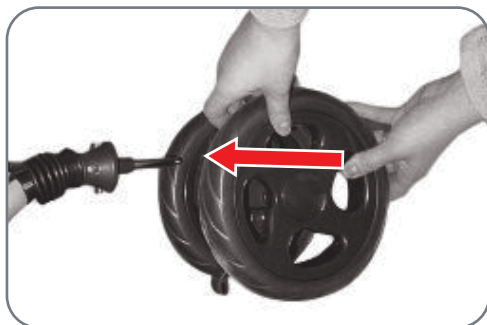

ATTACHING THE BOOT COVER

- A** Raise the leg support and place the boot cover over the front of the leg support and the arm bar.
- B** Attach the upper straps to the canopy frame support tubes.



ASSEMBLING THE STROLLER


ATTACHING THE STORM COVER

- A Unlock the handle position so it moves freely from either locked position on the frame.



- B Pull the storm cover over extended canopy, position large hole in storm cover over the rear handle lock. The storm cover needs to be on the inside of the handle.

- C Position the small hole in the front handle lock.

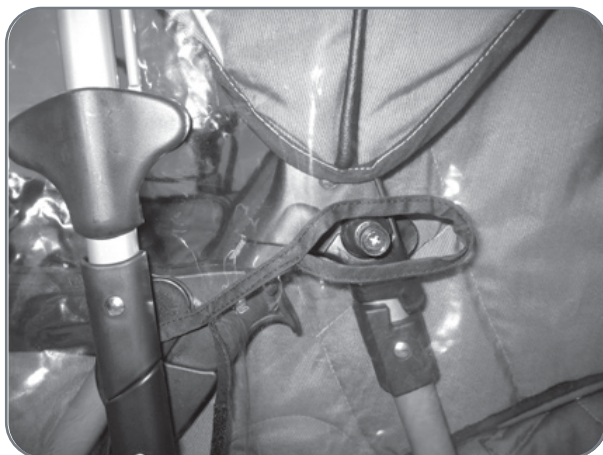

ASSEMBLING THE STROLLER

ATTACHING THE STORM COVER

- A** Attach the hook and loop at underside of storm cover. The handle is now free to move and lock into either position.



ASSEMBLING THE STROLLER

ATTACHING THE MESH COVER

A Zip the mesh cover to front of the canopy.



B Place the elastic front over the arm bar. Do not cover the handle lock with the mesh to prevent tearing.

C Loop the elastic attachments over the rear handle lock.



OPERATING THE STROLLER

USING THE SWIVEL WHEELS

PLEASE NOTE: This stroller has been designed with independent suspension to give your child a more comfortable ride, this means that each corner of the product can rise and fall individually. Under some circumstances one wheel may lift from the ground when the suspension is operating, particularly when changing direction quickly, **THIS IS NOT A PRODUCT FAULT**, it is merely an operating characteristic of the stroller which should not cause any problems.

The handle on these strollers is reversible so that you can push the stroller either facing the child, or from behind the child. When making adjustments to the handle position, you must also adjust the position of the wheels.

To ensure the wheels are correctly positioned in accordance with the handle position, please do the following:-

1. Adjust the handle to the desired position.
2. Release the swivel locks on all wheels.
3. Push the stroller forward approximately one metre.
4. Now apply the swivel lock on any wheels that are not required to swivel.

PLEASE NOTE: There are four sets of swivel wheels on this stroller, however only use 2 sets in the unlocked swivel position.

The wheels closest to your feet/handle should always be in the locked position with the brake lever facing you.

When pulling the stroller backwards all swivel wheels must be unlocked.

5. Your stroller wheels are now configured correctly for use.

This procedure must be followed each time you adjust the handle until you become familiar with the correct wheel position before locking the swivel locks.

OPERATING THE STROLLER

USING THE SWIVEL WHEELS



If the wheels are locked in the wrong position, you will experience handling problems and the wheels will shake and shudder.



A To lock the swivel wheels, lift the locking clip up.


To allow the wheels to swivel, push the locking clip down

PLEASE NOTE: Lock all swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.

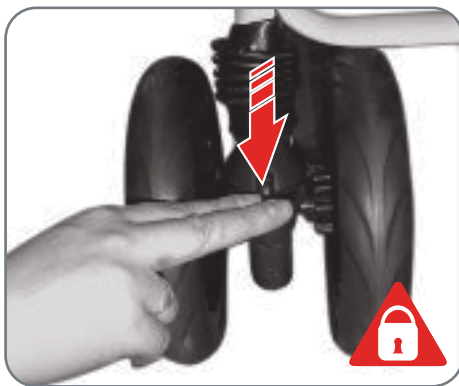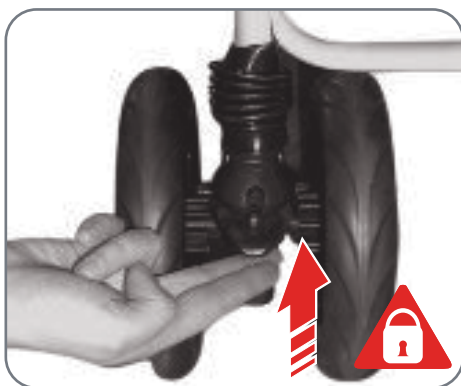

OPERATING THE STROLLER

USING THE BRAKES

 **WARNING:** ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

A To lock the brakes, push down on each brake lever using your foot.

B To release the brakes, lift each brake lever using your foot.



OPERATING THE STROLLER


ADJUSTING THE LEG SUPPORT

IMPORTANT NOTES:


- THE LEG SUPPORT FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG SUPPORT IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG SUPPORT. IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG REST DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG SUPPORT.

A Lower the leg support by pressing up on the release latches located on both sides of the leg support and then push the leg support down to the desired position.

B Raise the leg support by lifting up until the release latches lock into the desired position.

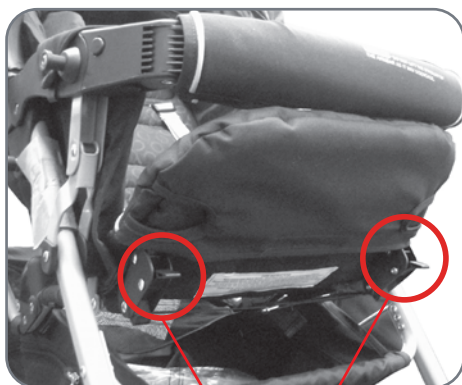

release latches

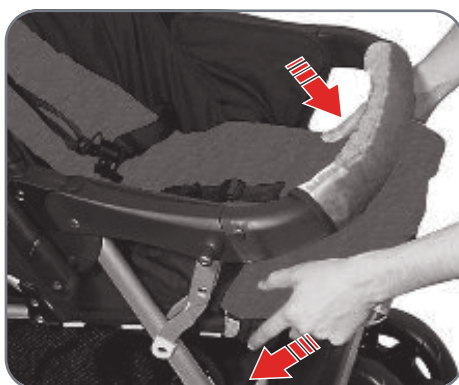

OPERATING THE STROLLER

ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: IF THE CHILD IS SITTING IN THE SEAT, SUPPORT THE BACKREST AS IT RECLINES. IF YOU HAVE DIFFICULTY ADJUSTING THE BACKREST YOU MAY NEED TO REMOVE THE CHILD FROM THE SEAT TO ALLOW YOU TO RAISE OR LOWER THE BACKREST WITH EASE.

A To lower the backrest, lock the brakes (Refer to Page 12). Squeeze the adjusting bar up on the backrest and lower the backrest to the desired position.



OPERATING THE STROLLER

ADJUSTING THE BACKREST

- B** To raise the backrest, hold the backrest along the bottom edge with both hands and lift to select a more upright seating position.



ADJUSTING THE CANOPY

IMPORTANT NOTE:

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

- A** Attach the canopy back flap hook strips to the loop strips on the stroller for a secure fit.



OPERATING THE STROLLER

ADJUSTING THE CANOPY

- B** To open the canopy, pull the canopy forward or to close the canopy, push the canopy backwards.
- C** The canopy window cover can be rolled up and secured with the elastic loop and toggle.



OPERATING THE STROLLER

ADJUSTING THE HARNESS



WARNING: USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.


- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

A Always apply the brakes to the stroller when placing the child in the stroller. Slip one shoulder strap over each shoulder. Position crotch strap between legs.


PLEASE NOTE: ENSURE THE STRAPS ARE NOT TWISTED AS THEY MAY BECOME UNCOMFORTABLE FOR THE CHILD.

OPERATING THE STROLLER

ADJUSTING THE HARNESS

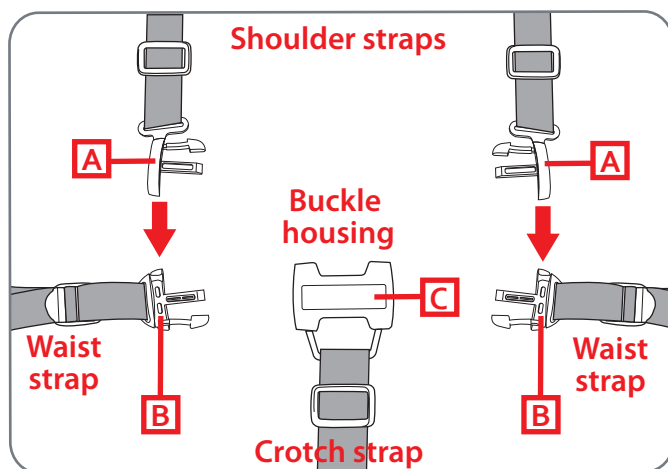


B Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

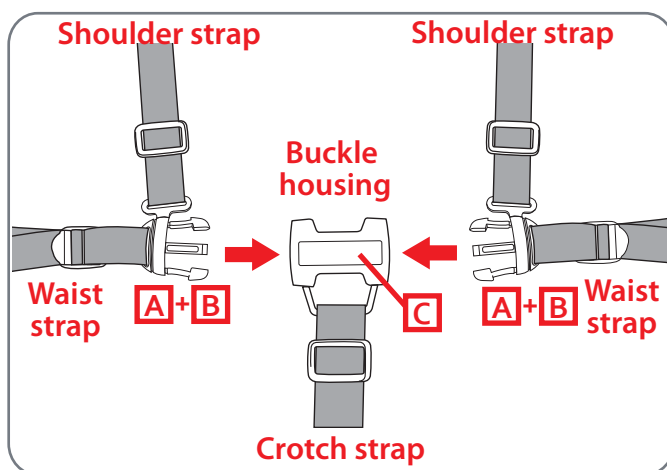


C Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.

OPERATING THE STROLLER

ADJUSTING THE HARNESS

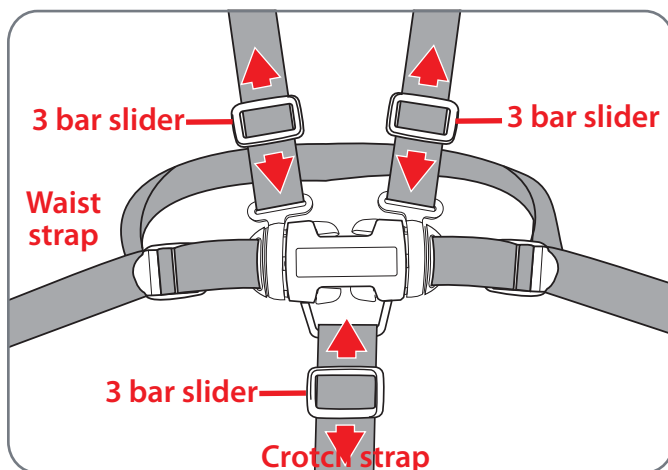


D Tighten or loosen crotch straps by sliding the 3 bar sliders up or down.

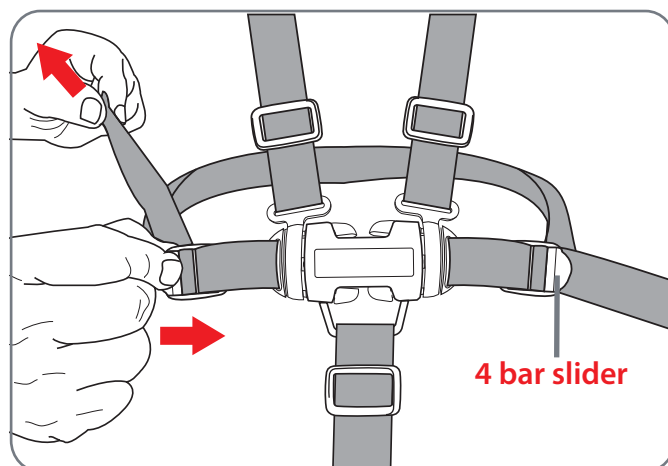

E Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.


OPERATING THE STROLLER

ADJUSTING THE HARNESS

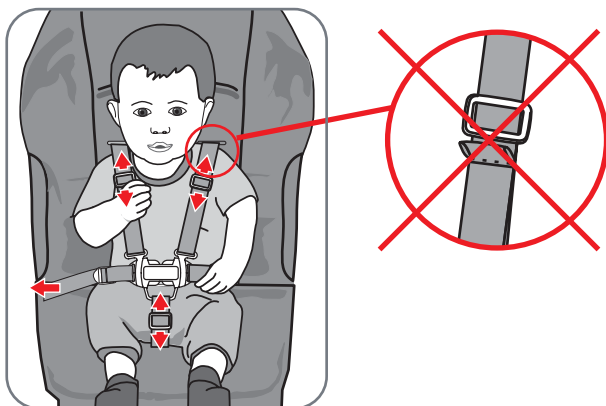

- F** Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

! CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.


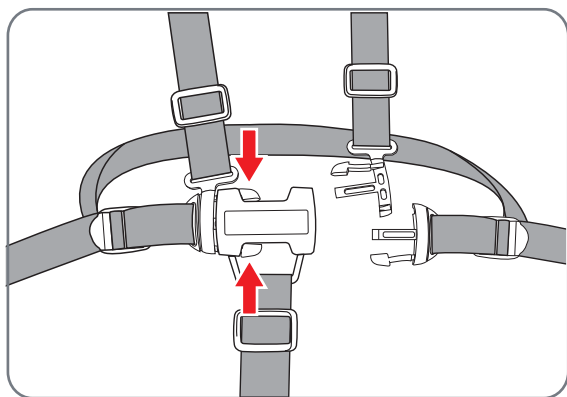


- G** To release the buckle, squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

OPERATING THE STROLLER

ADJUSTING THE HARNESS


H The stroller seat has 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, either push the shoulder harness tongue in or out of the webbing tab on the seat and push through the correct harness slot on the seat pad.

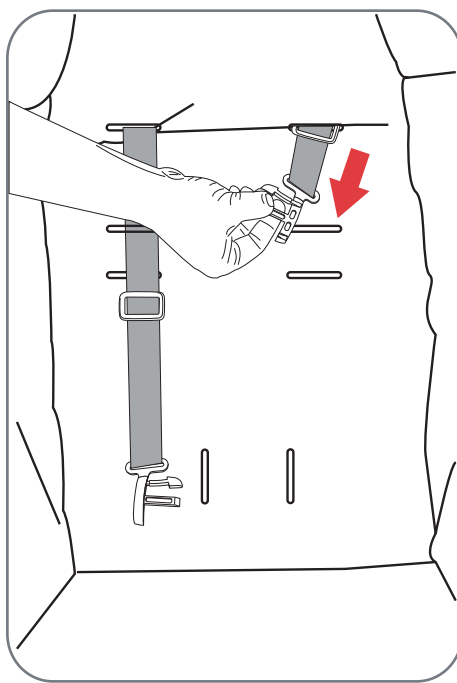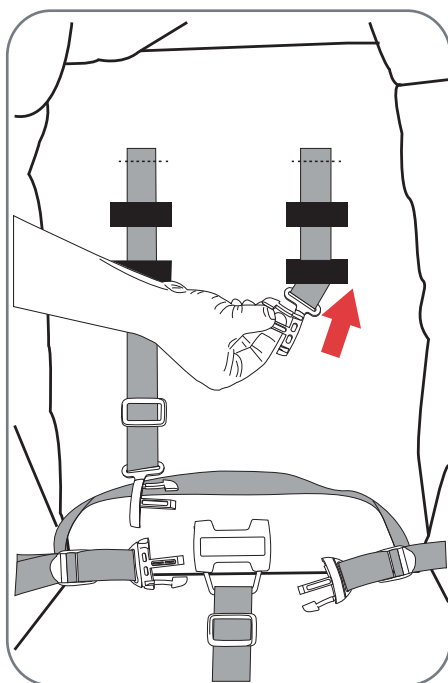

OPERATING THE STROLLER

ADJUSTING THE HARNESS

I Push the waist and crotch strap through the slot on the seat pad.

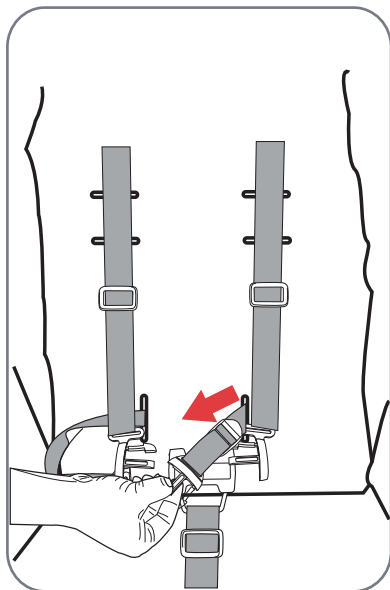


OPERATING THE STROLLER

USING THE ARM BAR

IMPORTANT NOTE:

WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.

- A Fully depress the side arm bar buttons and slide the arm bar out for easy access, or push in to install it.

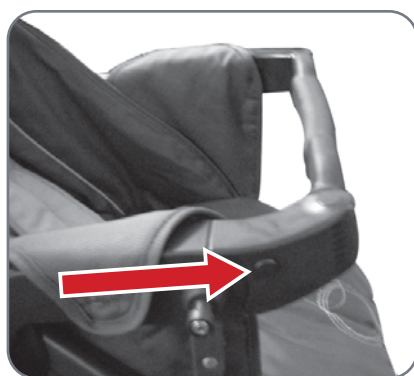

REVERSING THE STROLLER HANDLE


IMPORTANT NOTE:

WHEN A CHILD IS IN THE STROLLER, ENSURE THEIR FINGERS ARE NOT ON THE ARMREST WHEN MOVING THE HANDLE.

- A Lift the finger grips on each side of the handle to release it for forward or reverse positioning. Ensure that both sides are fully locked before using the stroller.

OPERATING THE STROLLER

REVERSING THE STROLLER HANDLE

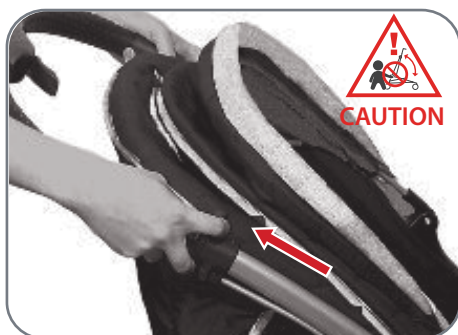

Please Note: When making adjustments to the handle position you must also adjust the position of the wheels. See Page 10 - To use the swivel wheels.

OPERATING THE STROLLER

USING THE TETHER STRAP

⚠ WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



OPERATING THE STROLLER

USING THE STROLLER

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

OPERATING THE STROLLER

FOLDING THE STROLLER


IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
 - FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
 - WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
 - THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
 - KEEP CHILDREN CLEAR OF THE STROLLER WHEN FOLDING THE STROLLER.
- A** Remove the child from the stroller before commencing any folding operation. Fold the stroller slowly and be careful where you place your hands. Keeping your hands on the handles is the best way to fold the stroller.
- B** Lock the brakes and swivel wheels. Put the backrest into the fully reclined position. Close the canopy, remove the boot cover, storm cover and mesh cover (if fitted). Move the handle to the rear of the stroller (where you're standing behind your child).
- C** To release the handle folding locks, push the button on top of the handle then squeeze the lever on the underside of the handle and hold them in together.

OPERATING THE STROLLER

FOLDING THE STROLLER

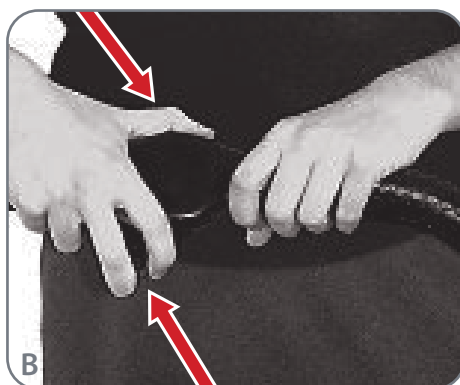

D Depress the red safety lock located on the rear leg. Close the stroller fully until frame storage lock engages.




OPERATING THE STROLLER

LIFTING AND CARRYING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- A** Ensure the storage latch is locked onto the frame before lifting the stroller. To lift the stroller, grasp the frame halfway along the stroller, so the stroller is balanced.

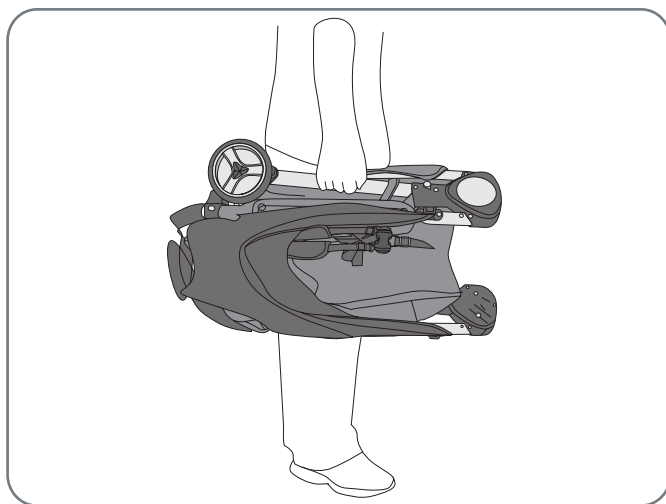

Please Note: This image is for illustrative purposes only.

INFANT CARRIER WARNINGS

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE STEELCRAFT INFANT CARRIER IS NOT TO EXCEED 9kg.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE SAFE N SOUND UNITY INFANT CARRIER IS NOT TO EXCEED 12kg.

INFANT CARRIER IMPORTANT NOTES

- THE STEELCRAFT INFANT CARRIER & THE SAFE N SOUND UNITY INFANT CARRIER ARE THE ONLY COMPATIBLE INFANT CARRIERS DESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD USING THE INFANT CARRIER HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.
- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

INFANT CARRIER IMPORTANT NOTES

PLEASE NOTE: USING THE 40A/2013 UNITY INFANT CARRIER -
The Click & Go™ Adaptors on the 40A/2013 Unity Infant Carrier will need to be removed before installing the Infant Carrier on the stroller. Please refer to 40A/2013 Infant Carrier instructions on how to remove the Click & Go™ Adaptors.

You can identify the 40A/2013 Unity Infant Carrier by the 4 sets of shoulder harness slots instead of the 3 shoulder harness slots in the earlier Unity Infant Carriers Series.

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE INFANT CARRIER ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

OPERATING THE STROLLER

ATTACHING THE UNITY INFANT CARRIER

PLEASE NOTE: INFANT CARRIERS ARE SOLD SEPARATELY.

- A** The stroller seat has 3 sets of harness slots at different heights to accommodate the child. To change the shoulder harness height, either push the shoulder harness tongue in or out of the webbing tab on the seat and push through the correct harness slot on the seat pad.
- B** Position the Infant Carrier over the stroller with the baby's head end of the Infant Carrier over the stroller arm bar.




The arm bar cover must be removed when using the stroller as a travel system.

OPERATING THE STROLLER

ATTACHING THE UNITY INFANT CARRIER

PLEASE NOTE: INFANT CARRIERS ARE SOLD SEPARATELY.

- C Lower the Infant Carrier and ensure that the latch slot locates onto the arm bar.
- D Lower the foot end of the Infant Carrier until the latch locks onto the arm bar and rest the foot end on the seating area of the stroller.

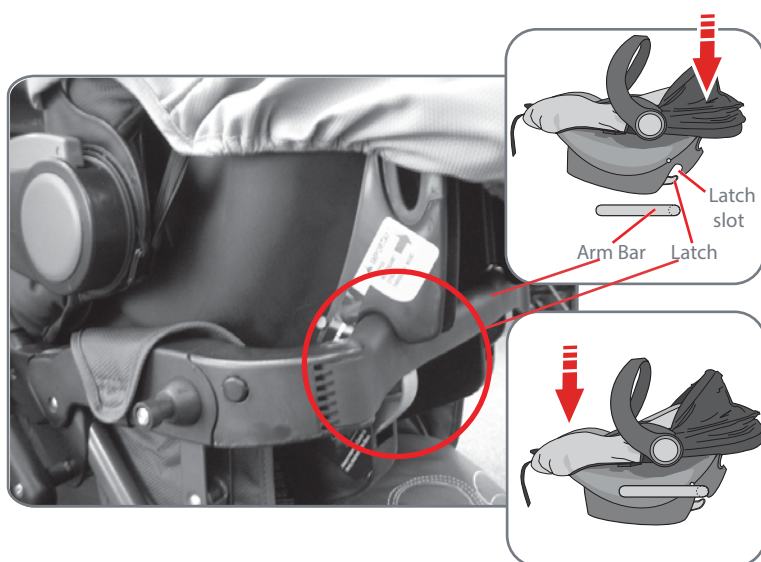

- E Raise and lock the stroller backrest to the middle recline position. This is the recommended carrier position for the baby. Fold the Infant Carrier handle down, and then check the carrier is securely attached to the stroller arm bar by lifting the carrier before use.

PLEASE NOTE: Ensure the baby is secured in the carrier with the harness at all times. The Infant Carrier has been fitted with a hood when using the stroller. The hood may also be used in the car. Do not lift the stroller by the carrier as it may disengage.

OPERATING THE STROLLER

REMOVING THE UNITY INFANT CARRIER

- A** Lower the stroller backrest to the full recline position. Fold the Infant Carrier handle up to the carry position and grip firmly in one hand. Raise the Infant Carrier release catch located on the rear of the carrier.



- B** Lift and remove the Infant Carrier from the stroller.




OPERATING THE STROLLER

ATTACHING THE STEELCRAFT INFANT CARRIER

PLEASE NOTE: INFANT CARRIERS ARE SOLD SEPARATELY.

PLEASE NOTE: The Infant Carrier can only be attached to the frame in the rearward facing position, fitted to the stroller facing toward the stroller handle.

- A** Lower the Infant Carrier and ensure that the latch slot locates onto the arm bar.
- B** Locate the plastic clip on the bottom of the fabric armrest covers and pull the clip downwards to release the cover. To open the Infant Carrier compartments, push the cover forward slightly and then lift the cover up from the inside to fully open.

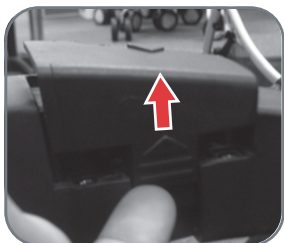






- C** Position the Infant Carrier handle tongue mouldings directly over the stroller frame mouldings. The Infant Carrier handle must be in the upright position.

OPERATING THE STROLLER

ATTACHING THE STEELCRAFT INFANT CARRIER

PLEASE NOTE: INFANT CARRIERS ARE SOLD SEPARATELY.




- D** Push down on the Infant Carrier and make sure it is located into the frame mouldings. The Infant Carrier now needs to be locked securely into the frame. You will notice the handle indicator is GREEN and the frame indicator is RED.
- E** To lock the Infant Carrier onto the stroller frame, squeeze in and hold the latches on either side of the handle, begin to rotate the handle backwards. The GREEN indicator will now start to turn RED.
- F** Release the handle latches. Then with one hand holding the front of the Infant Carrier, push the Infant Carrier handle all the way down until it locks into the frame.
- G** The Infant Carrier handle will now be GREEN and the Infant Carrier should be locked into the frame
- H IMPORTANT:** Pull up on both sides of the Infant Carrier to confirm it is locked into the frame mouldings.

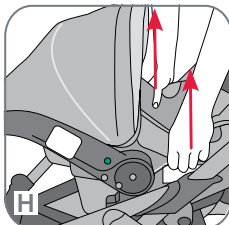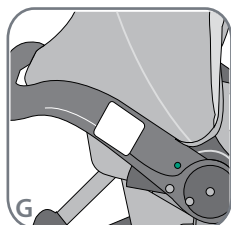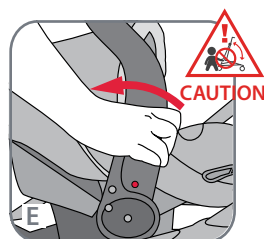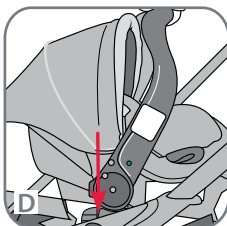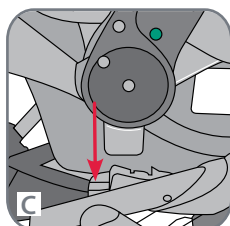

OPERATING THE STROLLER

REMOVING THE STEELCRAFT INFANT CARRIER

- A Squeeze both handle latches in to release the locks and rotate forward slightly. The indicator will now be RED.
- B With one hand on handle continue to rotate the handle forward until it returns to the upright position. The indicator should now be GREEN.
- C Lift and remove the Infant Carrier from the stroller frame.

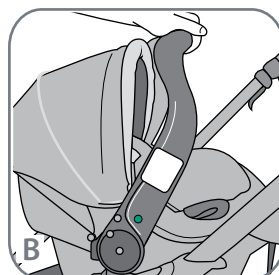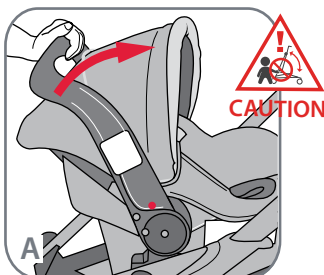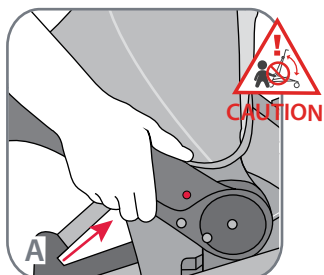

NOTES

CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Remove fabric covers and trims may be cleaned using warm water with household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and Salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Nursery Elegance.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

*Steelcraft*TM

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
99 Derby Road, Sunshine, Victoria 3020, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prams and Strollers - Safety Requirements."

©2015 Copyright Britax Childcare Pty. Ltd. Australia

www.britax.com.au

Art No. 4002031