

SteelcraftTM

Terrain 3 Wheel Travel System Stroller

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
99 Derby Road, Sunshine, Victoria 3020, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.


The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2009 "Prams and Strollers - Safety Requirements."

©2010-2013 Copyright Britax Childcare Pty. Ltd. Australia

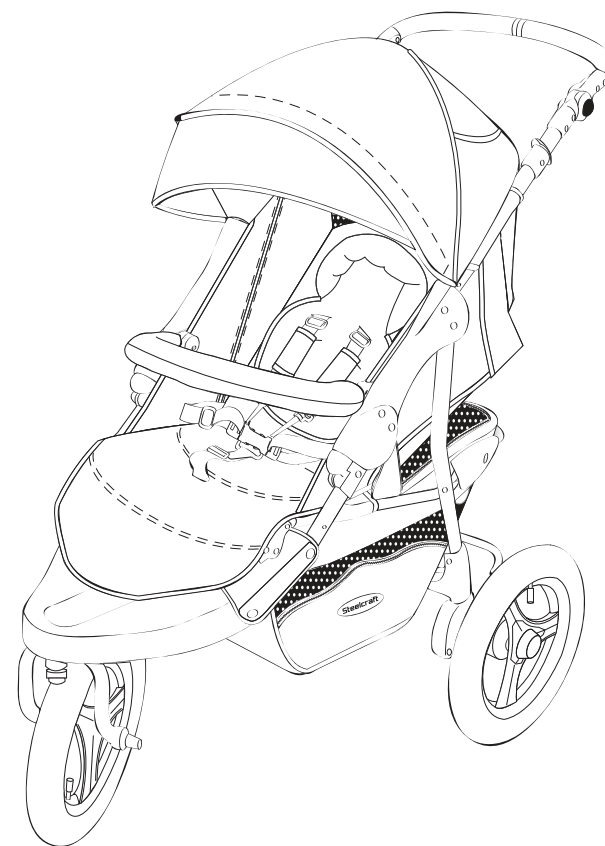

Suitable for use with Safe n Sound Unity Infant Carrier (Sold Separately)

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

SteelcraftTM

Art No.4001704_B

SteelcraftTM

Series AX633-TS

IMPORTANT NOTES

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE
OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS
ESSENTIAL.

- USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.
- IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.
- DO NOT LIFT THE STROLLER BY THE ARM BAR OR TRAY BECAUSE IT MAY DISENGAGE (IF SUPPLIED).
- DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.
- DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.
- DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT PLACE MORE THAN 4 KG IN THE BASKET, OR 1 KG IN THE CANOPY POCKET (IF SUPPLIED).


CARE AND MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight or in the car boot for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

20. TO REMOVE THE UNITY INFANT CARRIER (Infant Carrier sold separately)

- A Lower the stroller backrest to the full recline position. Fold the Infant Carrier handle up to the carry position and grip firmly in one hand. Raise the Infant Carrier release catch located on the rear of the carrier.

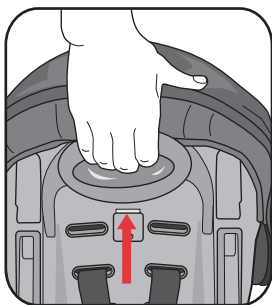

- B Lift and remove the Infant Carrier from the stroller.



IMPORTANT NOTES AND WARNINGS (Continued)

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 17 KG.**

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



CAUTION

This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi squat in preference to a full squat.

Raise the load with your legs

- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.

- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.

19. TO INSTALL THE UNITY INFANT CARRIER (Infant Carrier sold separately)


- D Lower the foot end of the Infant Carrier until the latch locks onto the arm bar and rest the foot end on the seating area of the stroller.
- E Raise and lock the stroller backrest to the middle recline position. This is the recommended carrier position for the baby. Fold the Infant Carrier handle down, and then check the carrier is securely attached to the stroller arm bar by lifting the carrier before use.



NOTE: Do not lift the stroller by the carrier as it may disengage.

19. TO INSTALL THE UNITY INFANT CARRIER (Infant Carrier sold separately)

- C Lower the Infant Carrier and ensure that the latch slot locates onto the arm bar.

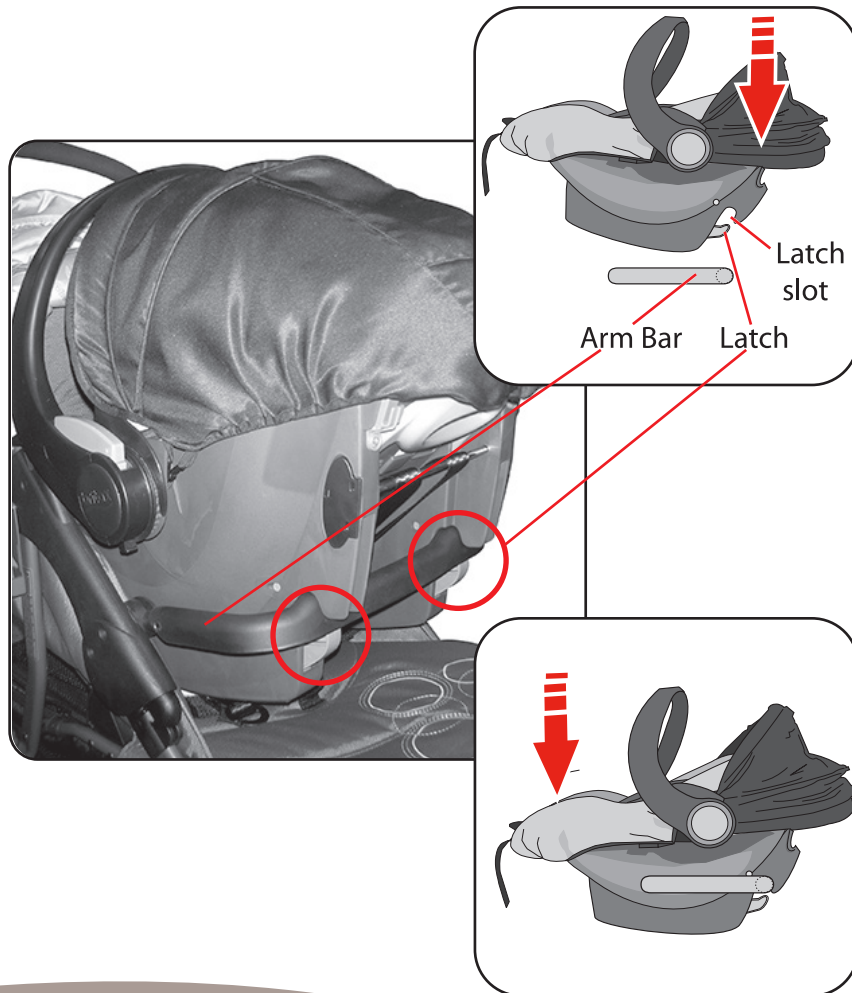

PARTS LIST



A 1 x Stroller Frame, Seat & basket



B 1 x Canopy



C 1 x Front Wheel



D 2 x Rear Wheels



E 1 x Rear Wheel Assembly



F 2 x Locking clip

PARTS LIST



G 1 x Head Snuggler



H 1 x Bootcover



I 2 x Shoulder Pads



J 1 x Tyre pump
1 x pump cover



K 1 x Rain Cover

19. TO INSTALL THE UNITY INFANT CARRIER (Infant Carrier sold separately)

- A Lock the brakes on the stroller. Fully recline the backrest and fold the canopy back. Remove the arm bar cover and store in the basket or pocket.
- B Position the Infant Carrier over the stroller with the baby's head end of the Infant Carrier over the stroller arm bar.



The arm bar cover must be removed when using the stroller as a travel system.

18. INFANT CARRIER WARNINGS & IMPORTANT NOTES (Infant Carrier sold separately)

IMPORTANT NOTES:

- THE INFANT CARRIER IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE INFANT CARRIER MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

PLEASE NOTE: USING THE 40A/2013 UNITY INFANT CARRIER -
The Click & Go™ Adaptors on the 40A/2013 Unity Infant Carrier will need to be removed before installing the Infant Carrier on the stroller. Please refer to 40A/2013 Infant Carrier instructions on how to remove the Click & Go™ Adaptors.
You can identify the 40A/2013 Unity Infant Carrier by the 4 sets of shoulder harness slots instead of the 3 shoulder harness slots in the earlier Unity Infant Carriers Series.

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE INFANT CARRIER ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE INFANT CARRIER IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE INFANT CARRIER.

1. OPENING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.

1. TO OPEN THE STROLLER (Continued)

A Lay the stroller frame down flat and release the frame lock.



B To open the frame, lift the handles upwards until the stroller frame extends and locks into position. Push down on the handle to confirm the frame is locked.



18. INFANT CARRIER WARNINGS & IMPORTANT NOTES (Infant Carrier sold separately)

WARNINGS:

- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THE SAFE N SOUND UNITY INFANT CARRIER IS NOT TO EXCEED 12kg.**

IMPORTANT NOTES:

- THE SAFE N SOUND UNITY INFANT CARRIER IS THE ONLY COMPATIBLE INFANT CARRIER DESIGNED TO FIT THIS STROLLER.
- THE INFANT CARRIER MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER.
- WHEN LOCKED ONTO THE STROLLER FRAME, THE INFANT CARRIER MUST ONLY BE USED IN THE REARWARD FACING POSITION (FACING THE MOTHER), FITTED FACING TOWARD THE STROLLER HANDLE.
- SECURE THE CHILD USING THE INFANT CARRIER HARNESS AT ALL TIMES
- DO NOT LEAVE CHILD IN THE INFANT CARRIER FOR EXTENDED PERIODS.

17. TO LIFT AND CARRY THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- TO AVOID INJURY: BEND YOUR KNEES WHEN OPENING, LIFTING, CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.
- TO LIFT THE STROLLER, GRASP THE CARRY HANDLE SO THE STROLLER IS BALANCED.

- A Ensure the storage latch is locked onto the frame before lifting the stroller. To lift the stroller grasp the carry handle, so the stroller is balanced.




Note: Only use the handle to carry the stroller.

2. TO INSTALL THE REAR WHEEL ASSEMBLY


NOTE: Tip the frame over to install the rear wheel assembly.

- A To attach the rear wheels, push in the wheel lock button and then push the rear wheel onto the axle of the assembly and release the wheel lock button. Pull on the wheel to ensure it is locked on.

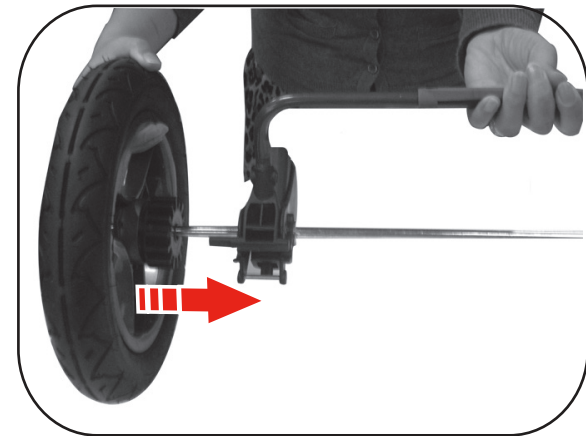

2. TO INSTALL THE REAR WHEEL ASSEMBLY (Continued)

- B Lower the rear wheel assembly onto the rear legs of the stroller frame and insert the two plastic locking clips into rear legs of the stroller frame. Pull on the rear wheel assembly to ensure it is correctly installed.

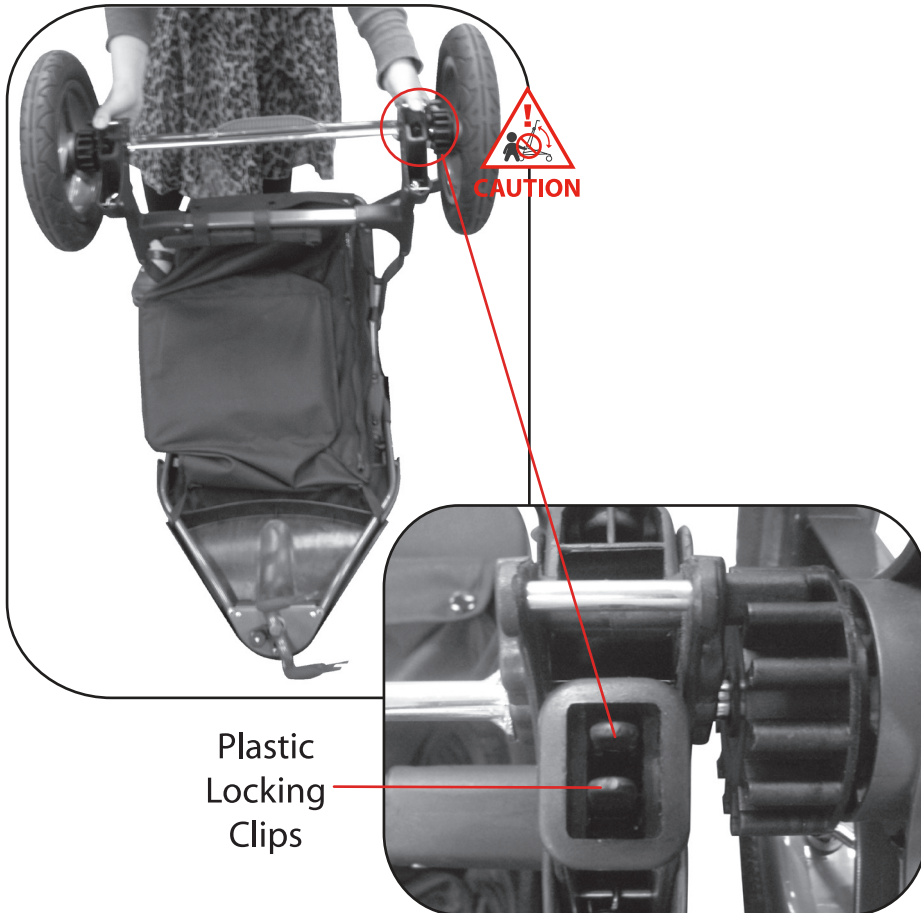


16. TO FOLD THE STROLLER (Continued)

- A Lock the brakes, remove the rain cover if fitted & then remove the child from the stroller. Fold the canopy back and lower the back rest to the fully reclined position. Ensure the front wheel is turned in under the footrest.



- B Stand behind the stroller and pull both the folding locks up. Gently press down on the handle allowing the stroller to fold until the frame locks into a fully folded position. Apply the frame lock latch.

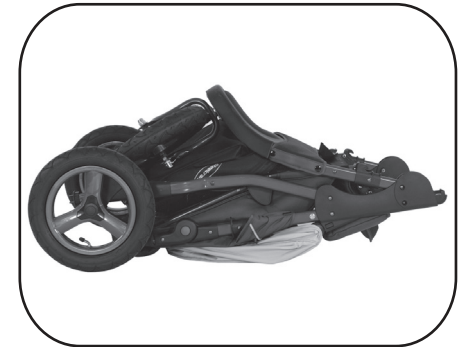

16. TO FOLD THE STROLLER


IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.

3. TO INSTALL THE FRONT WHEEL

- A Remove the plastic protector (where fitted) from the front forks. Push the front wheel axle fully into the wheel forks.

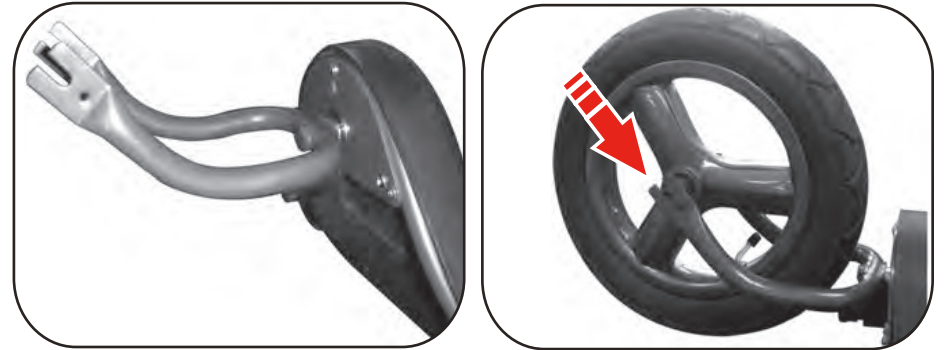

- B Place the securing washer on both sides, ensure the tabs in the washers are located into the circular holes just above stroller frame.



3. TO INSTALL THE FRONT WHEEL (Continued)

- C Tighten the front wheel axle by turning the quick release hub in a clockwise rotation and push the lever in to lock.



15. TO USE THE STROLLER

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handles firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

14. TO USE THE TETHER STRAP

⚠️ WARNINGS: USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- **THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.**
- **NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.**
- **ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.**


- A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.



4. TO USE THE FRONT SWIVEL WHEEL

⚠️ WARNING: THIS PRODUCT IS NOT INTENDED FOR JOGGING. DO NOT RUN WHILE USING THIS PRODUCT.

- A To allow the front wheel to swivel for greater mobility, rotate the knob clockwise until the rivet in the knob faces forward.
- B To lock the swivel wheel, rotate the knob clockwise half a turn and move the fork until it locks into position.


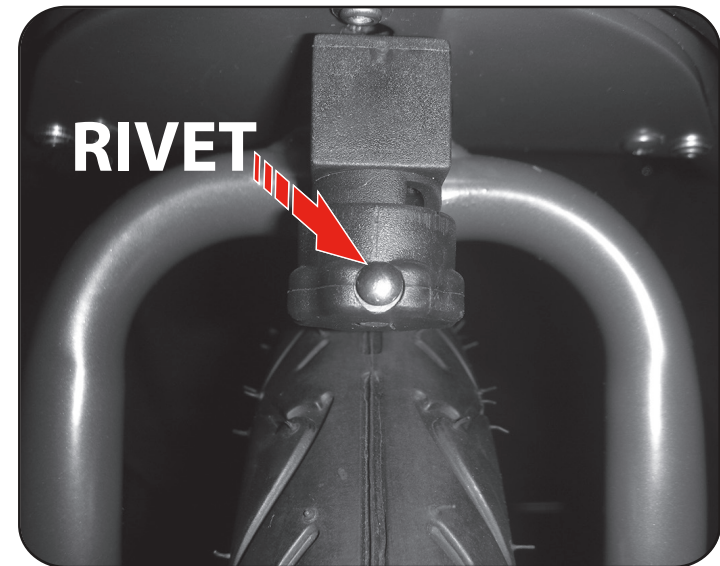


Note: Pneumatic front and rear tyres can be inflated with the pump (where supplied) or a bicycle pump or at a garage pump and they have a maximum inflation pressure of 2.4 bar(35 p.s.i).

5. USING THE BRAKES


! WARNING: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

- A To lock the brakes, push down on the brake lever using your foot.
- B To release the brakes, lift the brake lever using your foot.

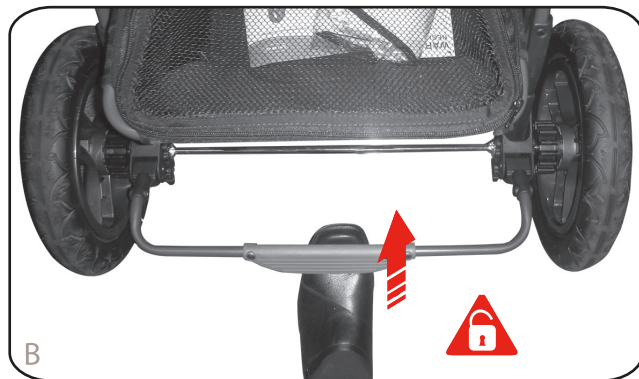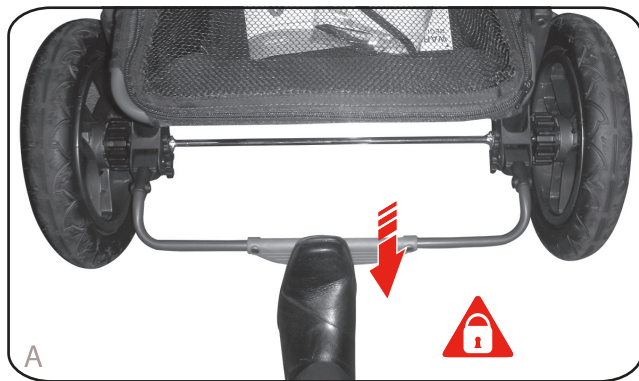

13. TO ATTACH THE RAIN COVER

- A To attach the rain cover, place the rain cover over the front of the stroller canopy and attach the rain cover by connecting the press studs on the sides of the rain cover to the press studs on the sides of the frame. Attach the hook and loop straps on the bottom of the rain cover under the foot plate.

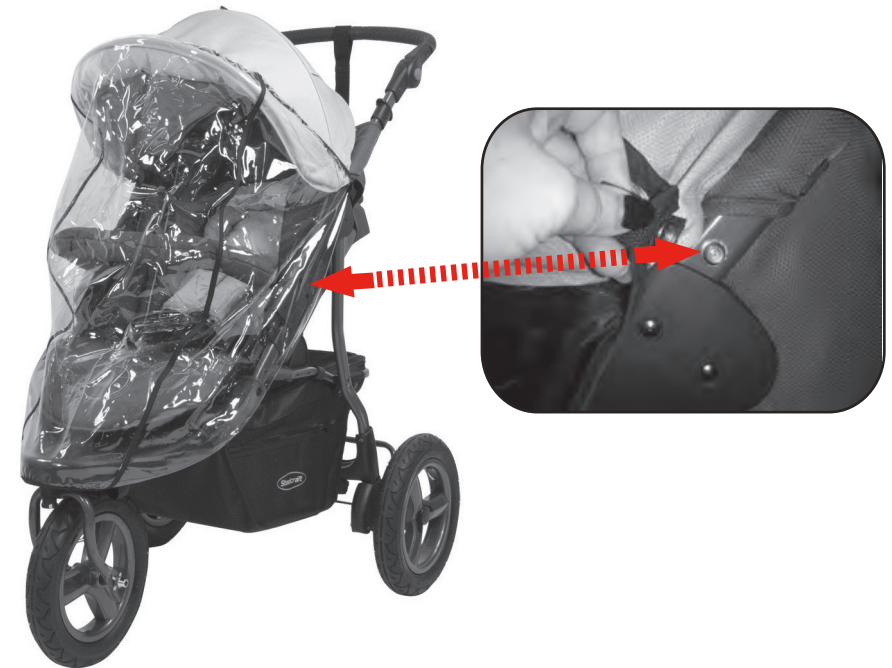

12. TO ATTACH THE BOOT COVER

- A To attach the boot cover, raise the leg support to the horizontal position. Place the boot cover over the front of the leg support and pull the top of the boot cover over the arm bar. Fit the straps located at the top of the boot cover around the rear leg frame and secure the straps by connecting the press studs on each of the straps together.




6. ADJUSTING THE LEG SUPPORT

IMPORTANT NOTES:

- THE LEG SUPPORT FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG SUPPORT IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG SUPPORT. IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG SUPPORT DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG SUPPORT.

- A To adjust the leg support, simultaneously press the buttons in located on either side of the leg support and lower or raise to the desired position.

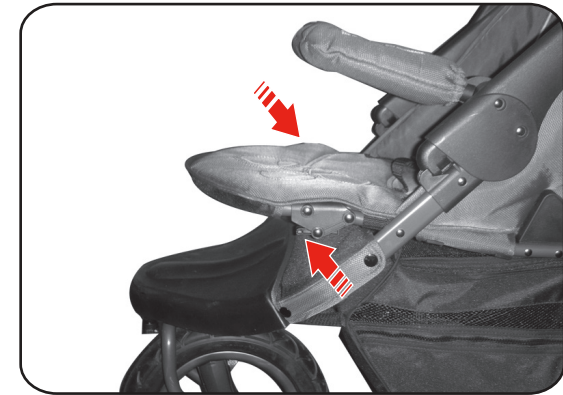

Note: The leg support should be raised to the highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller. It will not lock in this position.


7. TO ADJUST THE BACKREST

WARNINGS:

- **THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.**
- **THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.**


Note: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

- A To lower the backrest, lock the brakes (Refer to Section 5). Squeeze the adjusting bar up on the backrest and lower the backrest to the desired position.

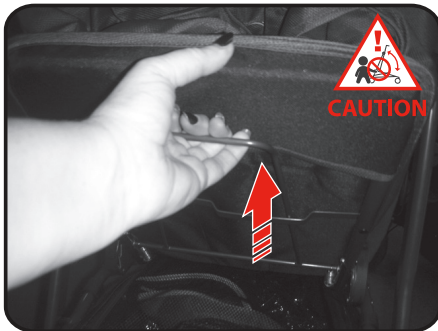

11. TO INSTALL THE HEAD SNUGLER AND SHOULDER PADS

- A To install the head snuggler, disconnect the shoulder straps from the waist straps and place the head snuggler into the stroller. Pull the shoulder straps through the button holes on the head snuggler and adjust the harness to best suit baby's size. Reconnect shoulder straps to the waist straps.

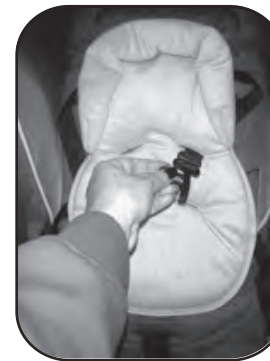


- B To install the shoulder pads, disconnect the shoulder straps from the waist straps and slide the shoulder pads onto the shoulder straps. Reconnect shoulder straps to waist straps.



10. TO ADJUST THE PIVOTAL HANDLE

- A There is an adjusting button on the outside of each handle moulding. Press both buttons in together and hold, then rotate the handle up or down to the desired position.
- B When the desired position has been achieved, release both buttons.

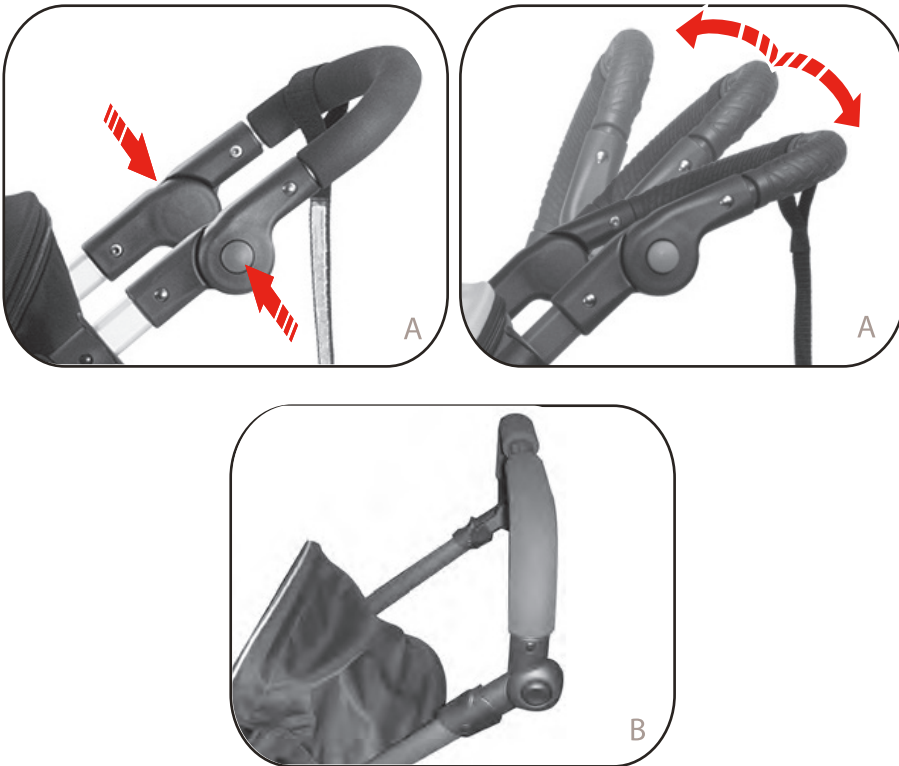

7. TO ADJUST THE BACKREST (Continued)

- B To raise the backrest, lock the brakes (Refer to Section 5). Hold the fabric on either side of the seat clear and lift the backrest up until it locks into the desired position.



8. TO ATTACH AND USE THE CANOPY (Continued)

IMPORTANT NOTE:


The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

- A1 To attach the canopy, push the canopy mouldings into the frame mouldings on each side of the stroller until they connect together.




9. TO SECURE YOUR CHILD IN THE HARNESS (Continued)


- H The shoulder straps must be positioned near the child's shoulders. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat and then pull the shoulder harness buckle tongue through the desired slot.

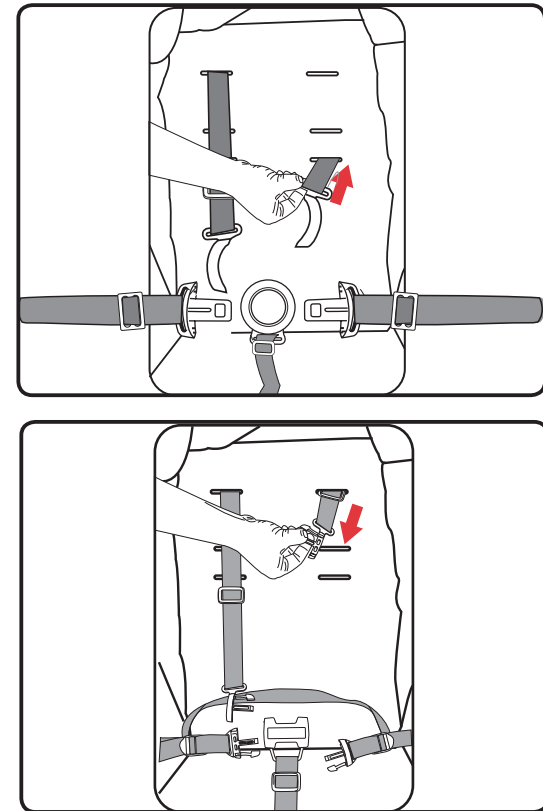

9. TO SECURE YOUR CHILD IN THE HARNESS (Continued)

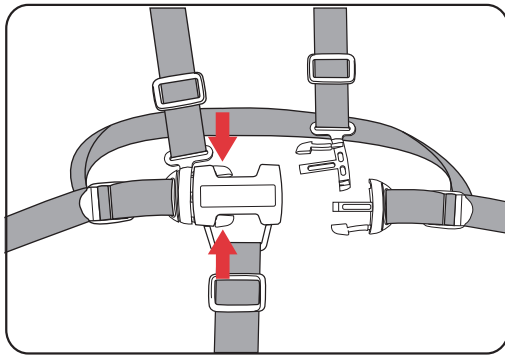

- F To release the buckle, squeeze the top and buckle tongues together with enough pressure so the buckle tongues can release from the buckle housing.

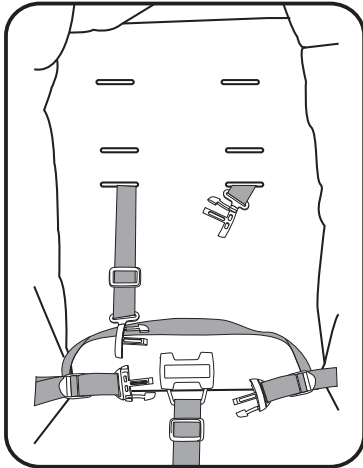

- G The stroller seat has *2 or 3 sets of harness slots at different heights to accommodate the child. (*Depending on the model)

8. TO ATTACH AND USE THE CANOPY (Continued)

- A2 Attach the hook strips on the canopy to the pile strips on the stroller for a secure fit.



- B1 To open the canopy, pull the canopy forward or to close the canopy, push the canopy backwards




8. TO ATTACH AND USE THE CANOPY (Continued)

- B1 For extra protection from the sun, pull the sun visor out from under the front of the canopy.




9. TO SECURE YOUR CHILD IN THE HARNESS (Continued)

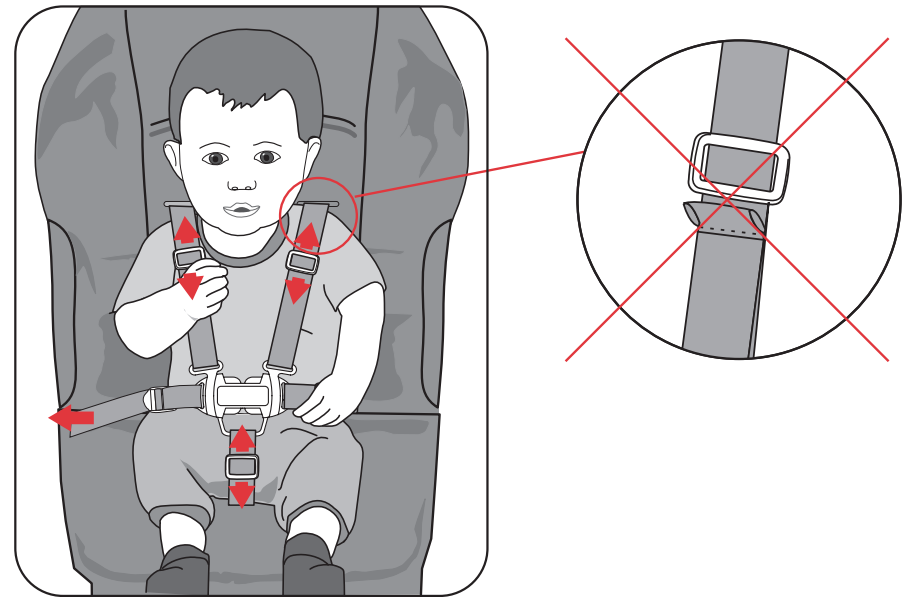


- E Tighten or loosen the shoulder straps, slide the 3 bar slider up or down to adjust to the desired fit. Always adjust the harness strap when changing the seating position of the child.

⚠ CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

9. TO SECURE YOUR CHILD IN THE HARNESS (Continued)

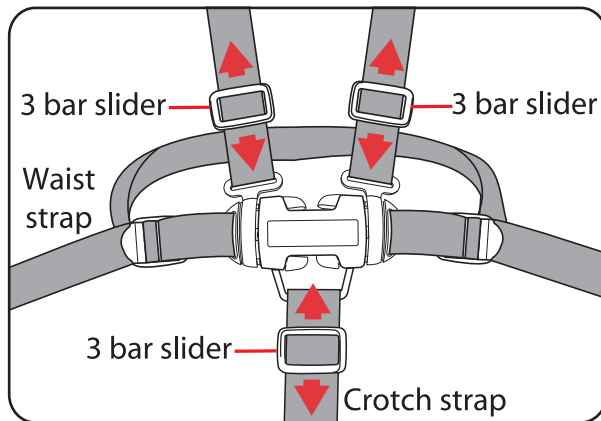


- C Tighten or loosen crotch straps by sliding the 3 bar sliders up or down.

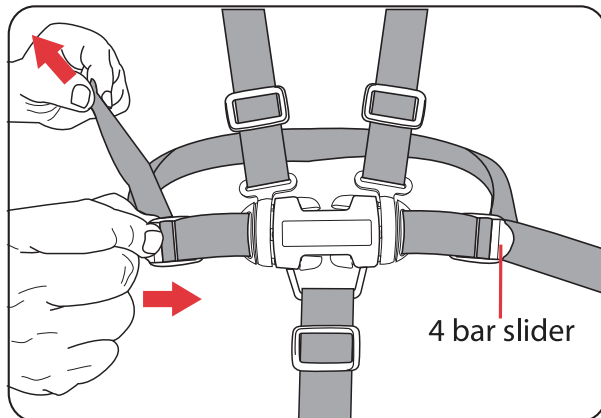


- D Tighten or loosen the waist straps, hold and lift the 4 bar slider and then pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

8. TO ATTACH AND USE THE CANOPY (Continued)

- A The canopy window cover is kept in place by a hidden magnet located at the bottom of the window cover. To open the canopy window cover, simply lift the cover over the centre bow. The canopy window cover can be rolled up and secured with the elastic loop and toggle.

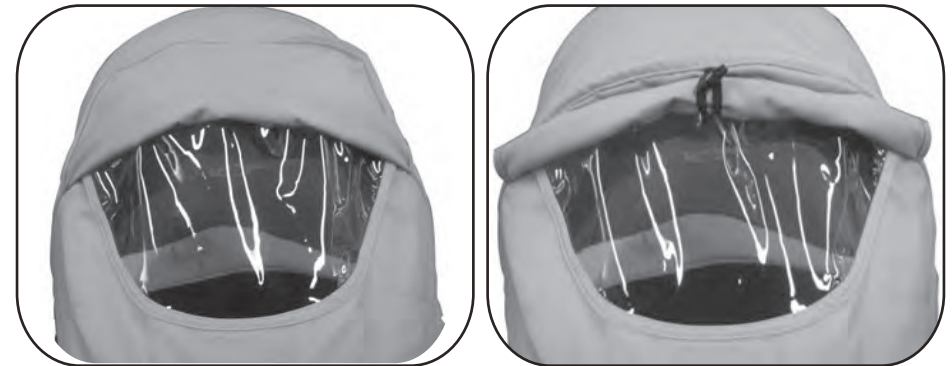

- B To remove the canopy, push the tabs on the canopy mouldings in and pull the canopy out of the frame mouldings.

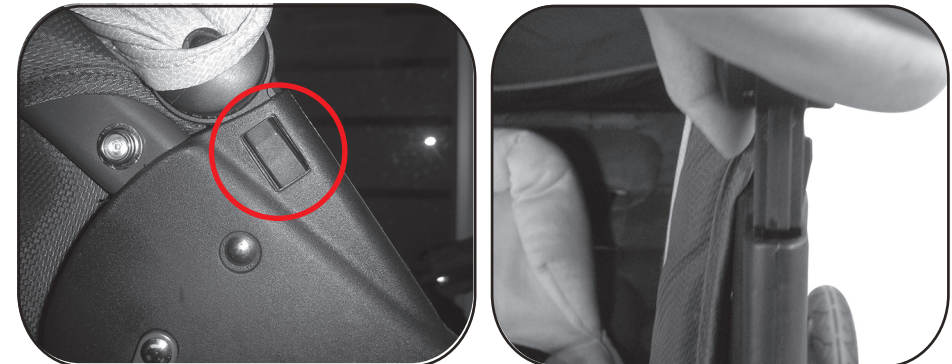

9. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: USE THE HARNESS AT ALL TIMES.


- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.

- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.


A1 Always apply the brakes to the stroller when placing the child in the stroller. Slip one shoulder strap over each shoulder. Position crotch strap between legs.

Note: Ensure the straps are not twisted as they may become uncomfortable for the child.

9. TO SECURE YOUR CHILD IN THE HARNESS (Continued)

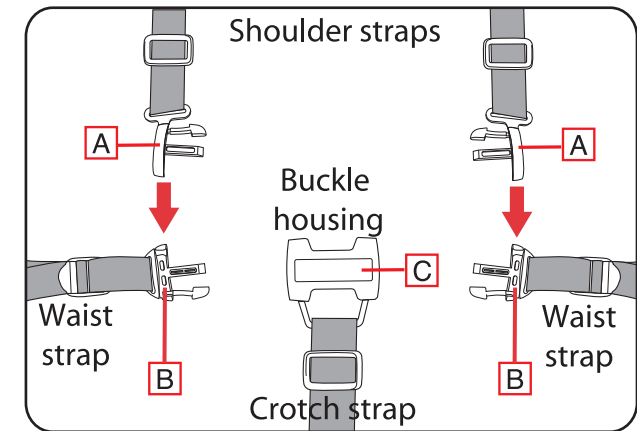

A2 Position the shoulder strap tongue (A) on the top of the waist buckle tongue (B) on both sides.

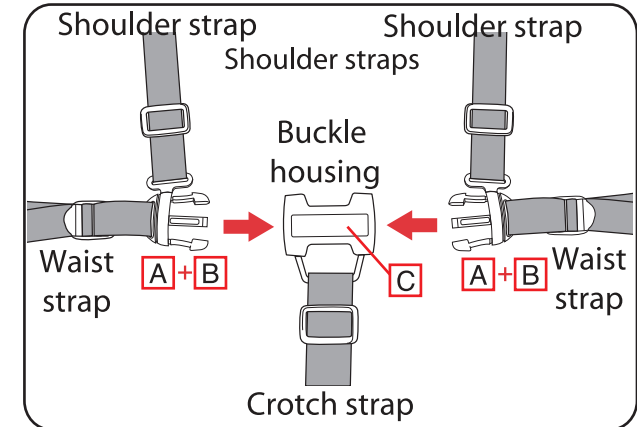

B Push both buckle tongues (A+B) into the buckle housing (C) until the buckle tongues lock into position.