


SteelcraftTM

STRIDER COMPACT

Deluxe edition

TRAVEL SYSTEM STROLLER

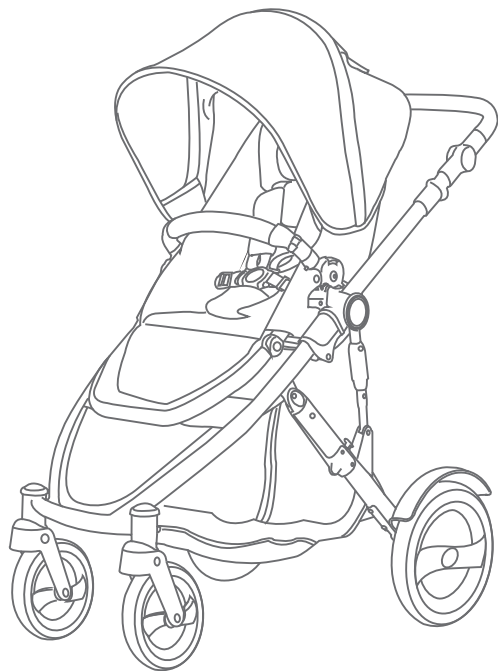

Suitable for use with the Strider Compact Deluxe edition Second Seat, Strider Compact Deluxe edition Bassinet, Steelcraft Baby Capsule or Britax Unity Baby Capsule. (All products are sold separately)

IMPORTANT: KEEP THIS BOOKLET IN A SAFE PLACE FOR FUTURE REFERENCE

CONTENTS

STROLLER SECTION

Stroller warnings and important Notes.....	4
Manual handling techniques.....	6
Stroller parts list.....	7
Stroller Features	10
Stroller configurations.....	12

STROLLER ASSEMBLY

Opening the stroller frame.....	13
Attaching the wheel guards.....	14
Attaching or removing the rear wheels.....	14
Attaching or removing the front wheels.....	15
Attaching the stroller seat.....	16
Attaching the canopy.....	17
Attaching the arm bar.....	18
Installing the newborn comfort insert	19
Attaching the boot cover.....	20
Attaching the organiser bag	21
Installing the shade cover	22
Installing the rain cover.....	23

STROLLER OPERATION

Using the brakes	24
Using the front wheel swivel lock	24
Adjusting the backrest	25
Adjusting the leg rest.....	26
Adjusting the pivotal handle	26
Securing your child in the harness	27
Adjusting the harness	28
Opening the harness	28
Adjusting the shoulder harness height	29
Using the storage basket	30

CONTENTS

STROLLER OPERATION

Using the tether strap	30
Removing and reversing the stroller seat	31
Using the stroller	32
Folding the stroller.....	33
Lifting and carrying the stroller	35

BASSINET

Bassinet Warnings & Important Notes	36
Attaching the Bassinet to the stroller frame	37
Removing the Bassinet from the stroller frame	37

Second Seat

Second Seat Warnings & Important Notes	38
Attaching the Second Seat to the stroller frame	39
Removing the Second Seat from the stroller frame	40

BABY CAPSULE

Baby Capsule Warnings & Important Notes	42
Attaching the Steelcraft Baby Capsule to the stroller frame	43
Removing the Steelcraft Baby Capsule from the stroller frame	44

CARE AND MAINTENANCE	45
NOTES	46

WARNINGS

ALWAYS FOLLOW THE MANUFACTURES INSTRUCTIONS.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.



WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IS NOT TO EXCEED 20 KG. 9KG FOR THE STRIDER COMPACT DELUXE EDITION BASSINET, 9KG FOR THE STEELCRAFT BABY CAPSULE, 12KG FOR THE BRITAX UNITY BABY CAPSULE OR 17KG FOR THE SECOND SEAT.**

FOR IMPORTANT NOTES AND WARNINGS ON ACCESSORIES - REFER TO THEIR INDIVIDUAL SECTIONS IN THIS BOOK OR THE INSTRUCTION MANUAL INCLUDED WITH THE INDIVIDUAL PRODUCTS. THE MAXIMUM WEIGHT VARIES FOR EACH ACCESSORY.



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

IMPORTANT NOTES

- **USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.**
- **IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.**
- **DO NOT LIFT THE STROLLER BY THE ARM BAR (SUPPLIED) BECAUSE IT MAY DISENGAGE.**
- **DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.**
- **DO NOT HANG BAGS UNLESS THEY ARE SUPPLIED OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.**
- **DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.**
- **DO NOT PLACE MORE THAN 12 KG IN THE BASKET AT SINGLE MODE OR 4 KG AT DOUBLE MODE, OR 1KG IN THE SEAT POCKET (IF SUPPLIED), 1KG IN THE BASSINET POCKET (IF SUPPLIED), 1 KG IN THE CUP/BOTTLE HOLDER OR 1.5 KG IN THE ORGANISER BAG IF SUPPLIED.**

MANUAL HANDLING TECHNIQUES

The **SMART** lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where it is going to be placed, check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.


- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and
- Let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

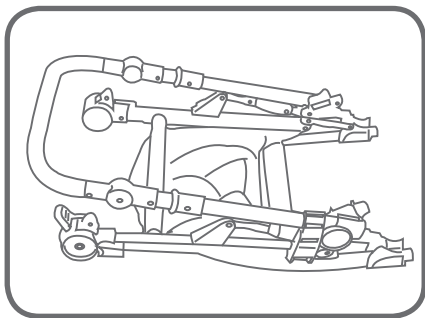


1x Stroller Frame & Basket

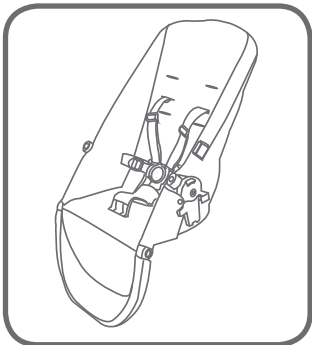


1x Stroller Seat

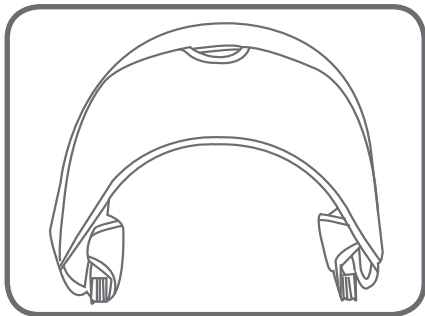


1x Canopy

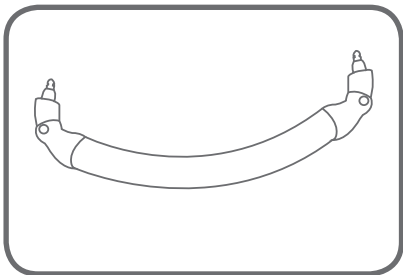

1x Arm Bar

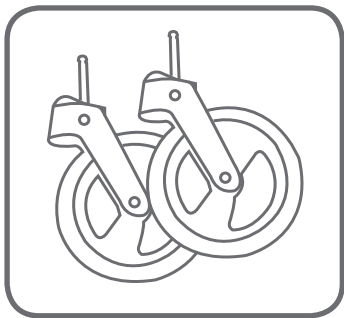


2x Front Wheels

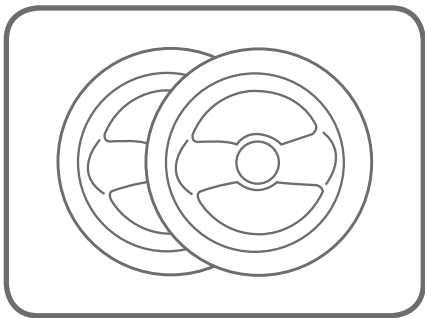


2x Rear Wheels


PARTS LIST

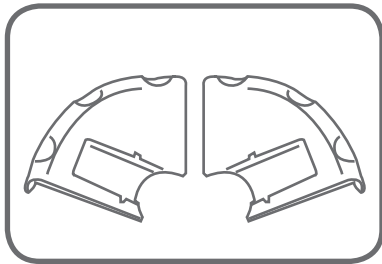


2x Wheel Guards

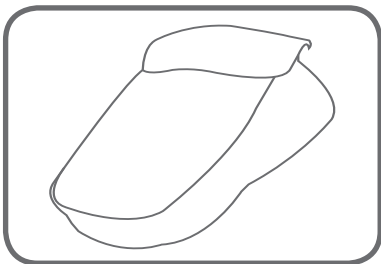


1x Boot Cover

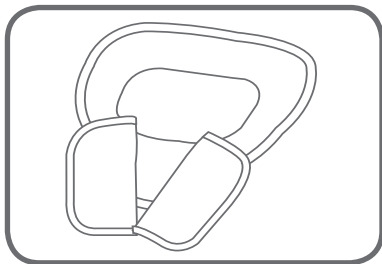


**1x Head pillow +
2x Shoulder Harness Pads**

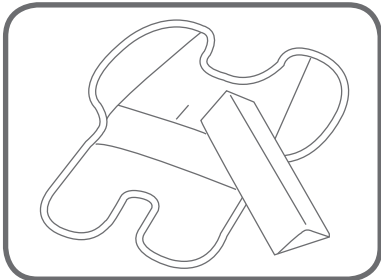

**1x Newborn insert +
Back Support Wedge**

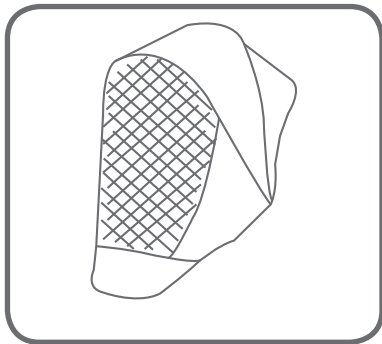


1x Shade Cover

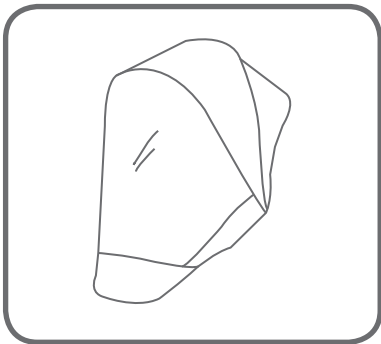


1x Rain Cover

PARTS LIST

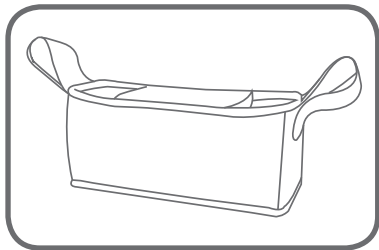


1x Stroller Organiser bag

STROLLER FEATURES

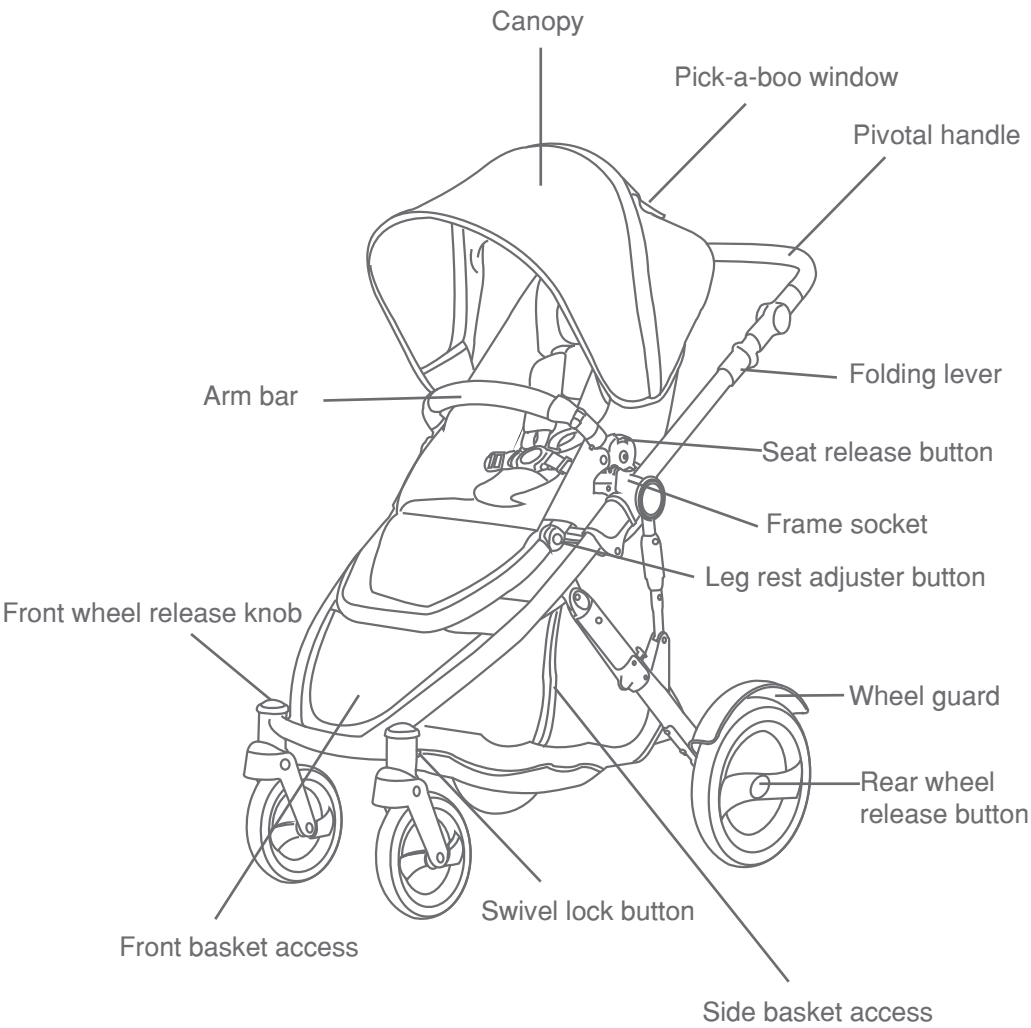

STROLLER FEATURES

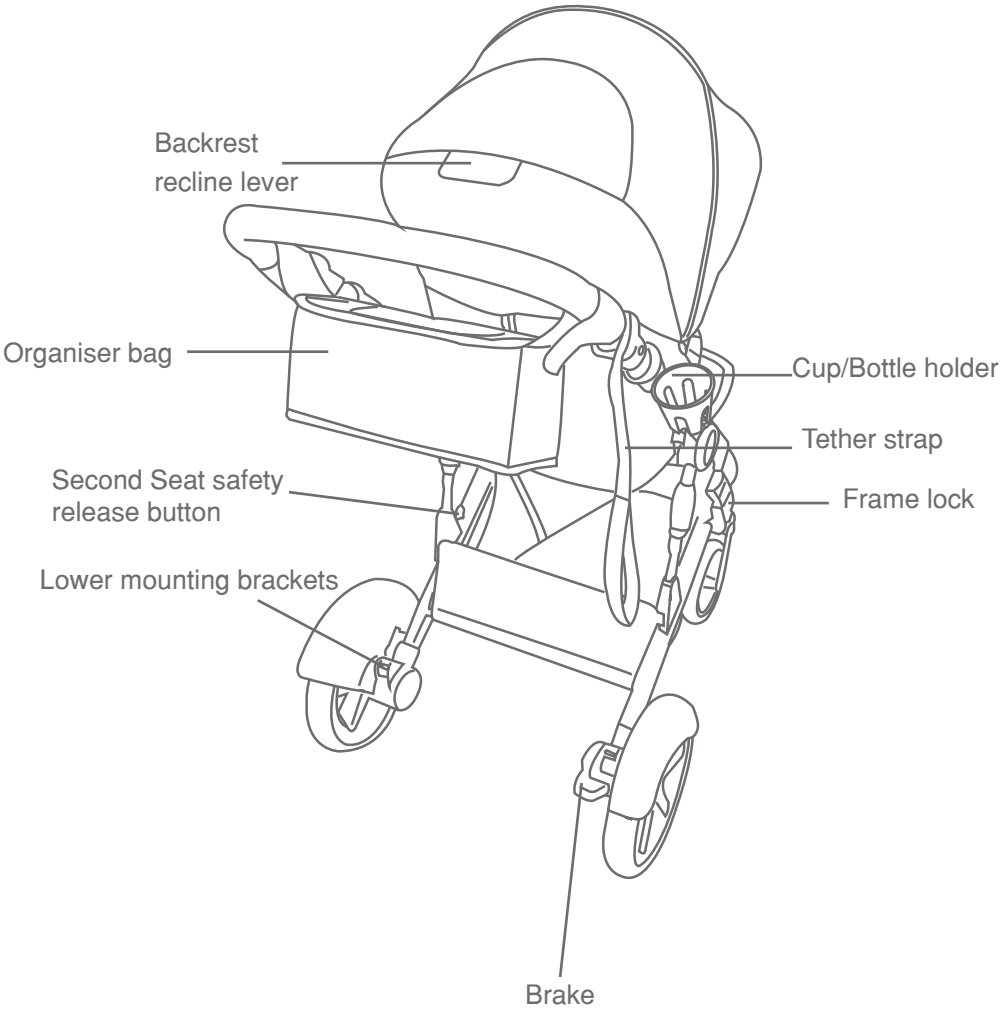


STROLLER CONFIGURATIONS

PLEASE NOTE: Shown with optional Accessories (**sold separately**).


DO NOT exceed maximum weight limits defined in the Baby Capsules or accessory instruction manuals.

SINGLE MODE

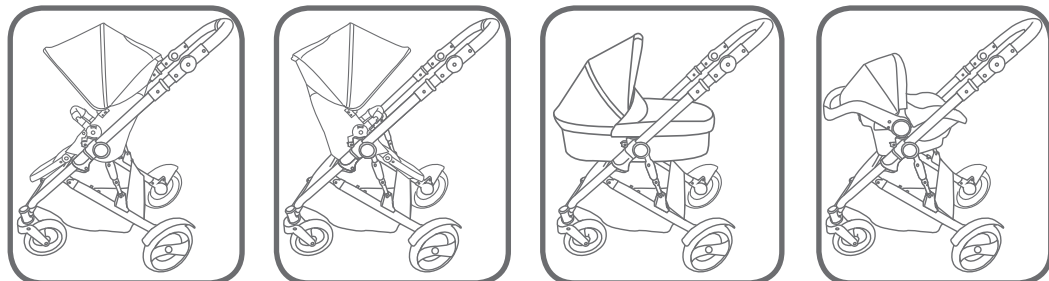

DOUBLE MODE

It is recommended to use the extension receivers (**supplied with the Second Seat**). There are various positions available for double mode, please adjust seat positions and do not use the positions if there is not enough space for the lower occupant.

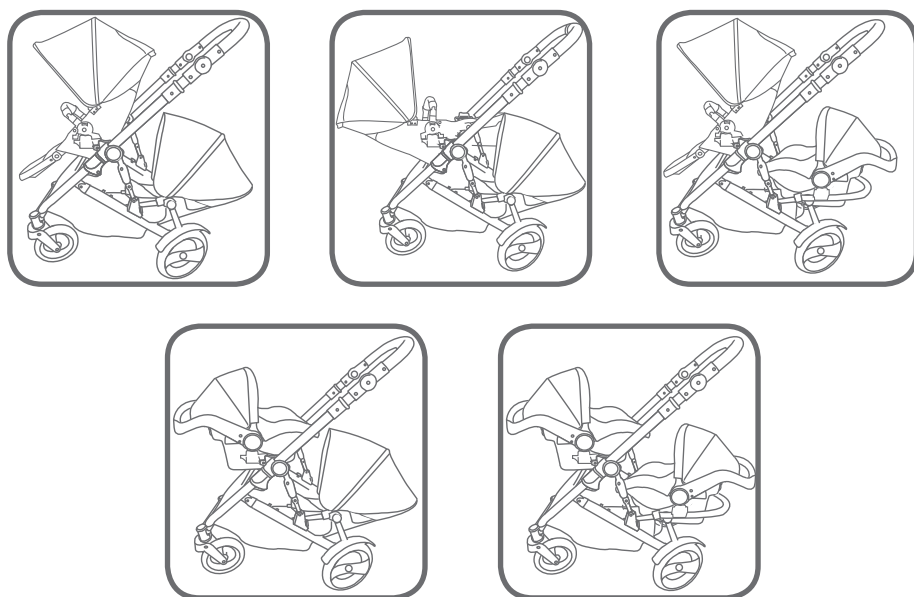


STROLLER ASSEMBLY

IMPORTANT NOTES:


PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- **RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.**
- **WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.**
- **THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.**
- **KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.**
- **OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS. KEEPING YOUR HANDS ON THE HANDLE IS THE BEST WAY TO UNFOLD THE STROLLER.**

OPENING THE STROLLER FRAME

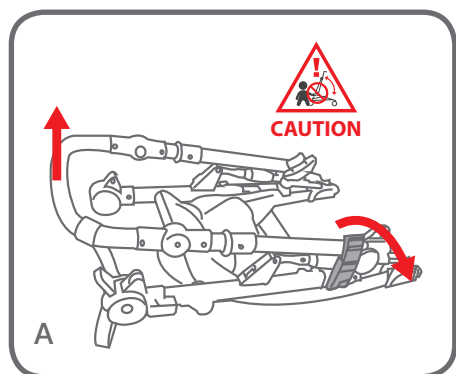


A Push the release on the frame lock and open the frame.

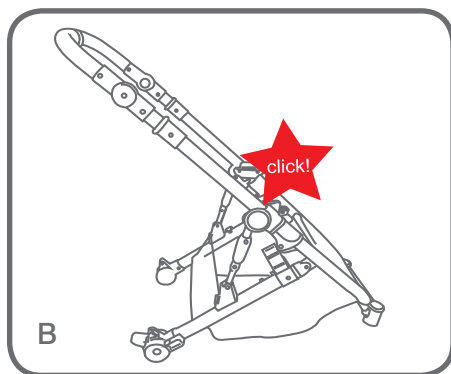

B Lift handle until frame locks into upright position.


STROLLER ASSEMBLY

ATTACHING THE WHEEL GUARDS

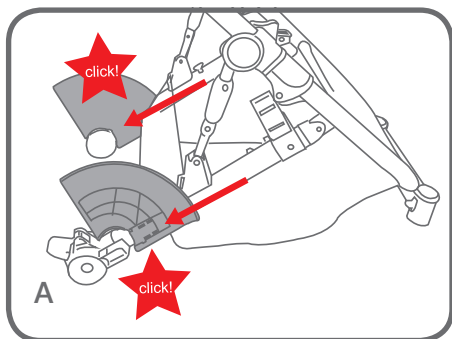


- A** Slide each guard onto the mounting bracket above each rear wheel housing and push down until it locks into place.
There is left and right wheel guard.
Please ensure it is locked.

ATTACHING OR REMOVING THE REAR WHEELS

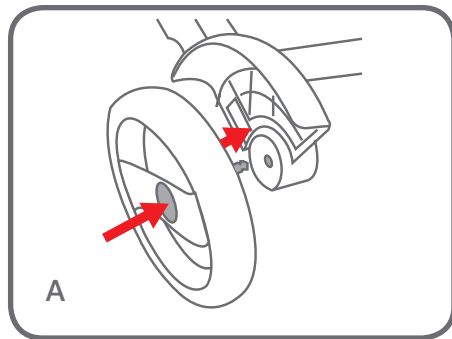


- A** Hold in the rear wheel release button in the centre of the wheel and slide the mounting pin into the housing on the rear axle.
Please ensure it is locked.

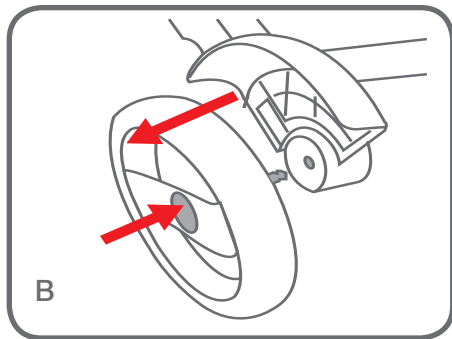


- B** To remove the rear wheels, press and hold the release button in the centre of the wheel and pull away from the wheel housing.

STROLLER ASSEMBLY

ATTACHING OR REMOVING THE FRONT WHEELS

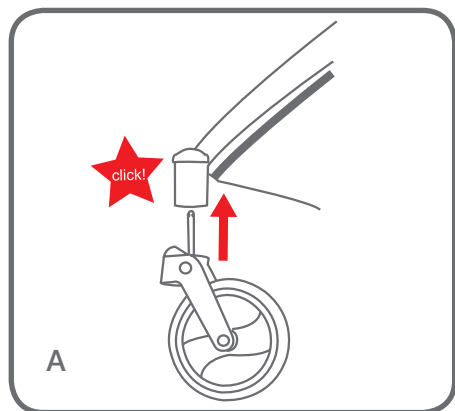

A Slide the front wheel mounting pins into the housing on the frame until they lock into place. Please ensure it is locked.

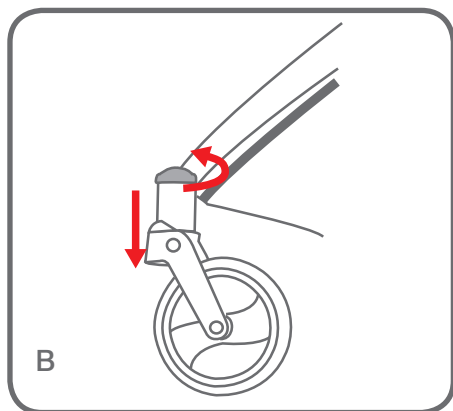

B To remove the front wheels, turn the front wheel release knob to the left and pull the wheel out of the housing.


STROLLER ASSEMBLY

ATTACHING THE STROLLER SEAT


IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING THE SEAT DIRECTION.

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

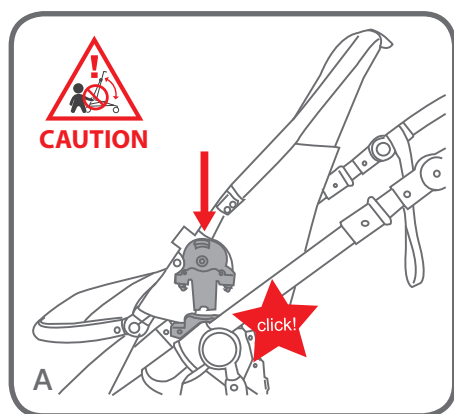

A Hold the stroller seat over the frame and align the seat connectors with frame sockets.

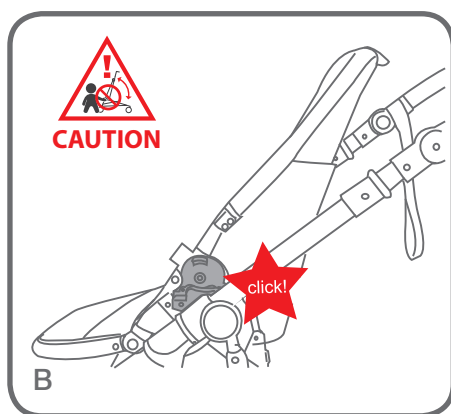


B Push down the seat until both stroller seat connectors have locked into the frame sockets. Please ensure the seat is locked.

STROLLER ASSEMBLY


ATTACHING THE CANOPY

IMPORTANT NOTE:


The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

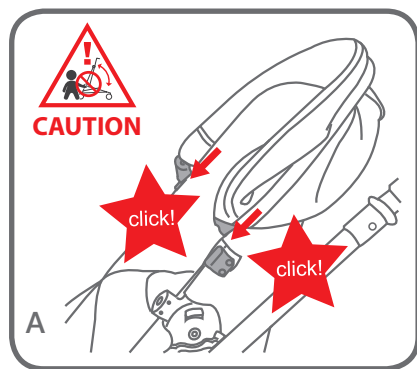


A Fit the canopy over the back of seat and slide the canopy mouldings onto the canopy frame mouldings until they interlock together.

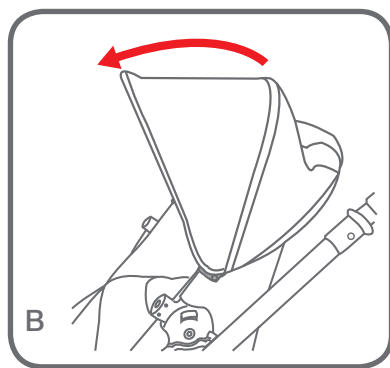

B To adjust the canopy, open by pulling forward, or close by pushing the canopy backward.

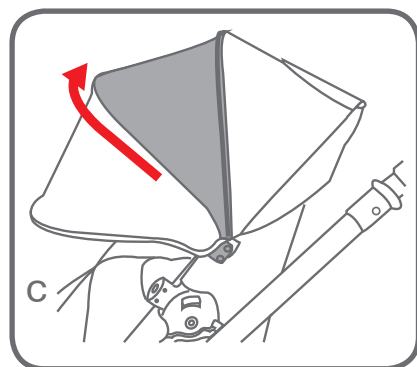

C To expand the canopy unzip the centre section of the canopy.

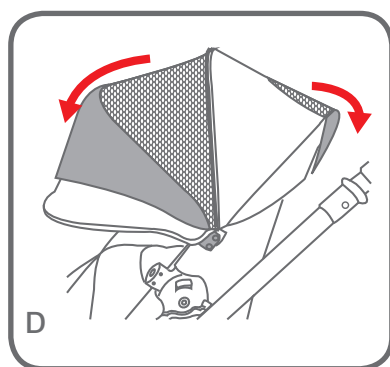


D To expose mesh and the window unzip the mesh cover and lift the window cover.


STROLLER ASSEMBLY

ATTACHING THE ARM BAR

WHEN A CHILD IS IN THE STROLLER, KEEP THE ARM BAR ATTACHED AT ALL TIMES.

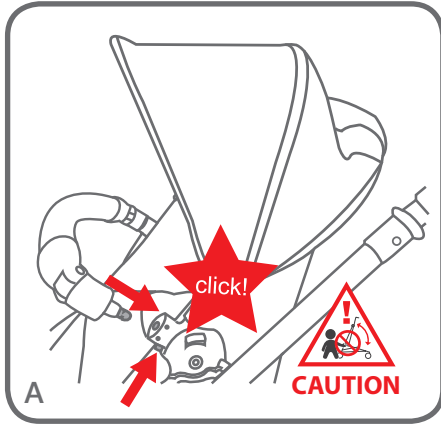

A Align the pins on each side of the arm bar with the arm bar sockets on the seat. Press and hold the button underneath the arm bar sockets then slide the arm bar pins into the sockets until it is locked. Please ensure it is locked.

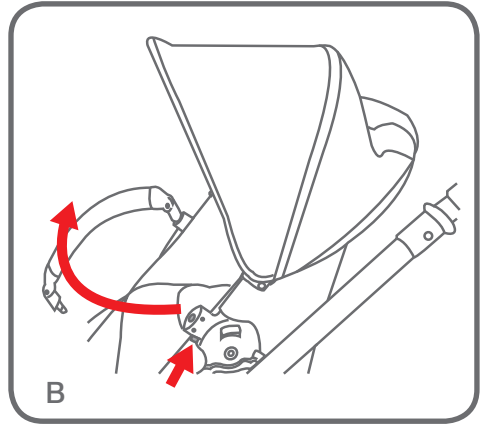


B To remove the arm bar, press and hold the button underneath the arm bar and pull the arm bar out. Rotate the arm bar for easy access.

STROLLER ASSEMBLY


INSTALLING THE NEWBORN COMFORT INSERT

IMPORTANT NOTES:

- THE NEWBORN BACK SUPPORT WEDGE HAS BEEN DESIGNED TO HELP IMPROVE AND PROVIDE A MORE SUPPORTIVE SEATING POSITION FOR NEWBORN OR LOWER BIRTH WEIGHT BABIES.
- THE STROLLER SEAT SHOULD BE USED IN THE FULLY RECLINED POSITION WITH THE NEWBORN BACK SUPPORT WEDGE.
- THE NEWBORN BACK SUPPORT WEDGE SHOULD BE REMOVED AS YOUR BABY GROWS.
- WHILE USING THIS PRODUCT REGULARLY CHECK TO ENSURE THAT THE HARNESS STRAPS REMAIN TIGHT.

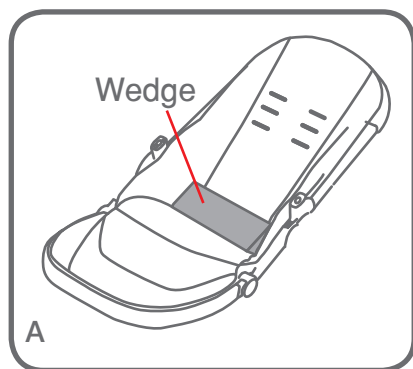

A To use the newborn back support wedge, place the newborn back support wedge firmly in the seat.

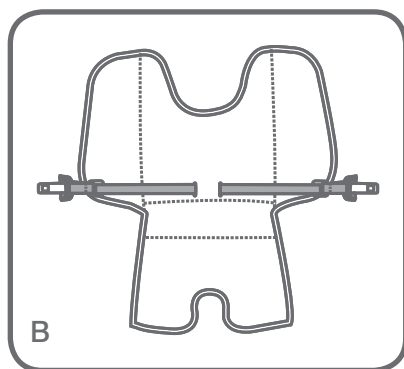


B Place the insert on the stroller seat and thread the harness waist straps through the button holes in the back of the seat insert.


STROLLER ASSEMBLY

IMPORTANT NOTE:

ENSURE THAT THE SHOULDER STRAPS ARE FITTED THROUGH THE APPROPRIATE HARNESS SLOTS TO SUIT YOUR CHILD'S SEATED SHOULDER HEIGHT.

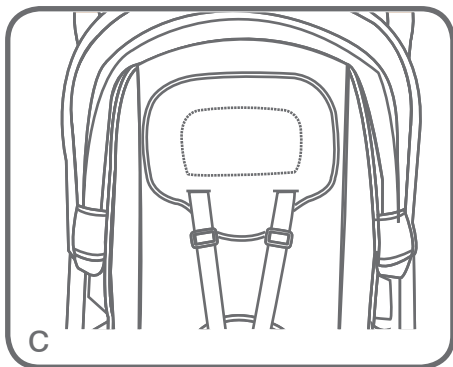


C To use the head pillow, place the head pillow on the stroller seat and connect the hook and loop to desired position.

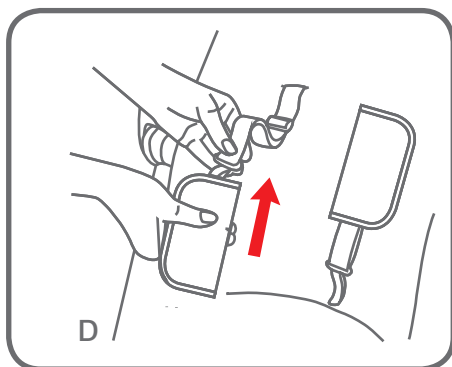

D Slide the shoulder harness pads onto the shoulder harness straps and adjust to the position which fits comfortably on the child.

ATTACHING THE BOOT COVER

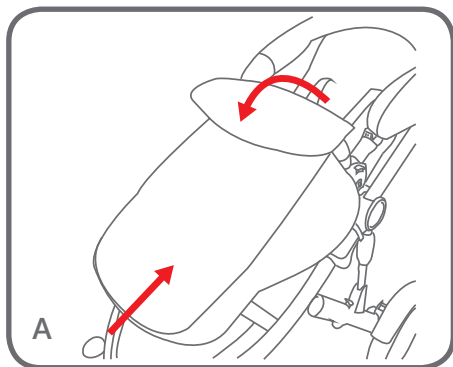

A Fit the boot cover over the leg rest and pull the top flap under the arm bar and over then secure with fastener.



STROLLER ASSEMBLY

ATTACHING THE ORGANISER BAG

IMPORTANT NOTE:

DO NOT PLACE MORE THAN 1.5 KG IN THE ORGANISER BAG.


A The organiser bag attaches to the handle just above the handle height adjuster with hook and loop.

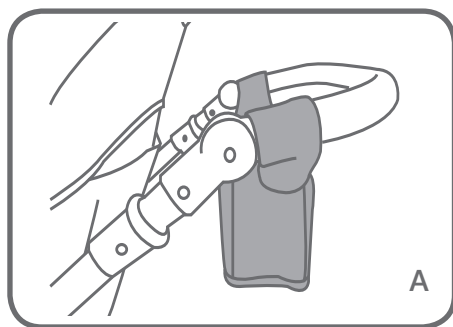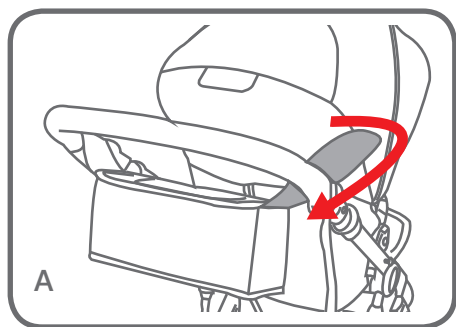


STROLLER ASSEMBLY

INSTALLING THE SHADE COVER

PLEASE NOTE: The mesh cover can also be used separately on the bassinet & Second Seat.

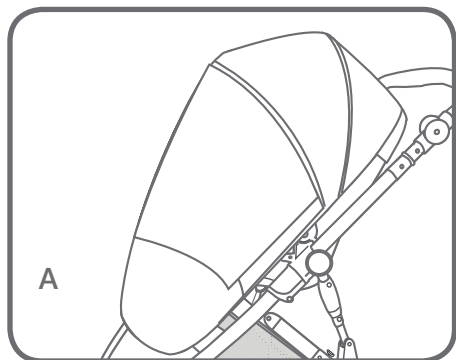

A Hook the front elastic section of the shade cover over the leg rest. Ensure the mesh cover fits snugly over the canopy and is securely fitted to the stroller seat.

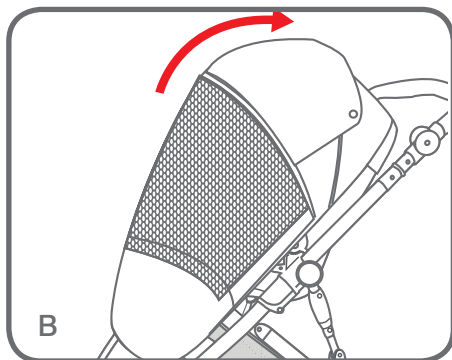

B To reveal the mesh window, fold the fabric cover on top of the canopy.


STROLLER ASSEMBLY

INSTALLING THE RAIN COVER


IMPORTANT NOTE:

**ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE.
REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.**

PLEASE NOTE: The rain cover can be used separately on the bassinet and Second Seat. The rain cover includes an extension which is easily secured to the rain cover with a zipper. The rain cover extension is designed to fit the stroller when using both the top seat and second child seat, top seat and Baby Capsule or Baby Capsule and second child seat.

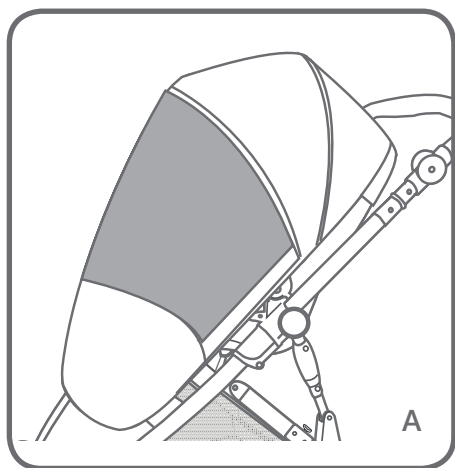

A Hook the front elastic section of rain cover over the leg rest. Ensure the rain cover fits snugly over the canopy and is securely fitted to stroller seat.

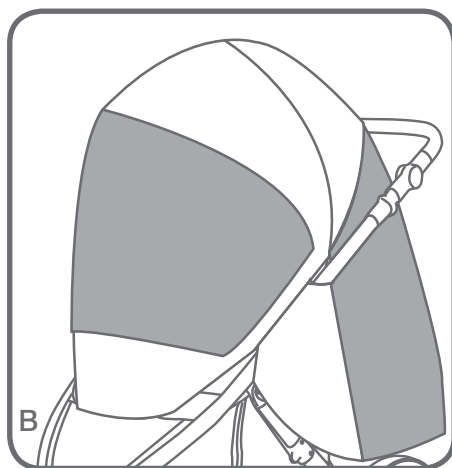


B Attach the rain cover extension as required and secure to the rain cover with the zipper attachment.

PLEASE NOTE: The rain cover is not design to fit over two Baby Capsules.


STROLLER OPERATION

USING THE BRAKES

! WARNINGS: ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

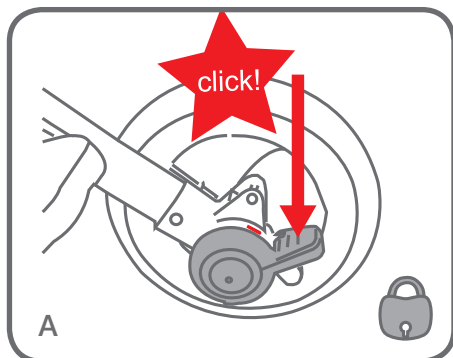

A To engage the brake, step on the red brake pedal until you hear a 'click'. The indicator window will change to red.

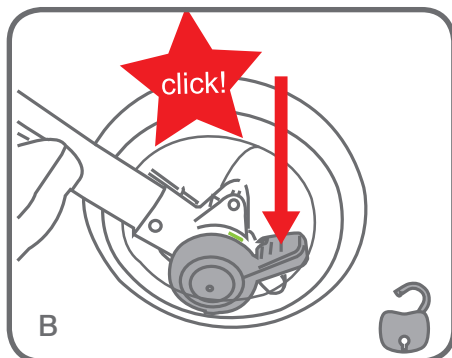


B To disengage the brake, step on the red brake pedal until you hear a 'click'. The indicator window will change to green.

USING THE FRONT WHEEL SWIVEL LOCK

PLEASE NOTE: Always lock the swivel wheels when locking the stroller on rough surfaces as this will minimise wheel wobble.


The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

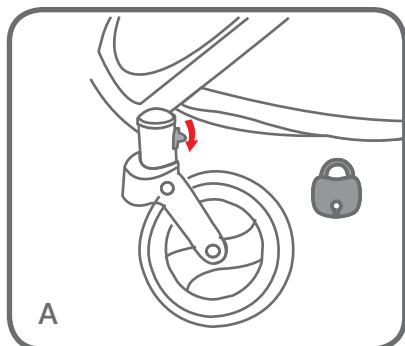

A To lock the front wheels into the fixed position, press the grey swivel lock down on both wheels until they lock into position.

STROLLER OPERATION

USING THE FRONT WHEEL SWIVEL LOCK

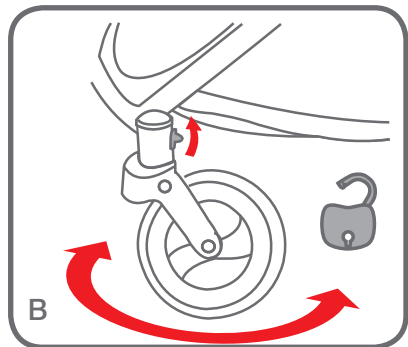


B To allow the wheels to swivel, push the grey swivel wheel lock up on both wheels until they lock into position.

ADJUSTING THE BACKREST

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty adjusting the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

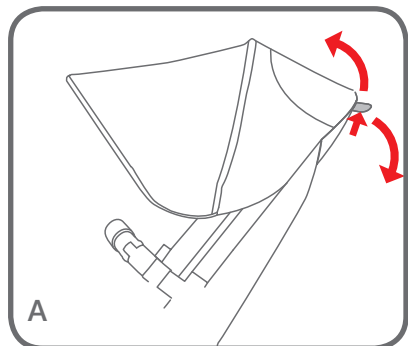

PLEASE NOTE: There are four backrest positions.


A Lift the recline lever on the back of the seat and hold while raising or lowering the backrest to the desired position.

STROLLER OPERATION

ADJUSTING THE LEG REST


IMPORTANT NOTES:

- THE LEG REST FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG REST IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG REST, IT WILL DISENGAGE IF EXTRA WEIGHT IS APPLIED.
- IF LEG REST DISENGAGES SIMPLY LIFT UP AGAIN TO RESET LEG REST MODE.

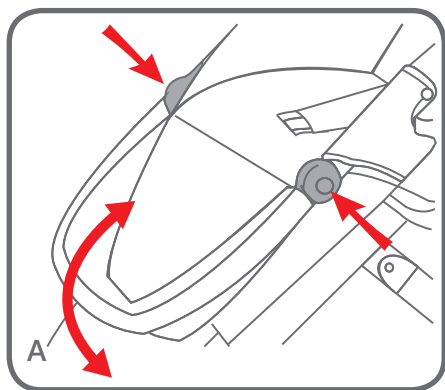

A Press the two release buttons on both sides of the leg rest hinge and hold while raising or lowering the leg rest to the desired position.

ADJUSTING THE PIVOTING HANDLE

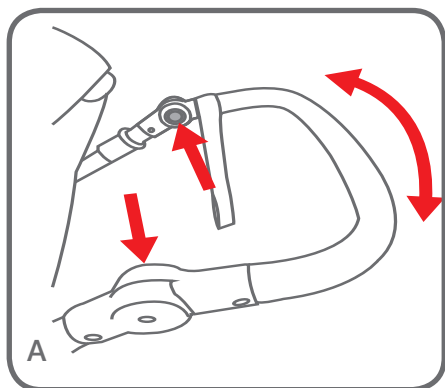

PLEASE NOTE: The pivotal handle has 7 positions.

A Press the two release buttons on the inside of the handle and hold while raising or lowering the handle to the desired position.

When the desired height has been achieved let go of both release buttons.


STROLLER OPERATION

SECURING YOUR CHILD HARNESS


WARNINGS: USE THE HARNESS AT ALL TIMES.

- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up. Ensure the harness straps are not twisted as they may become uncomfortable for the child.

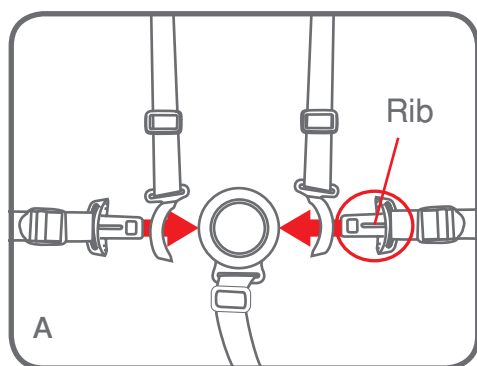

A Always apply the brakes before placing child in stroller seat. Position the shoulder strap near the child's shoulder and position crotch strap between legs. Thread the waist strap buckle tongues through the shoulder straps tongue guides.

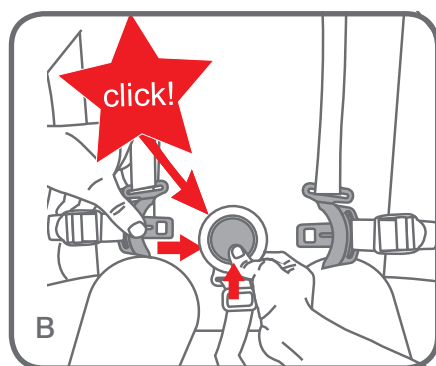


B Hold the centre button in on the crotch buckle and insert the waist buckle tongues into the crotch strap buckle until you hear a 'click'. Repeat the procedure on the other side. Please ensure it is locked.

STROLLER OPERATION

ADJUSTING THE HARNESS




A Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.

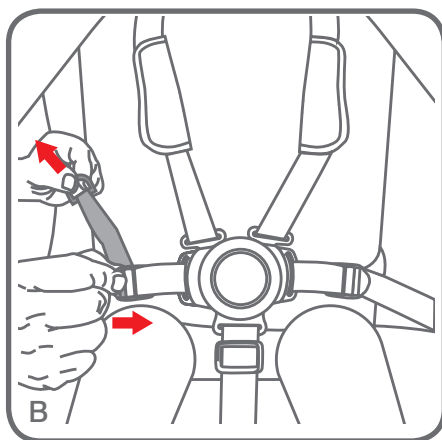

B Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

OPENING THE HARNESS

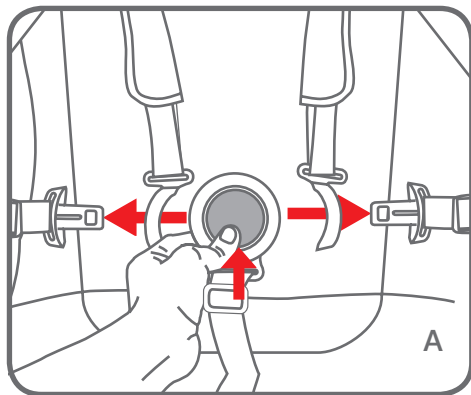


A Release the harness by pressing the centre button in on the crotch buckle while pulling the waist tongues out of the crotch buckle.

STROLLER OPERATION


ADJUSTING THE SHOULDER HARNESS HEIGHT

IMPORTANT NOTE:

THE HARNESS CAN BE ADJUSTED TO THREE DIFFERENT HEIGHTS TO ACCOMMODATE THE CHILD. THE SHOULDER STRAPS MUST BE POSITIONED NEAR THE CHILD'S SHOULDERS.

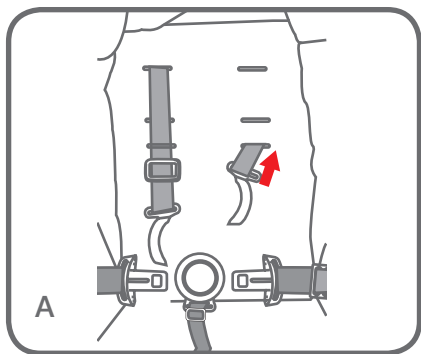

A To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat.

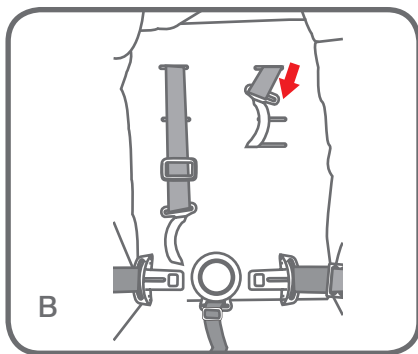

B Select the appropriate shoulder harness height and pull each shoulder harness tongue through the harness slot.

STROLLER OPERATION

USING THE STORAGE BASKET

IMPORTANT NOTE:


DO NOT PLACE MORE THAN 12 KG IN THE BASKET AT SINGLE MODE OR 4 KG AT DOUBLE MODE.

PLEASE NOTE: WHEN A CHILD IS IN THE SECOND SEAT, IT IS RECOMMENDED TO ACCESS THE STORAGE BASKET FROM THE FRONT OR SIDE BASKET PANELS.

USING THE TETHER STRAP

 **WARNINGS:** USE THE TETHER STRAP TO STOP THE STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

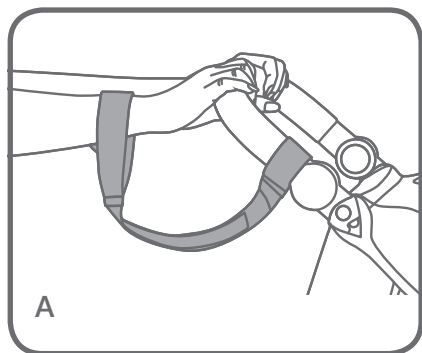

A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.


STROLLER OPERATION

REMOVING & REVERSING THE STROLLER SEAT


IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING, REMOVING OR CHANGING THE SEAT DIRECTION.


PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

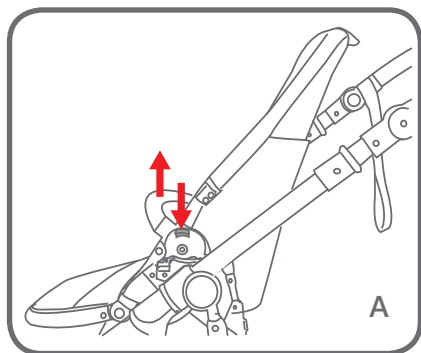

A Hold the stroller seat or arm bar on both sides with your hands. Then with your finger or thumbs, press in and hold the grey stroller seat release buttons.

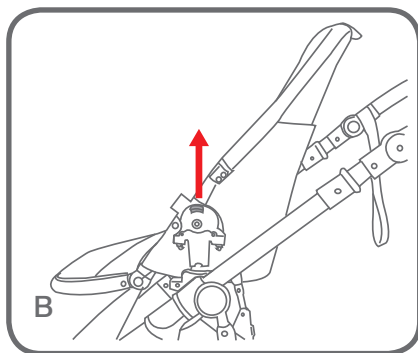

B Continue to press in and hold the grey stroller seat release button and lift the stroller seat up and away from the stroller frame.

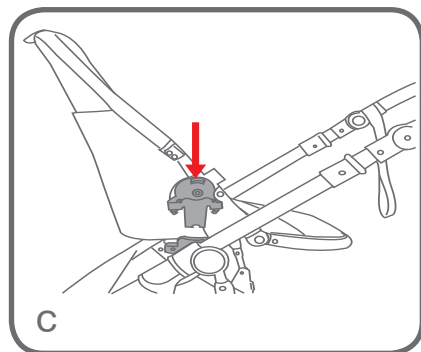

C Turn the seat facing opposite direction and then attach the stroller seat to the frame in the rearward facing position.

STROLLER OPERATION

USING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast, locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods unless it is supplied from the handle. Use the storage basket.

STROLLER OPERATION

FOLDING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES.

IMPORTANT NOTE:

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.

PLEASE NOTE: The stroller seat and wheels can be removed to reduce the total folded size.

With the stroller seat attached, folding the leg support will also help to reduce the folded size.

FOLDING TIPS:

1. For easier handling. It is recommended to remove the stroller seat from the frame (Refer to Page 31) before folding. Then fold the frame and put both the seat and frame in the car.
2. For smaller cars it may be convenient to simply remove the rear wheels.

IMPORTANT NOTE:

- Remove the bassinet or Baby Capsule if connected to the frame prior to folding.
- The Second Seat can either be removed or folded up prior to folding.
- The rain cover must also be removed if fitted.


STROLLER OPERATION

FOLDING THE STROLLER


PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES

- Remove the child from the stroller.
- Engage the brakes. (Refer to Page 24)
- Ensure the front wheels are in swivel mode so the front wheels will automatically position under the stroller during folding. (Refer to Page 25)
- Close the canopy. (Refer to Page 17)
- Adjust the leg rest to the lowest position. (Refer to Page 26)
- Make sure the handle height is set to the highest position aligned with frame to prevent the handle coming in contact with the wheels when folded.

PLEASE NOTE: It is recommended to remove the stroller seat from the frame (Refer to Page 31) before folding. Then fold the frame and put both the seat and frame in the car.

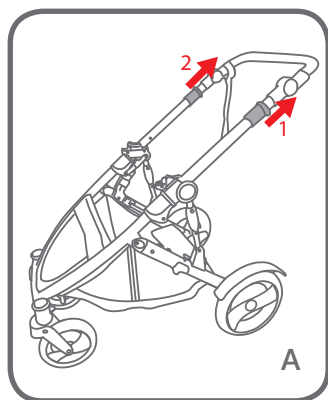

A Engage the brake.
Pull up the folding levers (1 & 2) and begin to push the handle down to fold.

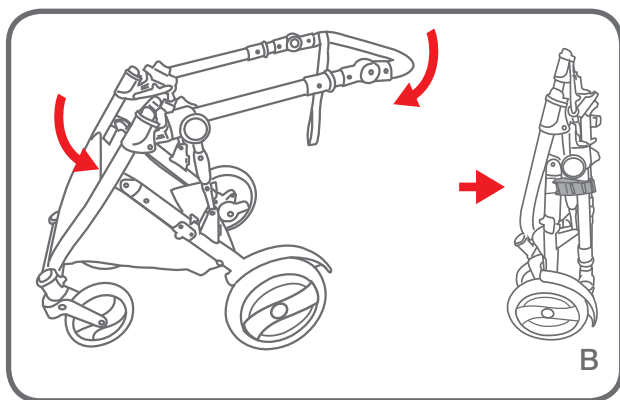

B Continue folding all the way down until frame is fully folded and frame lock is engaged. Ensure the frame is securely locked.

STROLLER OPERATION

CAUTION:

IF YOU HAVE CHOSEN NOT TO REMOVE THE STROLLER SEAT FROM THE FRAME THE STROLLER CAN BE FOLDED WITH THE TOP SEAT AND SECOND SEAT ATTACHED TO THE STROLLER FRAME, HOWEVER, CAUTION MUST BE TAKEN WHEN LIFTING THE STROLLER BECAUSE OF THE OVERALL WEIGHT.

PLEASE NOTE: The stroller can fold with seat in any position however stroller seat in the forward facing position will achieve a more compact fold. Adjust the pivotal handle to the highest position (Refer to Page 26) this will prevent the handle coming into contact with the second seat and causing damage to the stroller when folded.

LIFTING AND CARRYING THE STROLLER

PLEASE REFER TO PAGE 6 FOR SMART LIFTING TECHNIQUES

IMPORTANT NOTE:

- **TO AVOID INJURY: BEND YOU KNEES WHEN OPENING, LIFTING, CARRYING, FOLDING, UNFOLDING OR ADJUSTING THE STROLLER OR ANY ACCESSORIES.**

BASSINET

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BASSINET ON THE STROLLER ONLY. FOR PROPER USE OF THE BASSINET, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE BASSINET.

WARNINGS:


- **DO NOT USE THE BASSINET ONCE THE CHILD CAN SIT UP.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THE PRODUCT IS NOT TO EXCEED 9KGS.**

IMPORTANT NOTES:


- **THE STRIDER COMPACT DELUXE EDITION & STRIDER SIGNATURE BASSINETS ARE ONLY COMPATIBLE BASSINET DESIGNED TO FIT THE STRIDER COMPACT DELUXE EDITION STROLLERS.**
- **REMOVE THE STROLLER SEAT OR BABY CAPSULE FROM THE FRAME BEFORE FITTING THE BASSINET.**
- **ALWAYS REMOVE YOUR CHILD FROM THE BASSINET BEFORE FITTING OR REMOVING THE BASSINET FROM THE STROLLER FRAME.**
- **THE BASSINET MUST ALWAYS FACE TOWARDS THE HANDLE.**
- **THE BASSINET MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.**
- **DO NOT LIFT THE STROLLER BY THE BASSINET.**

BASSINET

ATTACHING THE BASSINET TO THE STROLLER FRAME

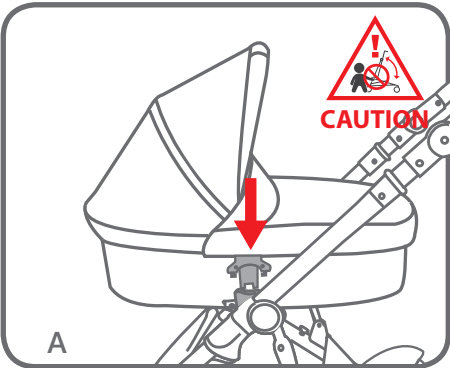


A The bassinet must face the stroller handle.
Align the bassinet directly over the frame sockets.

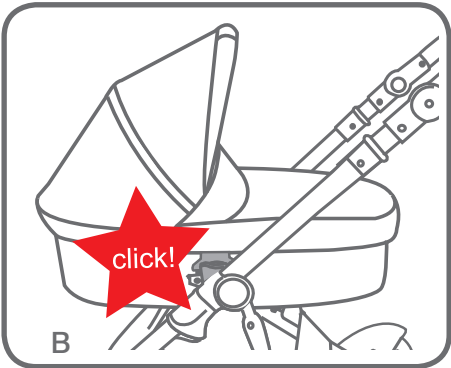


B Push the bassinet down until it is locked into the stroller frame sockets.
Please ensure it is locked.

REMOVING THE BASSINET FROM THE STROLLER FRAME

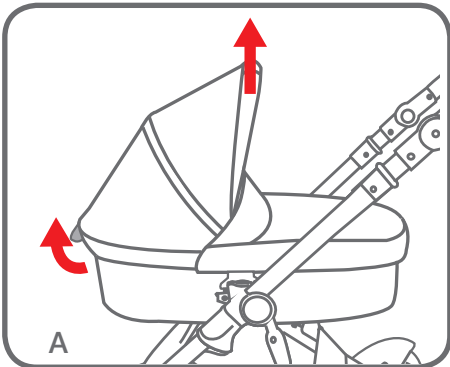

A Firmly lift and hold the bassinet locking lever up to release the bassinet from the stroller frame socket and same time lift the bassinet up with handle.

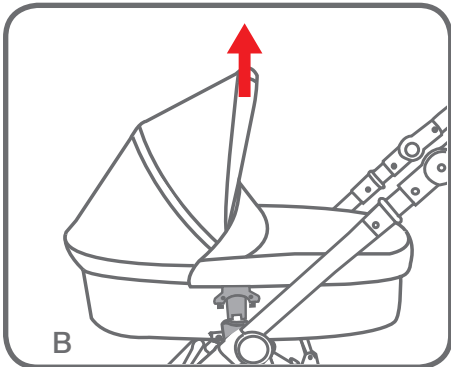

B Lift the bassinet completely out of the stroller frame.

Second Seat

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE Second Seat ON THE STROLLER ONLY. FOR PROPER USE OF THE Second Seat, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE Second Seat.

WARNINGS:


- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS Second Seat IS NOT TO EXCEED 17KG.**

IMPORTANT NOTES:



- **DO NOT USE THIS Second Seat WITH ANY OTHER MODELS OF STROLLER.**
- **THE Second Seat MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STROLLER FRAME.**
- **THE Second Seat CAN ONLY BE USED IN THE FORWARD FACING POSITION, CONNECTED TO THE REAR OF THE STROLLER.**
- **DO NOT OVERLOAD THE STROLLER. OVERLOADING WILL CAUSE THE STROLLER TO TIP BACKWARDS.**

Second Seat

ATTACHING THE Second Seat TO THE STROLLER FRAME

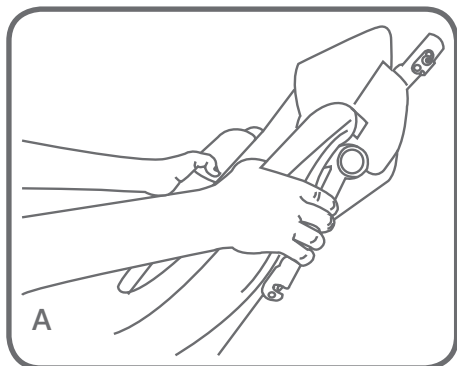


A For attaching the Second Seat to the stroller frame Fold the support bars to the back of the seat and hold with hands.

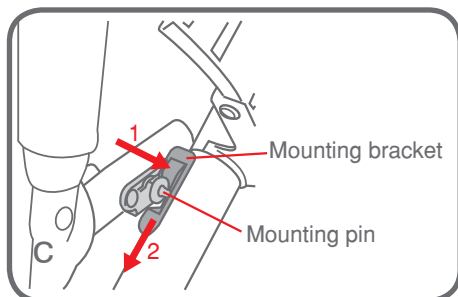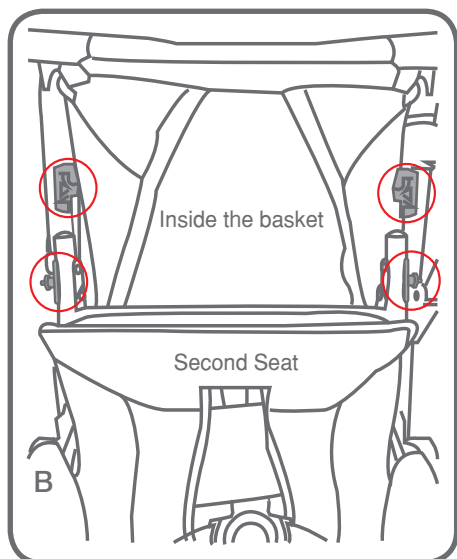


A Line up the Second Seat mounting pins with the mounting brackets on the stroller frame. Line up the support bars on the Second Seat with the lower mounting brackets on the inside of the stroller frame (located on rear wheel housing).

B Slide the mounting pins into the mounting brackets (as indicated by arrow 1) on the stroller frame then pull downwards (as indicated by arrow 2).

Second Seat

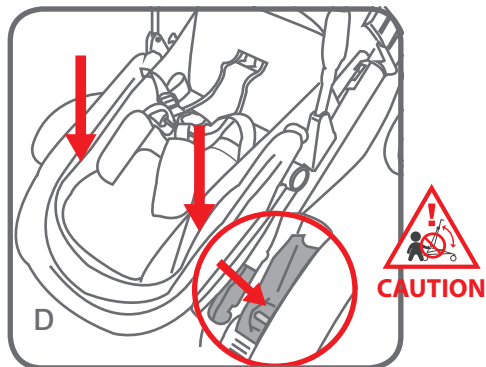

D Lower the Second Seat and press down until the support bars are locked into the lower mounting brackets on the inside of the stroller frame (located on rear wheel housing).

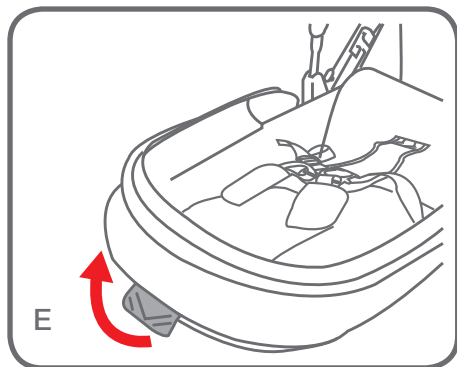


E Lift the recline lever of the Second Seat so the foot end slides completely down and engages into the stroller frame. Pull the Second Seat upwards to ensure it is locked onto the stroller frame.

REMOVING THE Second Seat FROM THE STROLLER FRAME


IMPORTANT NOTES:

ALWAYS REMOVE YOUR CHILD FROM THE Second Seat BEFORE FOLDING OR REMOVING THE Second Seat.

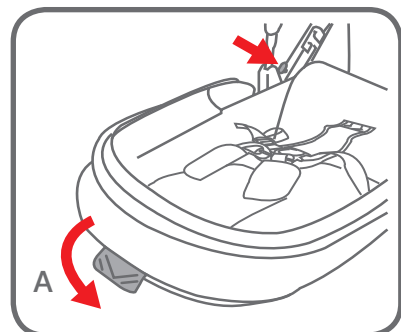


A fold the canopy back, then fully lift the recline lever and lower the Second Seat to the lowest position. While still holding the recline lever, press the Second Seat safety release button and continue to lower the seat.


Second Seat

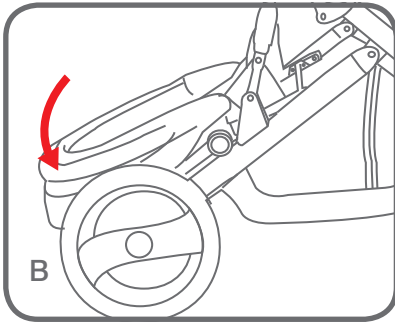


B The Second Seat must be in the fully folded position before removing from the stroller frame.

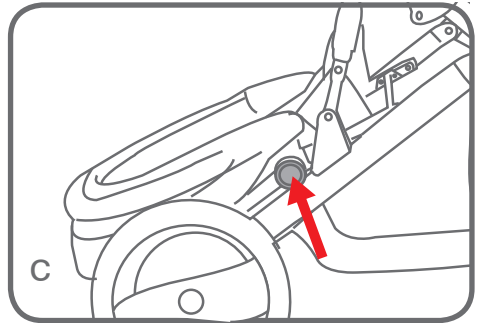

C Grasp the sides of the Second Seat frame and press the Second Seat release buttons in on both sides of the Second Seat.

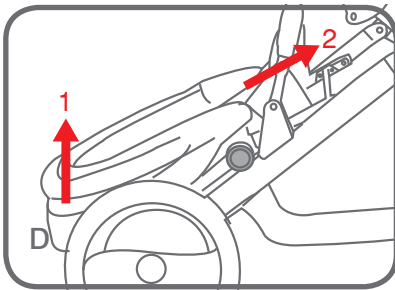

D While holding the button, lift the seat up and forward to release the seat.

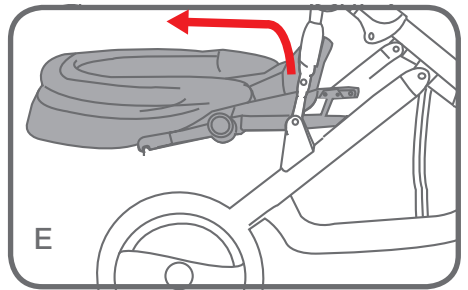

E Lift the Second Seat up and away from the stroller frame.

BABY CAPSULE

WARNINGS:

- IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER
- DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.
- THE MAXIMUM WEIGHT OF THE CHILD USING THE STEELCRAFT BABY CAPSULE IS NOT TO EXCEED 9KGS.

IMPORTANT NOTES:


- THE STEELCRAFT BABY CAPSULE, BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE ARE THE ONLY COMPATIBLE BABY CAPSULES DESIGNED TO FIT THE STRIDER COMPACT DELUXE EDITION STROLLER, THE UNITY BABY CAPSULE TO BE USED WITH CLICK N GO RECEIVERS (SOLD SEPARATELY).
- THE BABY CAPSULE MUST BE CORRECTLY FITTED AND LOCKED ONTO THE STRIDER COMPACT DELUXE EDITION STROLLER FRAME.
- THE BABY CAPSULE MUST ONLY BE USED ON THE STROLLER FRAME IN THE REARWARD FACING POSITION (BABY FACING PARENT), FITTED FACING TOWARD THE STROLLER HANDLE.
- THE STEELCRAFT BABY CAPSULE MUST ONLY BE USED ON THE SECOND SEAT FRAME IN THE FORWARD FACING POSITION, FITTED FACING TOWARD THE FRONT OF THE STROLLER.
- SECURE THE CHILD USING THE BABY CAPSULE HARNESS AT ALL TIMES.
- DO NOT LEAVE THE CHILD IN THE BABY CAPSULE FOR EXTENDED PERIODS.
- THE BABY CAPSULE IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE BABY CAPSULE MUST BE REMOVED FROM THE STROLLER FRAME OR THE SECOND SEAT FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

BABY CAPSULE


ATTACHING THE STEELCRAFT BABY CAPSULE

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE BABY CAPSULE.


ENSURE THE BABY IS SECURED IN THE BABY CAPSULE WITH THE HARNESS AT ALL TIMES. REFER TO THE BABY CAPSULE INSTRUCTION MANUAL REGARDING PLACING AND SECURING YOUR BABY IN THE BABY CAPSULE.

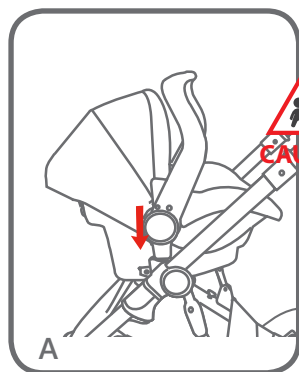

A The Baby Capsule must face the stroller handle. With the Baby Capsule handle in the upright position, align the Baby Capsule directly over the frame sockets. Push down the Baby Capsule until connectors have locked into frame sockets.

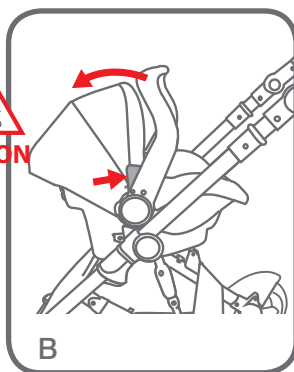


B Squeeze in and hold the latch on either side of Baby Capsule handle, rotate the handle backward. The GREEN indicator will now turn to RED.

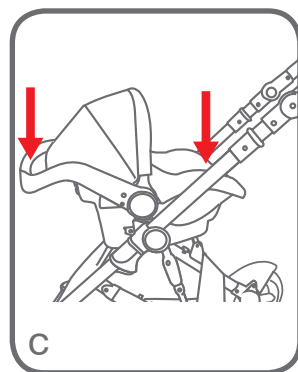


C Push the Baby Capsule handle all the way down until you hear it lock into the frame sockets, the handle indicator should now be GREEN and the Baby Capsule should be locked into the frame. If the handle indicator is RED, the Baby Capsule handle is not in locked position, repeat steps. Please ensure it is locked.

BABY CAPSULE OPERATION


REMOVING THE STEELCRAFT BABY CAPSULE

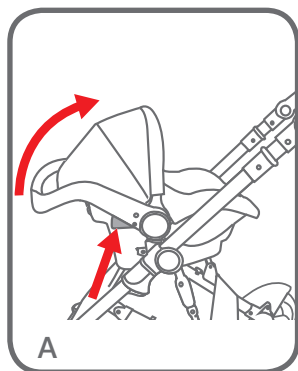

D Squeeze both handle latches in to release the locks. The indicator will now be **RED**.

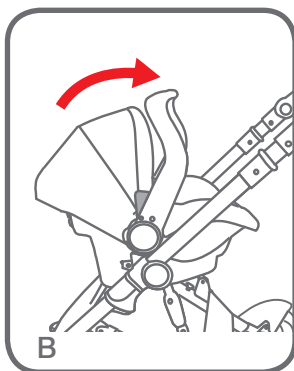

E Rotate the handle upward until it returns to the upright position. Release the latches, the handle indicator should now be **GREEN**.

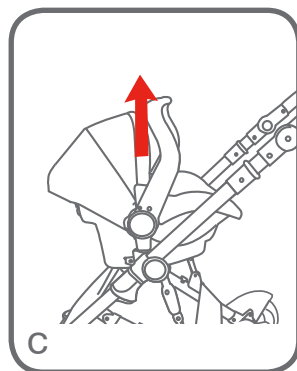

F Lift and remove the Baby Capsule away from the stroller.


BABY CAPSULE OPERATION

ATTACHING THE BRITAX UNITY BABY CAPSULE


WARNINGS:

THE STRIDER CLICK N GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE ATTEMPTING TO INSTALL THE BRITAX SAFE N SOUND UNITY CLICK & GO BABY CAPSULE OR THE BRITAX SAFE N SOUND UNITY BABY CAPSULE.


INSTALLING AND REMOVING THE CLICK N GO RECEIVERS

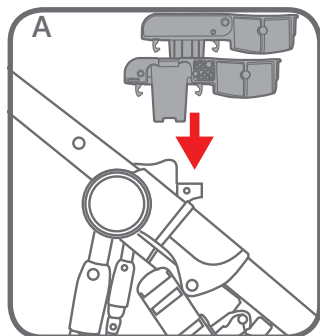

A Align the Click N Go receivers into the stroller frame sockets.

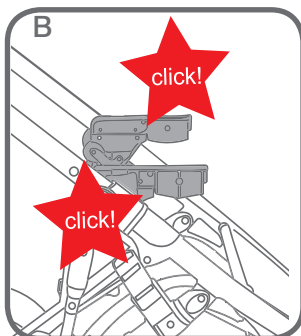

B Press firmly down on the Click N Go receivers until you hear a 'click' which indicates the receivers have locked into the stroller frame sockets. Pull up on the Click N Go receivers to ensure they are locked into the frame sockets. The receivers are marked with right (R) and left (L) inside and it will fit one orientation only.

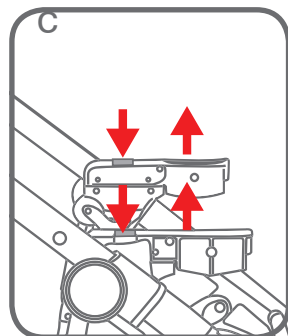


C To remove the Click N Go receivers, press in and hold the button on the top of the receiver and pull up the receivers out of the frame sockets.

BABY CAPSULE OPERATION


ATTACHING THE BRITAX UNITY BABY CAPSULE

PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTIONS MANUAL PROVIDED WITH THE BABY CAPSULE.


ENSURE THE BABY IS SECURED IN THE BABY CAPSULE WITH THE HARNESS AT ALL TIMES. REFER TO THE BABY CAPSULE INSTRUCTION MANUAL REGARDING PLACING AND SECURING YOUR BABY IN THE BABY CAPSULE.

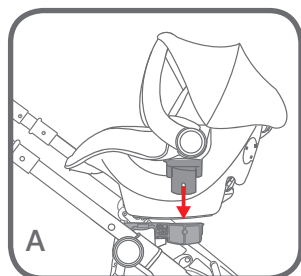

A Align the Unity Baby capsule with the Click N Go receivers. The Baby Capsule must be facing handle.

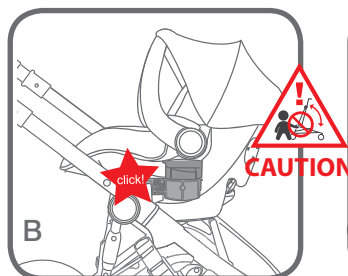

B Press firmly down on the Click N Go receivers until you hear a 'click' which indicates the Baby Capsule have locked into position. Pull up the Baby Capsule to ensure they are locked into the stroller frame.

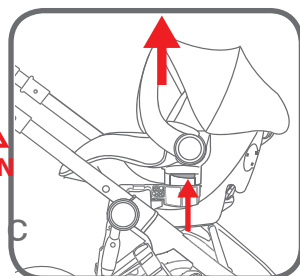

C Before remove the Baby Capsule, lock the stroller brake first. Squeeze both release levers on the Click N Go connectors at the same time and support the weight of the baby capsule. Lift and remove the baby capsule from the stroller frame.

CARE & MAINTENANCE

- To prolong the life of your stroller keep it clean and do not leave it in the direct sunlight for extended periods of time.
- Removable fabric covers and trims may be cleaned using warm water with household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
- Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
- In some climates the covers and trims may be affected by mould and mildew, to help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
- When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly. Sand and Salt will cause premature wear and corrosion.
- If there are compression marks on the tyres - Use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

SteelcraftTM

BRITAX CHILDCARE PTY. LTD.

A.B.N. 55 006 773 600

Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia

Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE

1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, color or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS 2088:2013 "Prams and Strollers - Safety Requirements"

©2018 Copyright Britax Childcare Pty. Ltd. Australia