


Steelcraft™

SAVVI

CONVERTIBLE SEAT STROLLER

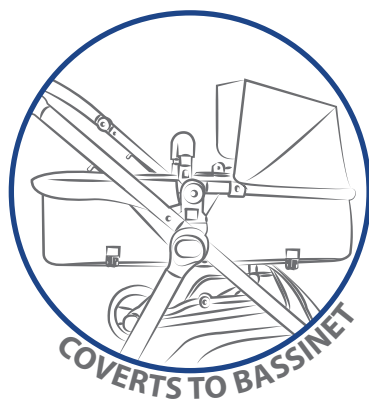

**Travel system compatible:
Suitable for use with Britax
Safe n Sound Unity baby capsule
(sold separately)**

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

www.britax.com.au

Series TK321

IMPORTANT NOTES

IMPORTANT NOTES:

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS. READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS STROLLER.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

- **USE GREAT CARE WHEN USING THE STROLLER ON STAIRS, ESCALATORS, TRAVELATORS OR OTHER MOVING SURFACES.**
- **IT IS RECOMMENDED TO REMOVE THE CHILD FROM THE STROLLER BEFORE GOING UP OR DOWN STAIRS OR ESCALATORS.**
- **DO NOT ALLOW CHILDREN TO STAND ON THE SEAT.**
- **DO NOT HANG BAGS OR GOODS FROM THE HANDLE AS THIS COULD CAUSE THE STROLLER TO TIP OVER.**
- **DO NOT LEAVE THE STROLLER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.**
- **DO NOT PLACE MORE THAN 12 KG IN THE BASKET, OR 1KG IN THE CANOPY POCKET (IF SUPPLIED).**

WARNINGS

WARNINGS: TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE PRAM/STROLLER IS STATIONARY.

- **DO NOT LEAVE CHILDREN UNATTENDED.**
- **SECURE THE CHILD IN THE HARNESS AT ALL TIMES.**
- **DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS PRAM/STROLLER.**
- **MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE PRAM/STROLLER.**
- **DO NOT USE ANY ACCESSORIES OTHER THAN THOSE APPROVED FOR USE WITH THIS STROLLER BY BRITAX.**
- **IT IS UNSAFE TO USE ACCESSORIES NOT APPROVED FOR USE WITH THIS STROLLER.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IN THE BASSINET MODE IS NOT TO EXCEED 9KG. THE MAXIMUM WEIGHT OF THE CHILD USING THIS STROLLER IN THE SEAT MODE IS NOT TO EXCEED 20KG.**



This CAUTION Symbol is shown at certain steps in this Instruction Manual to highlight the danger of being injured by moving parts.

CAUTION

MANUAL HANDLING TECHNIQUES

The SMART lifting technique

This technique can be used to pick up small light loads from low levels.

Size up the Load

- Assess the load (size, shape and weight).
- Assess whether the load needs to be moved;
- Where is it going to be placed" Check that there are no obstructions;
- Assess whether mechanical or human assistance is required.

Move the Load as close to the body as possible

- A load is heavier to lift or carry if it is not close to the body.
- The whole hand should be used to ensure a firm grip.

Always bend your knees

- Maintain balance.
- Keep feet apart and in a comfortable position.
- Minimise lower back bending.
- Bend knees preferable at as large an angle as possible but not at a right angle - use a semi squat in preference to a full squat.

Raise the load with your legs


- Achieve the lift smoothly and without jerkiness.
- Maintain the normal curvature of the spine to allow the force of the load to be distributed evenly from the spine to the pelvis.

Turn your feet in the direction that you want to move the load.


- Avoid unnecessary bending, twisting and reaching.
- Change direction by turning your feet and not your back.
- To set the load down, squat down, keep your head up and let your legs do the work.

Remember to 'THINK TALL' chest lifted, shoulders relaxed, chin tucked in and head level.


PARTS LIST

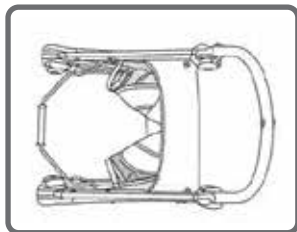


A 1 x Frame

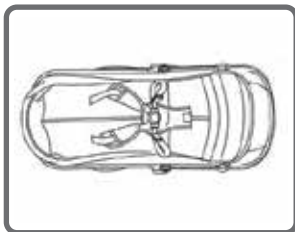


B 1 x Convertible
bassinet/seat unit

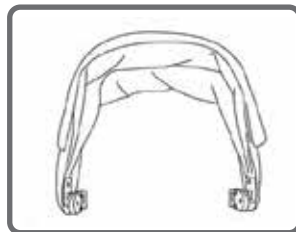


C 1 x Canopy

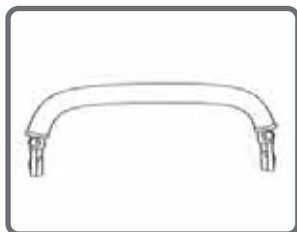


D 1 x Arm Bar

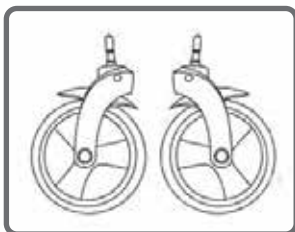

E 2 x Front Wheels

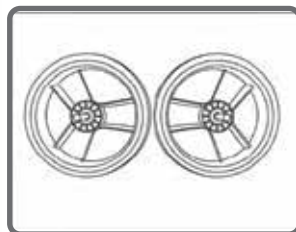


F 2 x Rear wheels

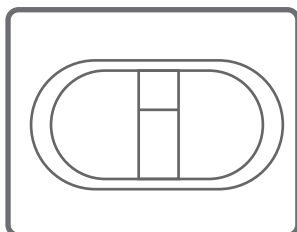


G 1 x Bassinet liner




H 1 x Boot cover

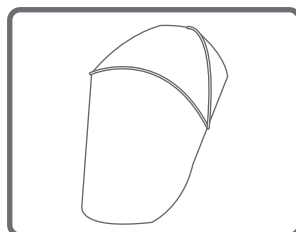

I 1 x Rain cover

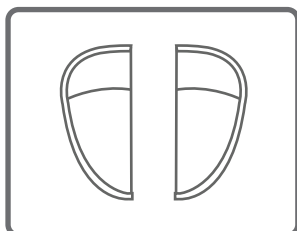

J 2 x Shoulder pads

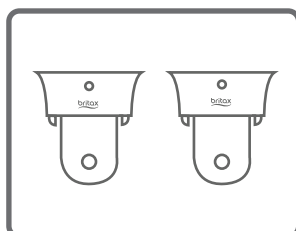

K 2 x CLICK N GO Receivers

STROLLER ASSEMBLY


OPENING THE STROLLER FRAME

IMPORTANT NOTES:


PLEASE REFER TO PAGE 4 FOR SMART LIFTING TECHNIQUES.

- RELEASE THE STORAGE LATCH WITH DUE CARE AND OPEN THE FRAME.
- WHEN OPENING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING UNFOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER WHEN UNFOLDING THE STROLLER.
- OPEN THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.

OPENING THE STROLLER FRAME

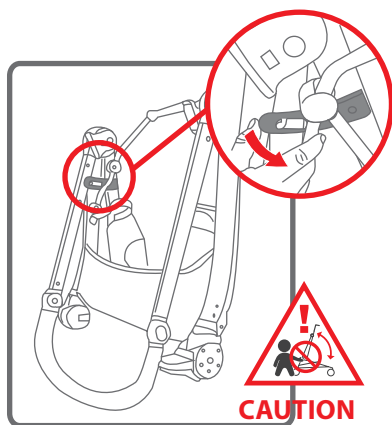


A Stand the frame on a flat surface and open the frame lock latches inside the frame. The lower part of the stroller will be open.

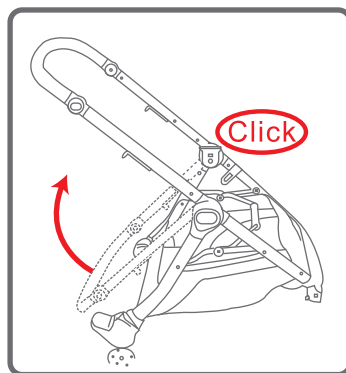


B Lift the handle upwards until the frame is fully open and locked.

STROLLER ASSEMBLY

ATTACHING THE FRONT & REAR WHEELS

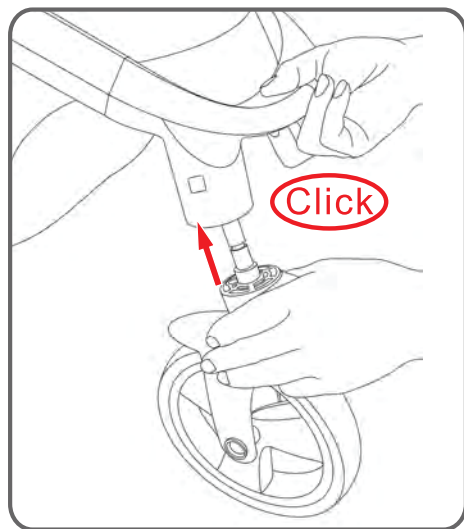

A To attach the front wheels, insert each front swivel wheel assembly into the wheel moulding and push in until you hear a 'click' which indicates the wheel is locked in. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.

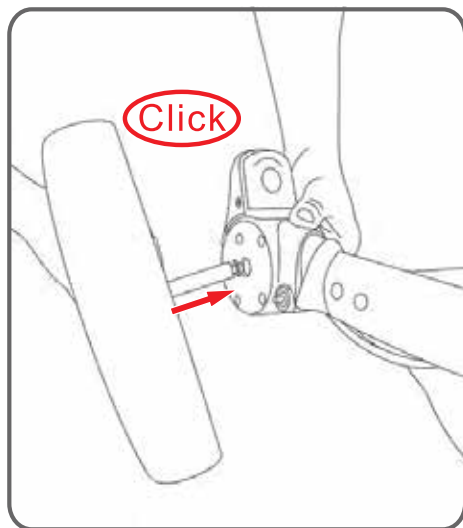

B To attach the rear wheels, insert each wheel axle into the moulding and push in until you hear a 'click' which indicates the wheel is locked in. Pull on each wheel to make sure it is securely attached. Repeat the process if not locked in.


STROLLER ASSEMBLY

ATTACHING THE SEAT TO THE STROLLER FRAME


IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE INSTALLING THE STROLLER SEAT TO THE FRAME.

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.

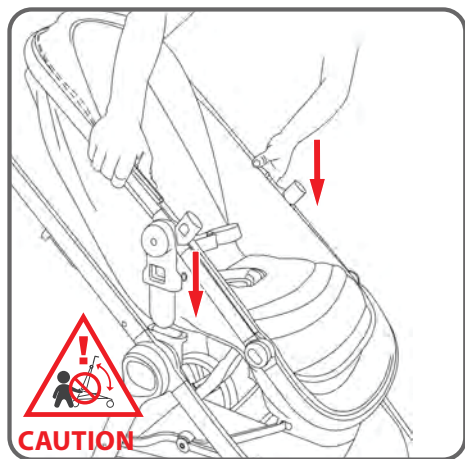

- A** Hold the stroller seat over the frame. Align the stroller seat connectors over the connection sockets on the frame. Push down on the seat until both stroller seat connectors have locked into the frame sockets.

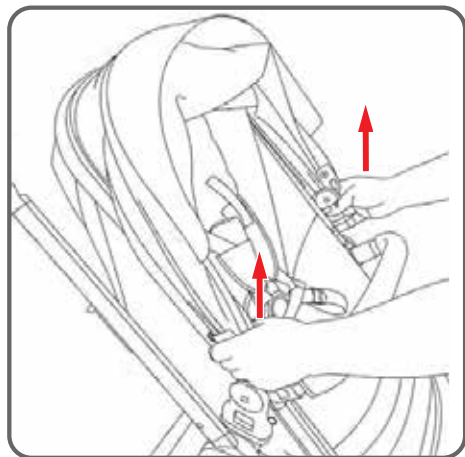


- B** Pull up on both sides of the seat to ensure that it is locked into place correctly.

STROLLER ASSEMBLY


ATTACHING THE ARM BAR

! **WARNING:** WHEN A CHILD IS IN THE STROLLER IT IS RECOMMENDED THAT THE ARM BAR IS ATTACHED TO THE STROLLER AT ALL TIMES.

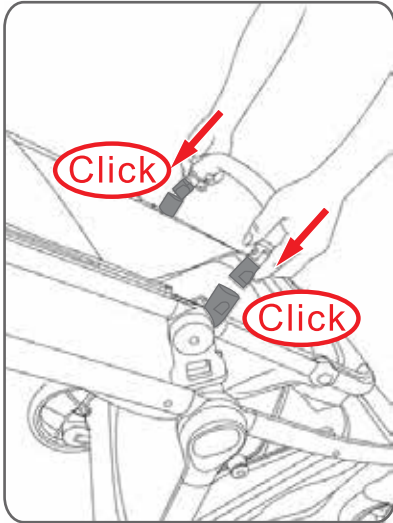

A Insert the arm bar mouldings into the sockets on each side of the stroller frame and push down on the arm bar until a 'click' is heard which indicates the arm bar has locked into the sockets. To assist with putting a child in the stroller, you can release the arm bar on one side. Press the button on the side of the arm bar moulding and pull the arm bar up and out of the socket.

Rotate the arm bar clear of the stroller. Reattach the arm bar after fastening the child in the harness.

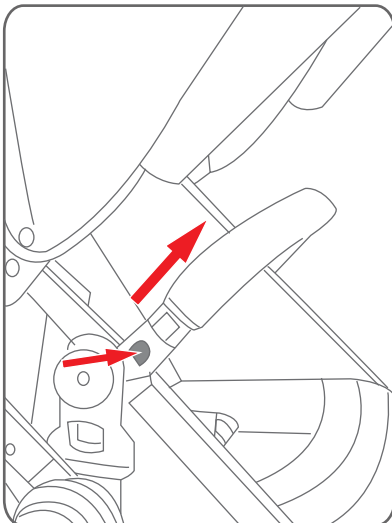

B To remove the arm bar, press the button on each side of the arm bar moulding and pull arm bar up and out of the sockets.

STROLLER ASSEMBLY


ATTACHING THE CANOPY

IMPORTANT NOTE:


The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.




A Place the canopy on the stroller frame and push the clips on the sides of the canopy onto the stroller frame until they snap into place.

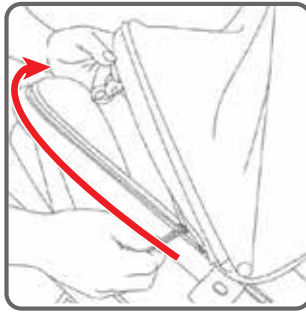

B Attach the canopy to the seat unit with the zipper.

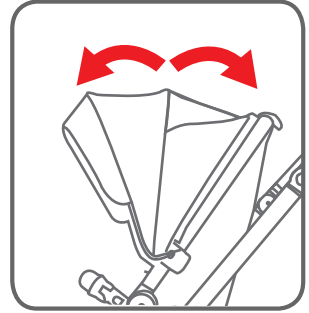


C To adjust the canopy, open by pulling forward, or close by pushing the canopy backward.

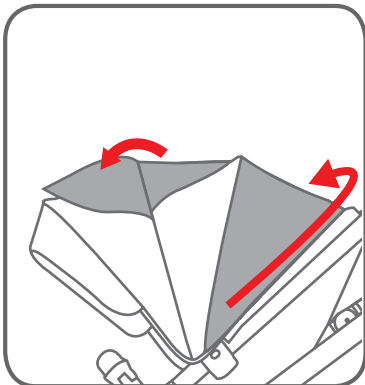


D There is peek a boo window with magnetic closer and zipped open mesh panel for better ventilation.


STROLLER OPERATION

USING THE BRAKES

 **WARNING:** ALWAYS APPLY THE BRAKES WHEN THE STROLLER IS STATIONARY.

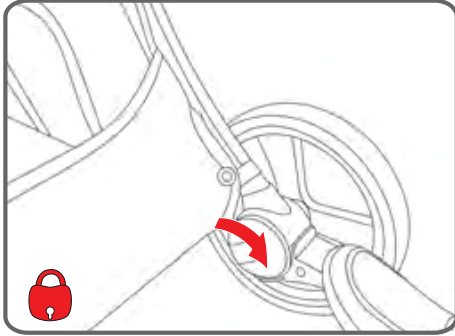

A The red brake lever is located at the rear wheel, push the brake lever down to engage the brake. Make sure the wheels are locked.

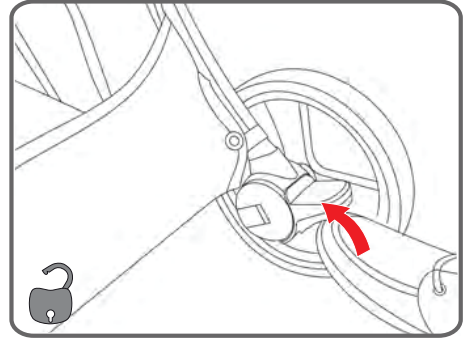


B To unlock the rear wheels, lift the red brake lever up.

USING THE SWIVEL WHEELS


PLEASE NOTE: Always lock the swivel wheels when using the stroller on rough surfaces as this will minimise wheel wobble.

The swivel wheels should only be locked when the wheels are in the trailing position (wheels under frame).

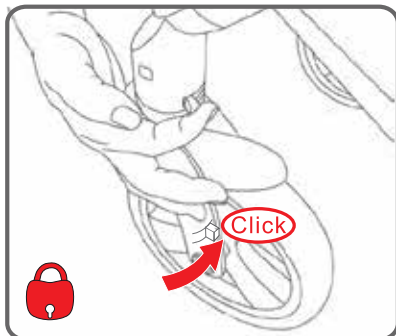

A To lock the front wheels into the fixed position, slide the swivel wheel locking clip towards the inside of the frame until you hear a 'click'.

STROLLER OPERATION

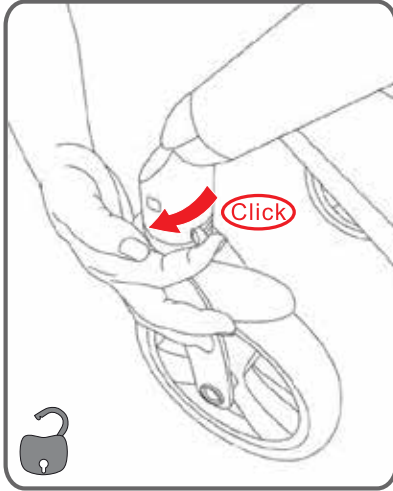


- B** To allow the wheels to swivel, slide the black swivel wheel locking clip towards the outside of the frame until you hear a 'click'.

INSTALLING THE RAIN COVER

IMPORTANT NOTE:

**ENSURE THE RAIN COVER IS KEPT AWAY FROM THE CHILD'S FACE.
REFIT THE RAIN COVER IF REQUIRED TO ENSURE YOUR CHILD IS SAFE.**

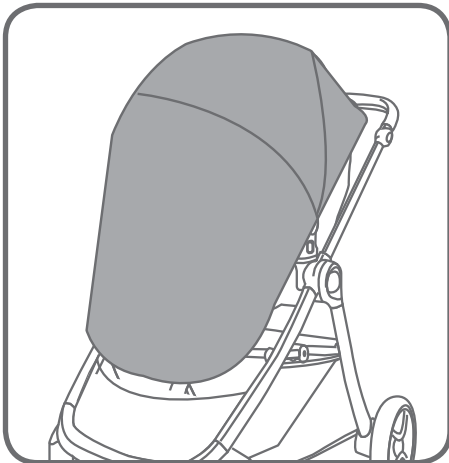

- A** Fit the rain cover over the canopy and hook the front elastic section of rain cover over the leg rest.


STROLLER OPERATION

ADJUSTING THE BACKREST RECLINE POSITION

WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- THE LOWEST RECLINE POSITION SHOULD BE USED TO TRANSPORT BABIES. THE BACKREST CAN BE ADJUSTED TO A MORE UPRIGHT POSITION AS THE CHILD GROWS OLDER AND IS ABLE TO SUPPORT ITS HEAD WITHOUT ASSISTANCE.

PLEASE NOTE: If the child is sitting in the seat, support the backrest as it reclines. If you have difficulty reclining the backrest you may need to remove the child from the seat to allow you to raise or lower the backrest with ease.

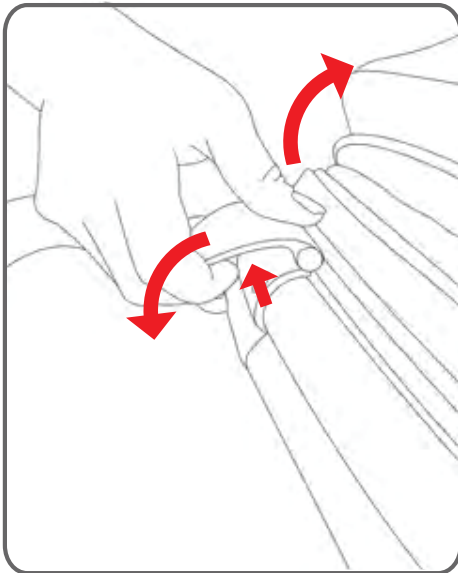


- A** Lift the recline lever on the back of the seat and hold while raising or lowering the backrest to the desired recline position.

STROLLER OPERATION

ADJUSTING THE LEG REST


IMPORTANT NOTES:

- THE LEG REST FEATURE IS PROVIDED FOR YOUR CHILD'S COMFORT.
- THE LEG REST IS NOT DESIGNED TO SUPPORT EXTRA WEIGHT.
- DO NOT ALLOW CHILDREN TO STAND OR SIT ON THE LEG REST. IT WILL BREAK IF EXTRA WEIGHT IS APPLIED.

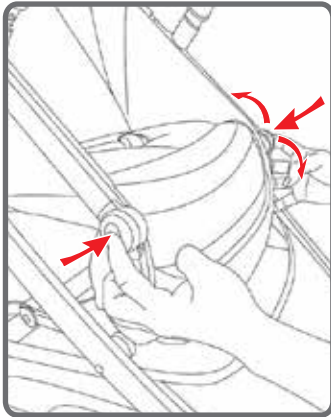

A To adjust the leg rest, press the release buttons in on both sides of the leg rest and raise or lower to your desired position.

ADJUSTING THE PIVOTAL HANDLE

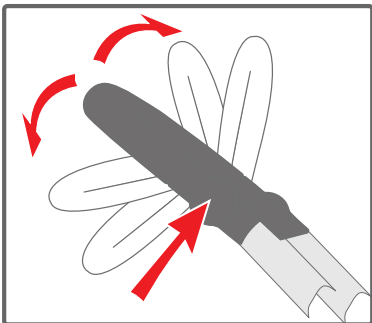


A To adjust the handle height, squeeze in and hold the buttons on the outside of the handle. Rotate the handle up or down to the desired position then release the buttons.

STROLLER OPERATION

USING THE HARNESS

 **WARNING:** USE THE HARNESS AT ALL TIMES.


- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED HARNESS.
- THE ADJUSTED HARNESS SHOULD CLOSELY FIT THE CHILD.
- NEVER LEAVE THE HARNESS BUCKLED WHEN NOT FITTED TO A CHILD IN THE STROLLER, BECAUSE THE HARNESS CAN FORM LOOPS WHICH MAY POSE A STRANGULATION HAZARD.
- WHEN HARNESS IS NOT IN USE, DISCONNECT SHOULDER STRAPS FROM THE WAIST STRAPS AND BUCKLE TO PREVENT STRANGULATION.
- A five point harness is provided to restrain your child.
- Buckle tongues separate for added safety.
- To reconnect buckle tongues and to secure the child in the harness please follow the steps below carefully.

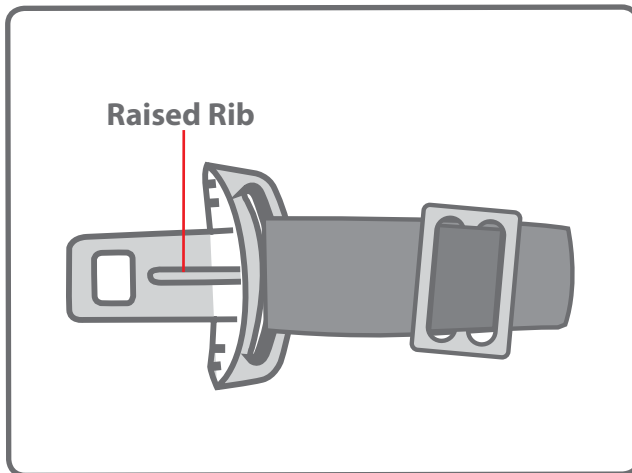

PLEASE NOTE: Each waist buckle tongue has a raised rib on one side and can only be locked into the buckle assembly with the raised rib facing up.


STROLLER OPERATION

USING THE HARNESS

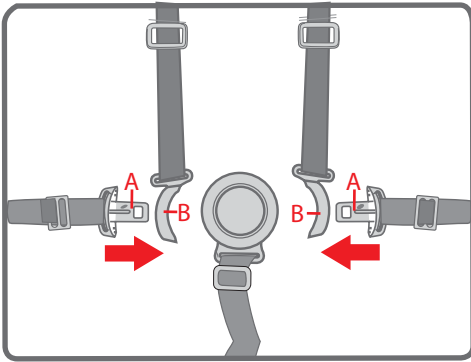


- A** Always apply the brakes. Place child in seat. Slip one shoulder strap over each shoulder. Position crotch strap between legs. Push the buckle tongues (A) on waist straps through the tongue guides (B) on shoulder straps.

PLEASE NOTE: Ensure the straps are not twisted as they may become uncomfortable for the child.

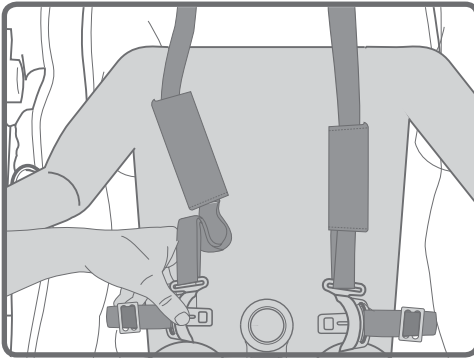

- B** Hold the buckle tongue (A) on the waist strap & tongue guides (B) on shoulder straps together.

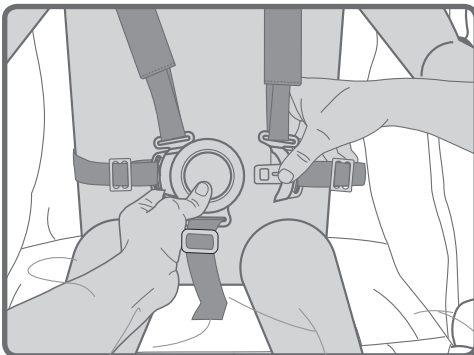


- C** Press in and hold the centre crotch buckle button and insert the waist buckle tongues into the crotch buckle assembly.

IMPORTANT: Pull on each waist buckle tongue to make sure they are locked into the crotch buckle assembly. If not, repeat above procedure.

STROLLER OPERATION


USING THE HARNESS

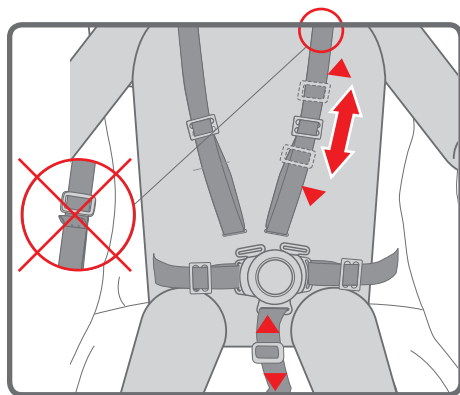


- D** Tighten or loosen the shoulder straps and crotch strap by sliding the 3 bar harness adjuster up or down. The crotch strap should be adjusted to a snug fit.



CAUTION: DO NOT SLIDE 3 BAR SLIDER OVER THE SEWN TAB ON SHOULDER HARNESS.

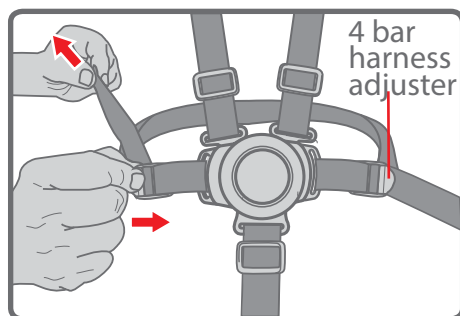


- E** Tighten or loosen the waist straps, hold and lift the 4 bar harness adjuster and pull the harness strap to adjust to the desired fit. The waist strap needs to fit firmly around the child.

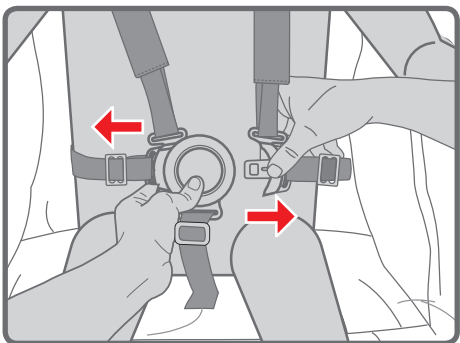

- F** Release the harness by depressing the button in the centre of the buckle while pulling the two waist tongues away from the buckle assembly.

STROLLER OPERATION

USING THE HARNESS

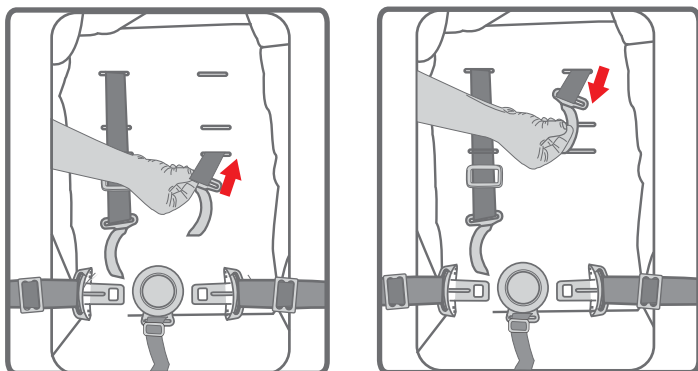


G The stroller seat has 3 sets of harness slots at different heights to accommodate the child. The shoulder straps must be positioned near the child's shoulders. To change the shoulder harness height, push the shoulder harness tongue out of the current harness slot and through the back of the seat and then pull the shoulder harness buckle tongue through the desired slot.

REMOVING THE STROLLER SEAT FROM THE FRAME

IMPORTANT NOTE:

ALWAYS REMOVE YOUR CHILD FROM THE STROLLER SEAT BEFORE REMOVING THE SEAT FROM THE STROLLER FRAME.

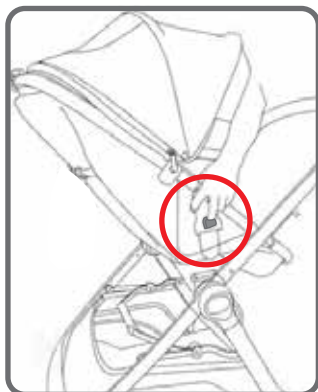

A Lift both release levers on the seat connectors at the same time and lift the seat up and away from the stroller frame.

STROLLER OPERATION

CHANGING THE SEAT TO THE REARWARD FACING POSITION

PLEASE NOTE: The seat is reversible so it can be attached to the frame in the forward facing position or the rearward facing position.





A To attach the stroller seat to the frame in the rearward facing position, hold the stroller seat over the frame. Align the stroller seat connectors over the connection sockets on the frame. Push down on the seat until both stroller seat connectors have locked into frame sockets. Pull up on both sides of the seat to ensure that it is locked into place correctly.

CONVERTING STROLLER MODE


IMPORTANT NOTE:

- REMOVE YOUR CHILD FROM THE BASSINET BEFORE CONVERTING THE STROLLER MODE.
- THIS BASSINET IS ONLY USED ON THE FRAME AND CAN'T BE USED AS STAND ALONE BASSINET.

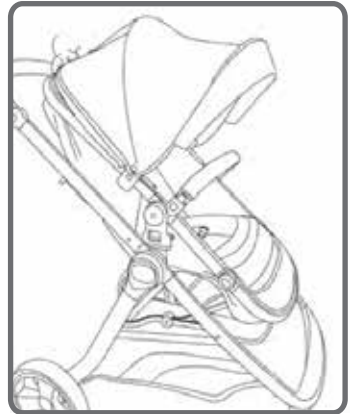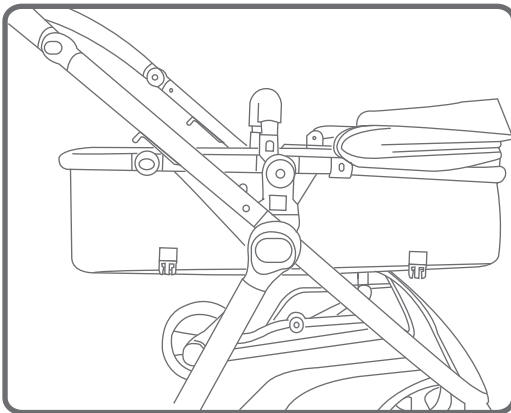


STROLLER OPERATION


CONVERTING THE BASSINET INTO THE STROLLER SEAT

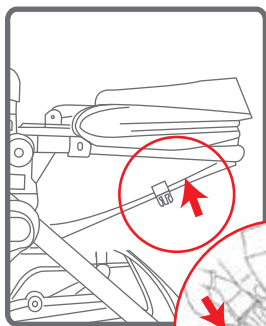

A Push the base of the bassinet at the canopy end upwards into a higher position to form the stroller seat backrest.

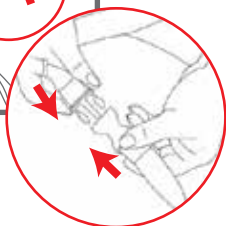


B Secure the backrest into position with the harness and buckle under the backrest.

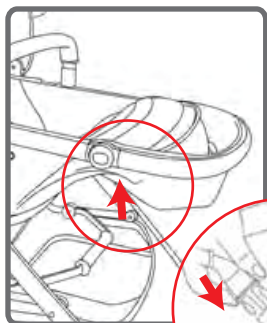

C Push the base of the bassinet at the foot end upwards into a higher position to form the stroller leg rest.



D Secure the leg rest into position with the harness and buckle under the leg rest.

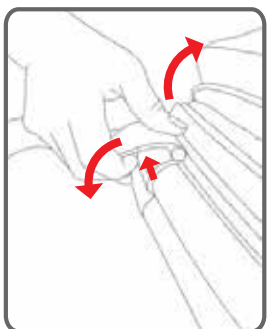

E Using the recline lever to adjust the backrest to desired position.

STROLLER OPERATION


CONVERTING STROLLER SEAT TO THE BASSINET

WARNINGS:

- **DO NOT USE THIS BASSINET ONCE THE CHILD CAN SIT UP UNAIDED.**
- **THE MAXIMUM WEIGHT OF THE CHILD USING THIS BASSINET IS NOT TO EXCEED 9KG FOR THE BASSINET.**




A Put the stroller seat into reverse facing position.

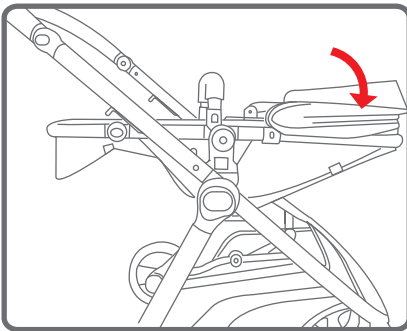



B Put the backrest to lowest position.

STROLLER OPERATION


CONVERTING STROLLER SEAT TO THE BASSINET

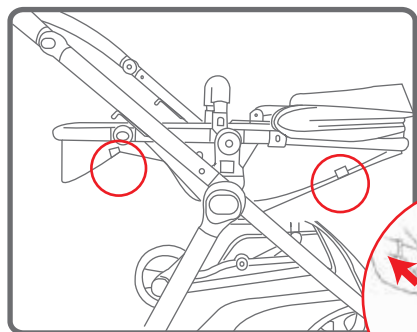

C Unclip the buckle under the backrest and leg rest. Push down the backrest and leg rest to make bassinet base.

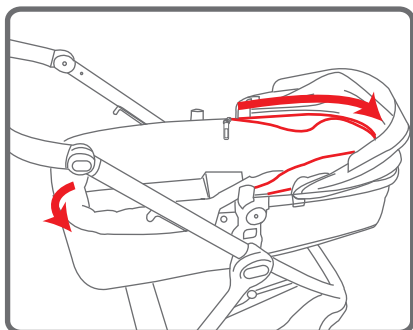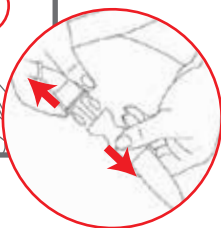

D Place bassinet liner over the bassinet and zip the top half of the liner to attach to seat. Pull the bottom half of the bassinet liner over the frame.

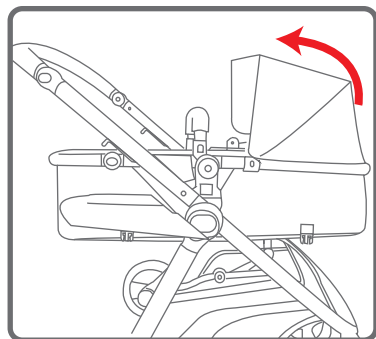

E Pull the canopy up for protection. For attaching and using of the canopy, please refer to page 10.


STROLLER OPERATION

USING THE TETHER STRAP

! WARNINGS: USE THE TETHER STRAP TO STOP THE PRAM/STROLLER ROLLING AWAY.

- THE STROLLER IS DESIGNED FOR USE ON FLAT OR GENTLY SLOPING SURFACES, AND MAY BE UNSTABLE ON HIGHER SLOPING AND UNEVEN SURFACES AND USERS SHOULD BE AWARE OF THE POSSIBILITY OF THE STROLLER ROLLING AWAY OR TIPPING OVER.
- NEVER LET GO OF THE STROLLER WHEN PARKED ON AN INCLINE OR SLOPING SURFACE BECAUSE IT MAY SLIDE OR TIP OVER. ALWAYS PARK ON A FLAT SURFACE AND APPLY THE BRAKES.
- ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

A A wrist tether strap is provided on the handle grip. Slide your hand through the tether strap loop whenever you use the stroller. Only remove your hand from the tether strap loop when the brakes have been applied to the stroller wheels.

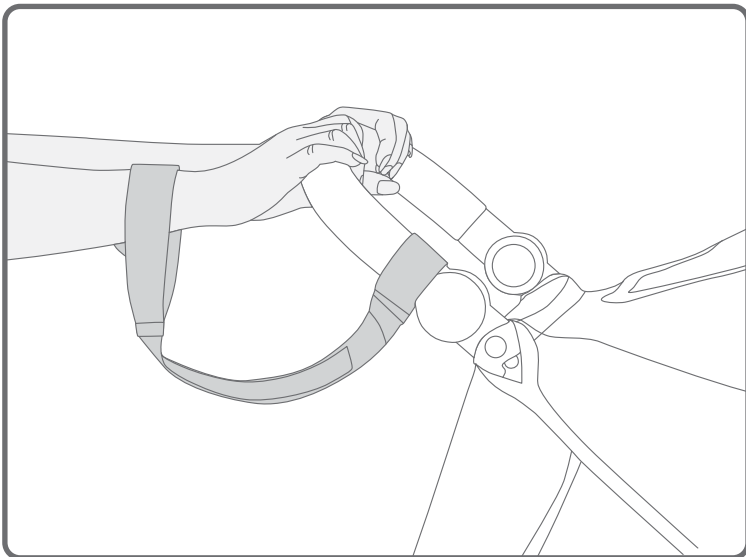

STROLLER OPERATION

USING THE STROLLER

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- Always ensure you bend your knees where appropriate and take due care when lifting the frame.
- With your hand through the wrist tether strap loop, push the stroller holding the handle.
- The stroller can be steered in the desired direction - allowing the front wheels to swivel will make this easier.
- The front wheels may wobble or oscillate when walking fast. Locking the front swivel wheels will stop this.
- The stroller can be taken up kerbs by either pressing down on the handles and raising the front wheels or turning the stroller around and pulling the stroller up the kerb.
- Caution is required when pushing the stroller on a steep slope as the stroller may become unstable. Always hold the handle firmly.
- Do not run with the stroller.
- Whenever you stop, always apply the brakes before you leave the stroller.
- Do not hang bags or goods from the handle. Use the storage basket.

STROLLER OPERATION

FOLDING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

- REMOVE THE CHILD FROM THE STROLLER BEFORE COMMENCING ANY FOLDING OPERATION.
- FOLD THE STROLLER SLOWLY AND BE CAREFUL WHERE YOU PLACE YOUR HANDS.
- WHEN FOLDING THE STROLLER, BE AWARE OF THE DANGER OF BEING INJURED BY MOVING PARTS AND LOCKING DEVICES DURING THE PROCESS. KEEP ALL HANDS AND LIMBS CLEAR OF THESE PARTS.
- THERE IS POTENTIAL FOR FINGERS OR PARTS OF THE BODY TO BE INJURED WHEN THE STROLLER IS BEING FOLDED, DUE CARE SHOULD BE EXERCISED.
- KEEP CHILDREN CLEAR OF THE STROLLER DURING FOLDING THE STROLLER.

PLEASE NOTE: It is recommended to remove the stroller seat from the frame before folding for easier handling & more compact fold.

If folding the stroller with seat attached,




IMPORTANT NOTES:

MAKE SURE THE STROLLER SEAT IS IN UPRIGHT POSITION BEFORE FOLDING.

Close the canopy and follow the folding steps on next page.

STROLLER OPERATION

FOLDING THE STROLLER

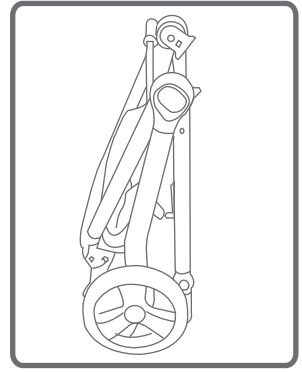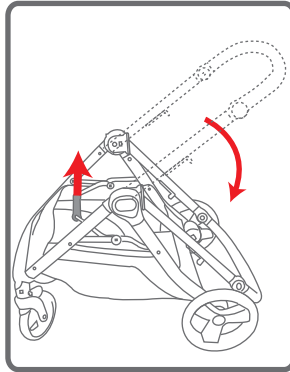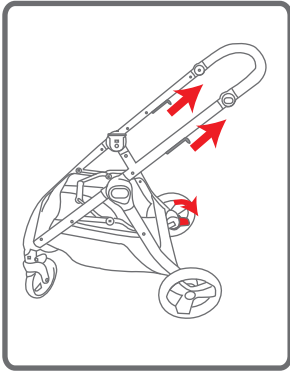

C Lock the brakes.

D Pull the latches on the handle tube upwards and drop down the handle all the way.

E Pull the handle under the stroller seat upwards until you hear a 'click' and the frame is fully folded and the frame lock latch is locked in properly.

LIFTING AND CARRYING THE STROLLER

IMPORTANT NOTES:

PLEASE REFER TO PAGE 4 FOR LIFTING TECHNIQUES.

TO AVOID DAMAGE, DO NOT PLACE HEAVY OBJECTS ON TOP OF THE FOLDED STROLLER.

- TO AVOID INJURY: BEND YOUR KNEES WHEN LIFTING.
- Ensure that the storage latch is engaged when lifting or carrying the vehicle.

BABY CAPSULES

WARNINGS:

- **THE MAXIMUM WEIGHT OF THE CHILD USING THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE IS NOT TO EXCEED 12kg.**

IMPORTANT NOTES:


- THE BRITAX SAFE N SOUND UNITY NEOS BABY CAPSULE OR BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE ARE THE ONLY COMPATIBLE BABY CAPSULES DESIGNED TO FIT THE SAVVI STROLLER TO BE USED WITH CLICK N GO RECEIVERS (Supplied).
- REMOVE THE STROLLER SEAT OR BASSINET FROM THE STROLLER FRAME BEFORE INSTALLING THE BABY CAPSULE.
- THE BABY CAPSULE MUST BE CORRECTLY INSTALLED AND LOCKED ONTO THE STROLLER.
- THE BABY CAPSULE CAN ONLY BE ATTACHED IN THE UPPER POSITION ON THE STROLLER FRAME AND MUST ALWAYS BE IN THE REARWARD-FACING POSITION (FACING TOWARDS THE HANDLE).
- SECURE THE CHILD USING THE BABY CAPSULE HARNESS AT ALL TIMES.
- DO NOT LEAVE CHILD IN THE BABY CAPSULE FOR EXTENDED PERIODS.
- THE BABY CAPSULE IS DESIGNED TO PROVIDE MOBILITY OUTSIDE OF THE CAR BUT IT SHOULD NOT BE USED INSTEAD OF AN APPROPRIATE COT.
- THE BABY CAPSULE MUST BE REMOVED FROM THE FRAME BEFORE FOLDING.
- THE SUN IS VERY STRONG. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. THE CANOPY OR HOOD ON THIS PRODUCT WILL NOT GIVE YOUR CHILD TOTAL PROTECTION FROM THE HARMFUL RAYS OF THE SUN.

BABY CAPSULES


PLEASE NOTE: THESE INSTRUCTIONS ARE FOR INSTALLING AND REMOVING THE BABY CAPSULE ON THE STROLLER ONLY. FOR INSTALLING AND PROPER USE OF THE BABY CAPSULE IN THE CAR, PLEASE FOLLOW THE INSTRUCTION BOOK PROVIDED WITH THE BABY CAPSULE.

INSTALLING AND REMOVING THE CLICK N GO RECEIVERS

! WARNING: THE SAVVI CLICK N GO RECEIVERS MUST BE ATTACHED TO THE STROLLER FRAME BEFORE ATTEMPTING TO INSTALL THE BRITAX SAFE N SOUND UNITY CLICK & GO BABY CAPSULE OR THE BRITAX SAFE N SOUND UNITY BABY CAPSULE ISOFIX COMPATIBLE.

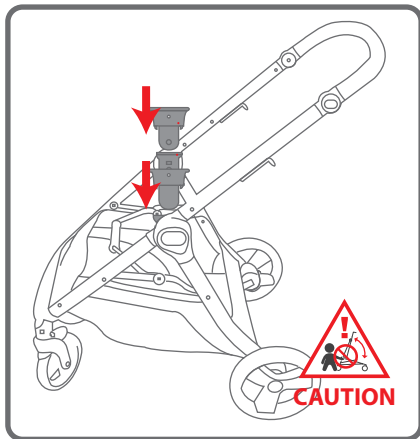


- A** Select the Click n Go receiver that has a coloured dot and align with the coloured dot on the frame socket. Note: Coloured dots are only on one side of the frame socket. Firmly press down on the Click N go receivers until you hear a 'click' and a green indicator can be seen through a window in the frame socket. Repeat on the other side with the receiver with no coloured dot. To ensure the receiver is engaged pull upwards before placing the baby capsule.

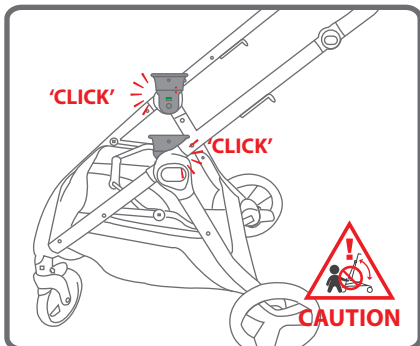

BABY CAPSULE

INSTALLING AND REMOVING THE CLICK N GO RECEIVERS

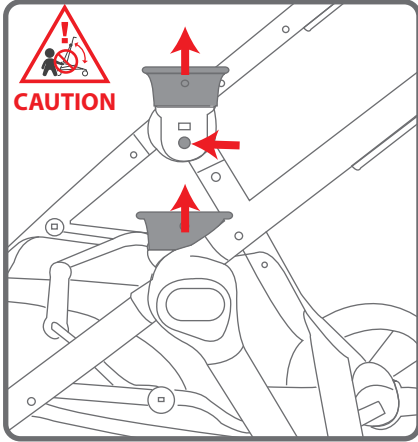


- B** To remove the Click N Go receivers, press in and hold the button on the inside of the receiver and pull up the receivers out of the frame sockets.

ATTACHING THE UNITY BABY CAPSULE TO THE FRAME

IMPORTANT NOTE:

ALWAYS REMOVE YOUR BABY CAPSULE BEFORE FOLDING.


PLEASE NOTE: Ensure the baby is secured in the baby capsule with the harness at all times. Refer to the baby capsule instructions regarding placing and securing your baby in the baby capsule.

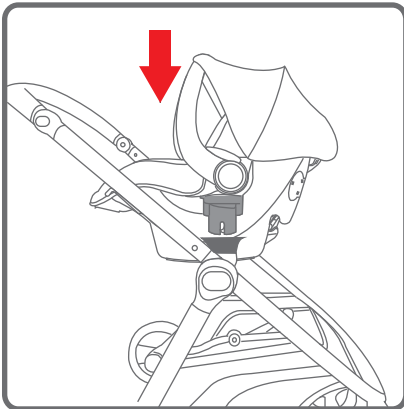

- A** Lock the stroller brake. Insert the adaptors on the baby capsule into the receivers on the stroller frame.


BABY CAPSULE

ATTACHING THE UNITY BABY CAPSULE TO THE FRAME

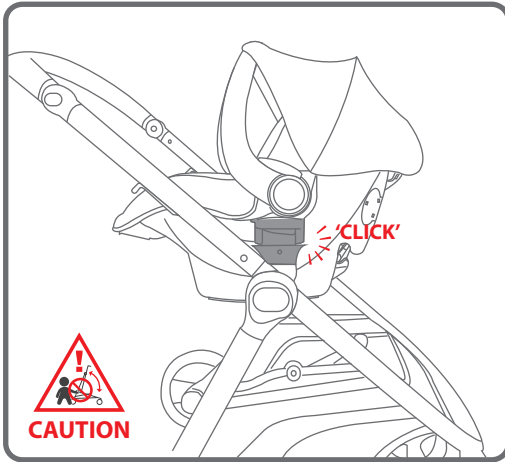

- B** Push down on the baby capsule until a 'click' is heard which indicates the adaptors on the baby capsule have locked into the receivers. Pull up on the baby capsule to ensure that it is securely locked onto the stroller frame.

REMOVING THE UNITY BABY CAPSULE FROM THE FRAME

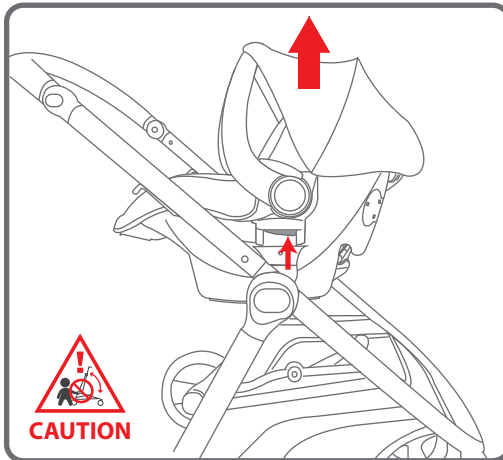

- A** Lock the stroller brake. Squeeze both release levers on the Click & Go connectors at the same time and support the weight of the baby capsule. Lift and remove the baby capsule from the stroller frame.

CARE AND MAINTENANCE

GENERAL MAINTENANCE & REPAIR

- Should any moving or locking parts become stiff or hard to operate, ensure these are free from tension or dirt by wiping clean with a damp cloth to remove any dirt, sand or debris. Allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- Ensure wheels are regularly cleaned with a damp cloth by removing dirt, sand or debris. Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- If there are compression marks on the tyres, use a domestic hair dryer to gently warm (DO NOT OVERHEAT) the tyre and the compression marks should slowly disappear.
- To maintain the safety and longevity of the stroller, seek prompt repairs or replacement for bent, torn, worn or broken parts. Do not continue to use the stroller if unsafe.
- All repairs should only be carried out by an authorised Britax/Steelcraft repairer. Only Britax/Steelcraft replacement parts should be used with the stroller. It may be unsafe to use parts supplied from another manufacturer.
- Should you have any further questions on Care & Maintenance of the stroller, please contact our Consumer Service Team at au-support@britax.com

GENERAL TIPS

- Do not store the stroller in your car for prolonged periods of time during summer as it may lead to damage to some of the plastics components.
- Do not leave the stroller in direct sunlight for extended periods of time, as colours of some fabrics may fade, and tyres may deteriorate.
- Do not fold or store the stroller if damp or wet, as fabric may develop mould or mildew. Always store the stroller inside in a dry, well-ventilated area.
- Do not place heavy objects on top of the stroller as it may alter the shape.

CARE AND MAINTENANCE

CLEANING

Fabrics

- Removable fabrics may be cleaned using lukewarm water and soap or mild detergent. Rinse thoroughly and allow to dry away from direct sunlight.
- Non-removable fabrics can be spot cleaned using a damp sponge and soap or mild detergent. Allow to dry completely before re-use or storage.
- Never use bleach, or abrasive cleaning products.
- DO NOT iron or dry clean.

NOTE: DO NOT place any of the stroller fabrics in the dryer. Allow to dry naturally, away from direct sunlight.

Frame

- Remove dirt and dust away from any moving mechanism.
- Clean frame with a soft damp cloth and soap or mild detergent and allow to dry thoroughly.
- DO NOT use abrasive cleaning products as it may cause stains, discolouration or scratches to the frame.

NOTE: DO NOT soak or submerge frame in water. DO NOT remove, dismantle or alter any part of the stroller mechanism or brakes.

Leatherette

- Spot clean with a damp soft cloth.
- DO NOT use a dripping wet cloth or wet the leatherette excessively.

Wheels

- Remove wheels from stroller.
- Clean with damp cloth and soap or mild detergent. Use brush to remove dirt and mud build up around the tyre. Allow to dry thoroughly before placing wheels back on the frame.
- If necessary lubricate wheel shaft with a small amount of lubricant before placing into the stroller.

NOTE: Ensure the stroller is cleaned thoroughly after using it on the beach as sand and salt can damage stroller mechanism, wheel assembly, causing premature wear and corrosion.

Our product warranty does not cover any rust to the rivets or screws, if you are caught in the rain or at the beach always thoroughly dry the frame to avoid any rust damage.

CARE AND MAINTENANCE

Just like servicing your car or bicycle, prams and strollers also need regular maintenance checks. These checks can improve product performance, extend the life of your stroller and help to provide you and your children a safe and smooth journey.



We recommend servicing your stroller every 6 months and completing an inspection once a month. To prolong the life of your stroller, a regular maintenance should be performed.

5 STEP CHECK LIST

- 1** INSPECT SAFETY DEVICES – tether strap, frame lock, harness, buckle and brakes and ensure all are in working order and free from dirt, sand and debris.
- 2** INSPECT - all connecting rivets and screws are secure.
- 3** MAKE SURE FOLDING JOINTS – are free of dirt dust and debris by cleaning with a damp cloth, allow to dry and lightly spray with a dry silicon lubricant. Please carefully read the lubricant instructions prior to use.
- 4** REMOVE WHEELS – and wipe clean with a damp cloth to remove any dirt, sand or debris. Allow to dry and lightly spray the wheel pivot pin with a dry silicon lubricant to keep the wheels moving smoothly. Please carefully read the lubricant instructions prior to use.
- 5** ENSURE WHEN FOLDING AND STORING – to wipe down your stroller frame and allow to dry before storing in a dry place without direct sunlight.

CARE AND MAINTENANCE



DID YOU KNOW:

Registering your product purchase online simplifies proof of purchase in event of a warranty claim.

Scan this QR code on your phone to go straight to our website to fill out the registration form.



MAKING A WARRANTY CLAIM

Your rights under a Britax company warranty are separate from and independent of your rights under the statutory consumer guarantees. What you need to do to enforce your rights under a statutory consumer guarantee is set out in the **Australian Competition and Consumer Commission's Consumer Guarantees - A Guide for Consumers**.

To make a claim under a Britax company warranty, please contact our customer service team on:

1300 303 330 - Australia, 0508 688 822 - New Zealand

or alternatively by email at:

Australia - au-support@britax.com

New Zealand - nzoffice@britax.com

You will be required to :

1. Return the product to the place of purchase or to a designated repair agent;
2. Present your receipt as proof of purchase;
3. Identify the defect in the product; and
4. Present the product to Britax for inspection on request.

Britax will advise you whether the product is covered by the Britax company warranty. Britax's decision of whether a product is covered by a Britax company warranty is final. Britax will act reasonably when determining whether a product is covered by a company warranty.

CARE AND MAINTENANCE

AUSTRALIAN CONSUMER LAW

On all of our goods, you have the benefit of a statutory consumer guarantee. In summary, goods are guaranteed to be of “acceptable quality” (fit for purpose), goods are guaranteed to match any sample against which they are sold. These consumer guarantees are provided for by the Australian Consumer Law and, if you believe anyone of these guarantees is not satisfied by a Britax product, you have rights under the Australian Consumer law to enforce that guarantee.

Your rights under the statutory consumer guarantees are set out in the Australian Competition and Consumer Commission’s Consumer Guarantees - A Guide for Consumers.

In addition to the statutory consumer guarantees, BRITAX offers its own company warranty on all of its products. You therefore have the option of seeking redress for defective or faulty product either under the BRITAX company warranty or the statutory guarantees.

After the Britax company warranty expires, you still have your rights under the statutory consumer guarantees.

Depending on the product involved, the following Britax company warranty applies:

CARE AND MAINTENANCE

STEELCRAFT WARRANTY

Steelcraft products are covered by this company warranty against faulty materials and workmanship (normal wear and tear excluded) that affects the normal operation of your Steelcraft product. In the unlikely event that you find that your Steelcraft product does not satisfy this warranty, Britax will (at its option) repair or replace that product within a reasonable period of you making a claim in accordance with this policy.

In the event that a replacement product is no longer available, Britax reserves the right to provide what it considers to be a suitable alternative.

For this company warranty to apply, you must make an application before the expiration of the following periods from date of purchase*:

- Steelcraft offers an extended 2 year warranty on select strollers. To receive the extended warranty register your Steelcraft family stroller online within 3 months of purchase and provide a valid receipt from an authorized retailer. For the extended warranty to apply, you must have registered online within 3 months of purchase and make an application before the expiration of the following periods from the date of purchase.**
- 2 years on Steelcraft strollers and Steelcraft stroller accessories.*
- 2 years + 2 years extended warranty on select Steelcraft strollers and Steelcraft accessories.**

This company warranty does not apply to second hand or after market goods or goods used for rental, hire or other commercial purposes or to any claim where the damage or fault is, in whole or part, the result of incorrect installation, mistreatment, intentional damage, any use other than use in normal conditions or any use otherwise than in accordance with the Instruction Manual for that product.

Please read your instruction manual carefully before using any of our products.

INTERNATIONAL WARRANTY

Britax products are available through a network of retailers in Australia and New Zealand. If you are an International customer we do not offer a warranty service outside of these regions.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE

NOTES

NOTES

NOTES

SteelcraftTM

BRITAX CHILDCARE PTY. LTD A Britax International company.
(Incorporated in Victoria) A.B.N. 55 006 773 600
Level 4, 650 Lorimer Street, Port Melbourne, Victoria 3207, Australia
Phone: (03) 9288 7288 Fax: (03) 9311 5798

CUSTOMER SERVICE
1300 303 330 - Australia 0508 688 822 - New Zealand

Due to our continuing program of development, Britax reserves the right to alter the specifications, colour or design without any further notice.

The Steelcraft trademark is the property of Britax Childcare Pty.Ltd - Australia.

The Britax trademark is the property of Britax Childcare Holdings Limited - UK.

Visit the Britax website at: www.britax.com.au or email us at au-custserv@britax.com

Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

This product is designed to comply with Australian and New Zealand standard AS/NZS2088:2013 "Prms and Strollers - Safety Requirements."

©2020 Copyright Britax Childcare Pty. Ltd. Australia